User's Manual

Model 701962 All-Purpose Instrument Cart

The Model 701962 All-Purpose Instrument Cart can support large-scale measuring instruments. Each shelf accepts a maximum load of fifty kilograms, and a drawer is provided underneath the top shelf for storing measuring instrument parts and accessories. The cart features a slide-out table that can be used for a keyboard or other items.

1st Edition : April 2004 (YK)

All Rights Reserved, Copyright © 2004, Yokogawa Electric Corporation



IM 701962-01E 1st Edition

Safety Precautions

For safe use of this product, please take the following precautions.

Keep the Cart Level

As much as possible, use the cart only on horizontal surfaces. When moving a loaded cart over an inclined or bumpy surface, ensure that the cart does not tip over and that the instrument does not fall off the cart.

Double-Check Safety during Non-Specified Use

Loading an instrument other than the ones recommended onto the cart, or changing the instrument's position can alter the balance of the cart. Before use, make sure the cart does not tip over easily.


Ground the Instrument

The cart is not grounded. Ground the instrument loaded on the cart using a 3-wire power supply cord.

• Do Not Exceed the Maximum Load

Ensure that the weight of the instruments loaded on each shelf does not exceed the specification.


Outline

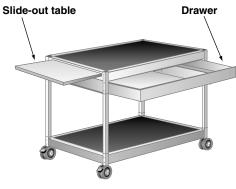

Component Parts

 Upper shelf (with drawer and slide-out table)







Casters (2 with stoppers)









• Instrument Size Restrictions

Each shelf can support instruments weighing up to fifty kilograms.

Cart Specifications


Item	
Outer (maximum) dimensions	467 mm (W) × 693 mm (D) × 713 mm (H)
Upper/lower shelf dimensions	457 mm (W) × 683 mm (D)
Drawer	610 mm (W) × 380 mm (D)
Slide-out table	380 mm (W) × 440 mm (D)
Casters	100 mm diameter wheels (front casters with stoppers)
Maximum load (per shelf)	50 kg
Cart weight	23.5 kg

Assembly

Refer to the assembly diagrams when assembling the cart.

1. Assembling the Supports and Lower Shelf

Loosely attach a support to each corner of the lower shelf with a screw.

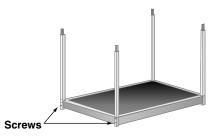

2. Assembling the Upper Shelf

Place the upper shelf on the open ends of the four supports, then loosely attach the supports to each corner of the upper shelf with screws.



3. Tightening the Screws

While adjusting any misalignments, tighten all screws securely.

4. Attaching the Casters

Screw the casters into the caster holes located at the four corners of the bottom shelf. (The two front casters have a stopper).

