
Please make the following alterations to the *Communication Interface User's Manual*, IM 701310-17E(CD-ROM).

■ **Page 6-2** **“Writing/Reading from Registers”**

The *ESE command is used to set the bits in the standard event enable register to 1's or 0's.

The *ESE? command is used to query whether the bits in the standard event enable register are 1's or 0's. For details regarding these commands, see chapter 5.