

1. Checking the Parts in the Kit

Confirm that all parts listed below are included in the kit. If any part is shorted or any abnormality is found in the appearance of the parts, contact our sales representative where you bought the instrument.

List of parts included in the kit.

Right side bracket (1 pc), Left side bracket (1 pc), Upper bracket (1 pc), binding head screws (M5, 10 mm long, 4 pcs), binding head screws (M3, 5 mm long, 2 pcs), sealing labels (6 pcs)

2. Removing the Parts from the Instrument (per each set)

Removing the Handle (applies only to models with handles)

Note : There is a chance that the handle cannot be reattached once it has been removed from the instrument.


1. Remove the two covers (a) from the handle by firmly inserting a screwdriver in the direction of the two arrows marked A. If the covers stick to the handle, use another tool to widen the opening of each cover horizontally and then retry taking off the cover.
2. To remove the handle, unscrew the two screws (b) which fix the handle to the instrument.

Removing the Feet on the Bottom

1. When a black pin (i) is included in each foot (c), pry out the four pins with a thin screwdriver as shown in the figure below.
2. Press each foot (c) in the direction of arrow B, that is, toward the rear of the instrument, to slide off the four feet (c).
3. Press each foot (c) in the direction of arrow C, that is, downward, to remove the four feet (c).

Removing the Sealing Labels

1. Remove the four sealing labels (e).

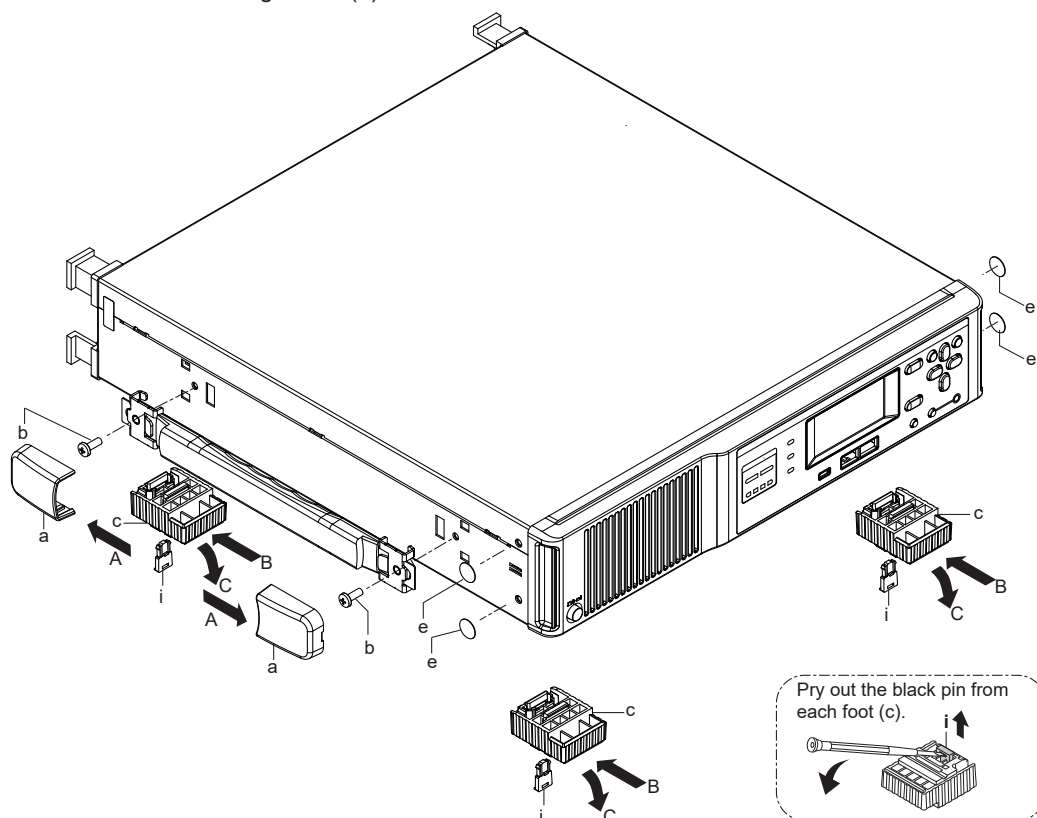


3. Joining the Instruments with Mounting Hardware

1. Apply cover stickers (1) at the following locations.
 - Measuring instrument handle attachment holes (2 locations) (applies only to models with handles)
 - Feet attachment holes (4 locations)
2. Attach the left rack frame (2) to the left side of the instrument with M5 × 10 mm binding screws (3) (two locations).¹
3. Place the upper bracket (4) on the top front of the instrument.
4. Attach the upper bracket (4) to the left rack frame (2) with M3 × 5 mm binding screws (5).²
5. Attach the right rack frame (6) to the right side of the instrument with M5 × 10 mm binding screws (3) (two locations).¹
6. Attach the right rack frame (6) and upper bracket (4) with M3 × 5 mm binding screws (5).²

1 Reference torque value: 2.8 to 2.9 N·m

2 Reference torque value: 0.6 to 0.7 N·m

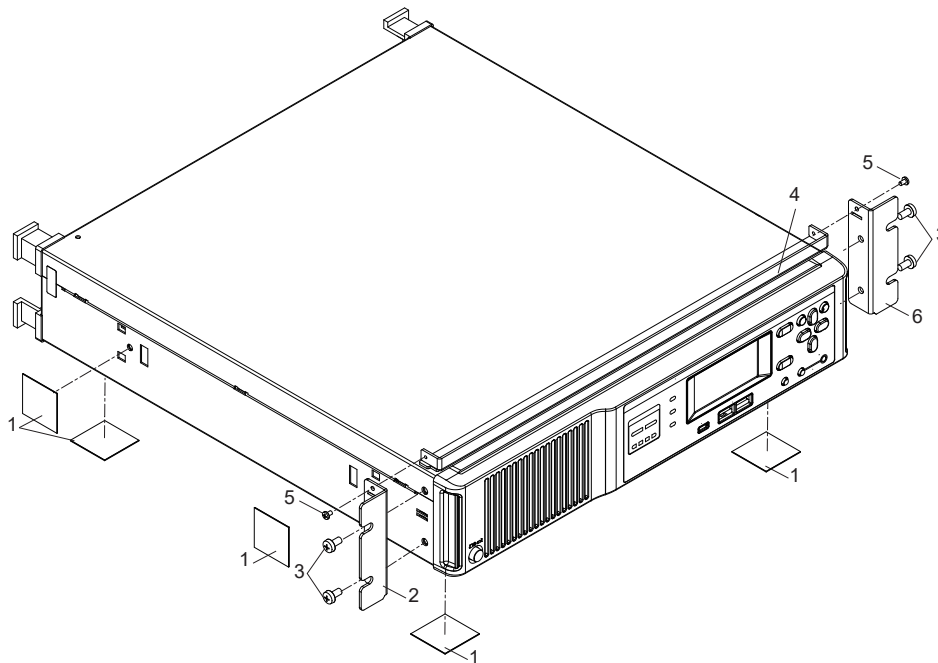

4. Mounting the Joined Instruments to the Rack

Dimensions after mounting to the rack are illustrated below.

- Note:
1. Be sure to place support beneath the rack where the support will not cover the vent openings on the bottom of the instruments.
 2. To ensure ventilation, provide clearance as instructed in the user's manual for each instrument.

