

After setting up the WE7000 control software, you *must* install the WE7000 control software upgrade kit.

Prior to Installation


Have the CD-ROM containing the WE7000 control software upgrade kit installation disk for your measuring station ready. Before installing the upgrade kit, close all currently open programs.

Installation


1. Place the WE7000 control software upgrade kit installation disk into the CD-ROM drive.

Note


If a WE control software upgrade kit is installed that is *older* than the one on the CD-ROM, the message below appears. Click **Yes**.

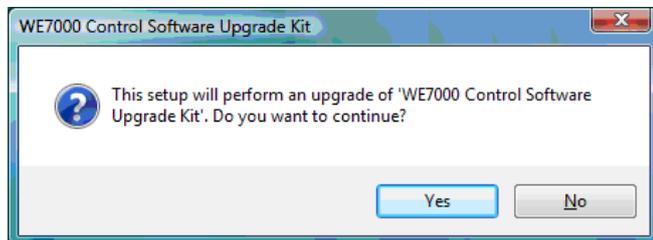

If a WE control software upgrade kit is installed that is *newer* than the one on the CD-ROM, the message below appears. If downloading the kit: First uninstall both the WE control software upgrade kit and the WE control software, then reinstall.

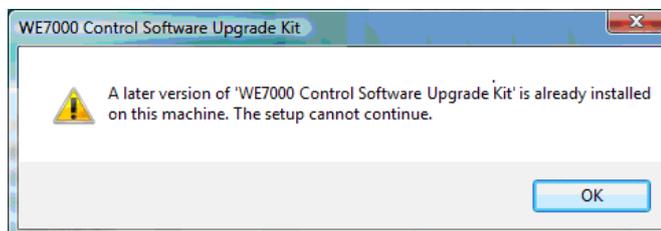


2. The installation screen appears with the dialog box below. Click **Next**.

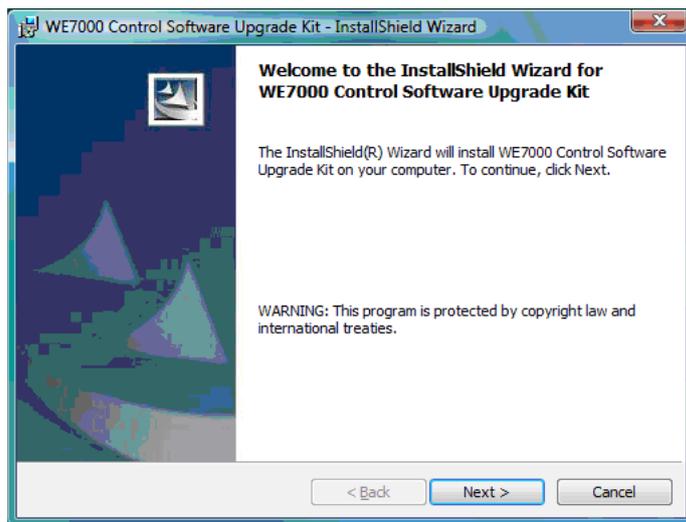


Note


If you attempt to install the upgrade kit onto a PC in which the WE control software itself is not installed, the following message appears. After installing the WE control software, reinstall the WE control software upgrade kit.

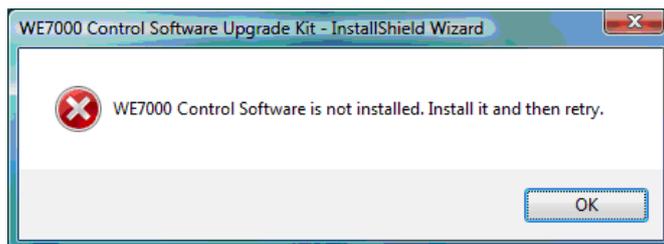

-
3. A dialog box appears showing the installation destination folder. The installation destination folder is the folder in which the WE7000 control software is installed, and cannot be changed. Click **Next**.

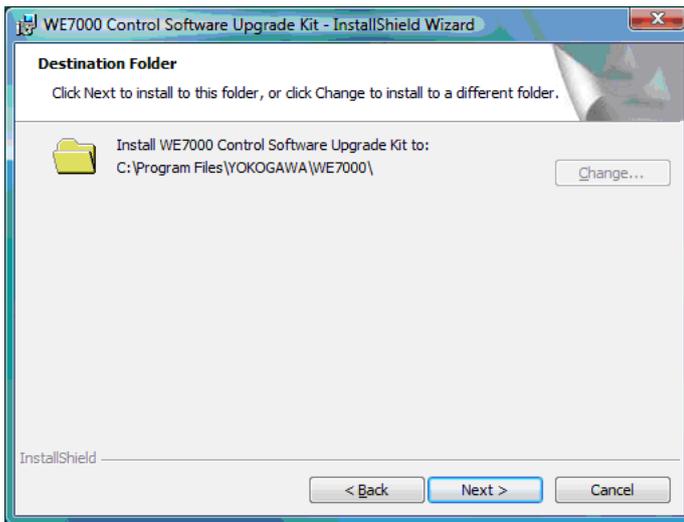


4. The following dialog box appears. Click **Install**.

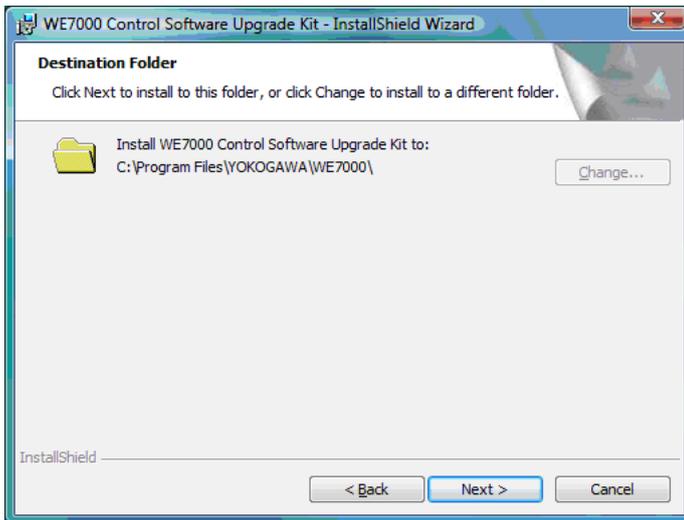

Note

After clicking Install, if the message, "An unidentified program wants access to your computer" appears in the User Account Control dialog box, click **Allow**.

5. If installation completes successfully, the following dialog box is displayed. Click **Finish**.

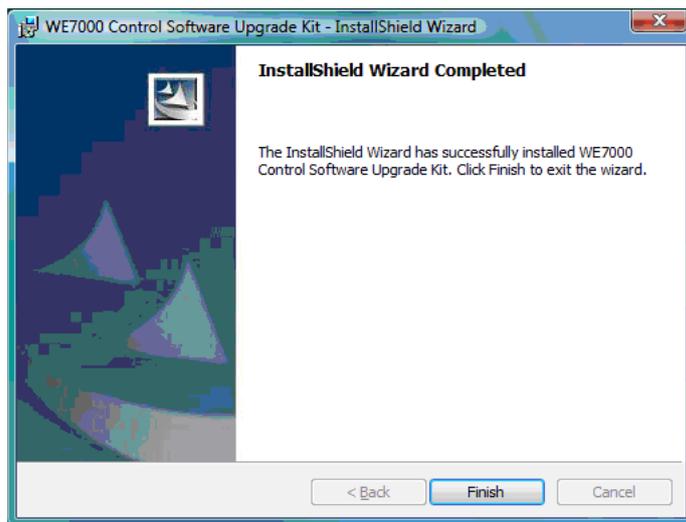

Note

When uninstalling the WE7000 control software, first uninstall the WE7000 control software upgrade kit.
