

Thank you for purchasing the AQ1300 10G Ethernet Multi Field Tester. This manual explains how to install the AQ1300/AQ1301 setup software. For information on how to use the software after it is installed, see the *AQ1300/AQ1301 Setup Software User's Manual*, IM AQ1300-61EN that is included on the CD-R.

3rd Edition: September 2015 (YMI)
All Rights Reserved, Copyright ©2009, Yokogawa Electric Corporation
All Rights Reserved, Copyright ©2014, Yokogawa Meters & Instruments Corporation



IM AQ1300-62EN
3rd Edition

Trademarks

- Microsoft, Windows, Windows XP, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe, Acrobat, and PostScript are trademarks of Adobe Systems Incorporated.
- In this manual, the TM and ® symbols do not accompany their respective registered trademark or trademark names.
- Other company and product names are registered trademarks or trademarks of their respective holders.

Revisions

- November 2009 1st Edition
- August 2014 2nd Edition
- September 2015 3rd Edition

WARNING

Never play this CD-R on an audio CD player. Doing so may cause loss of hearing or speaker damage due to the large sounds that may be generated.

System Requirements

PC

- CPU: 1 GHz or higher
- Memory: 256 MB or more
- HDD: 500 MB free space or more
- CD-ROM drive

Operating System

Windows XP or Windows Vista

Communication Ports


- Ethernet
An Ethernet port that supports 10BASE-T or 100BASE-TX
- USB
A USB port that supports USB Revision 1.1 or higher

Installation


1. Turn on the PC and start Windows. Log on as an administrator.
2. Insert the AQ1300 MFT 10GbE application software CD-R into the PC's CD-ROM drive. Select the CD-R drive from "Computer" and display the file list. Double-click "setup.exe" in "SetupSoftware" folder, and setup begins.
When install the Control Window, double-click "setup.exe" in "ControlWindow" folder




3. Select the setup language, and click **OK**. The InstallShield Wizard appears.

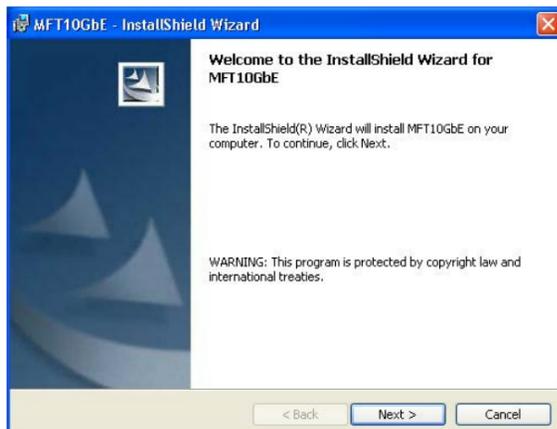


4. Click **Next** to display the License Agreement screen.

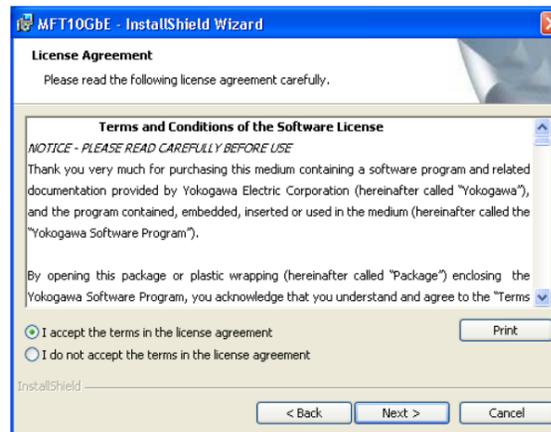


5. Read the license agreement carefully. If you accept the terms, click "I accept the terms in the license agreement," and click **Next** to display the Customer Information screen. If you do not accept the terms, click "I do not accept the terms in the license agreement," and click **Next** to cancel the installation of the software.

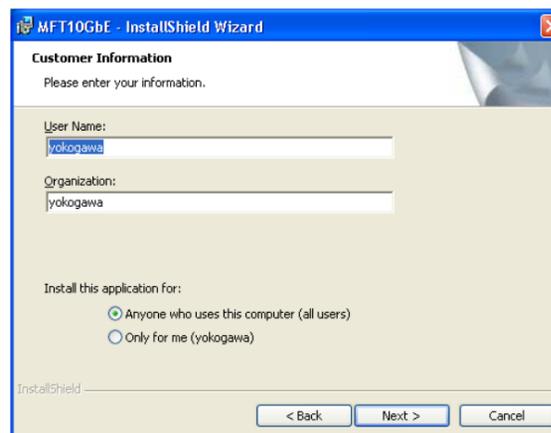

6. Enter your information, and click **Next** to display the Destination Folder screen.

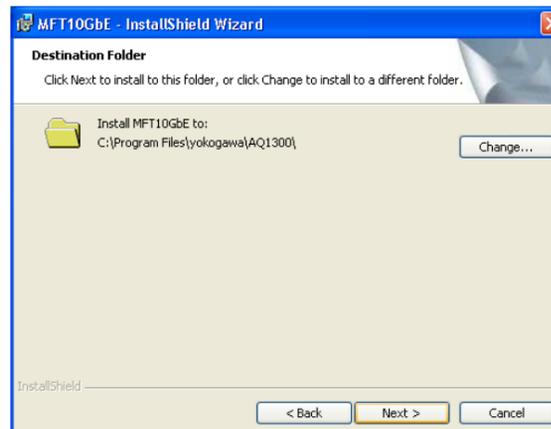

7. Select the installation folder, and click **Next** to display the Ready to Install the Program screen.

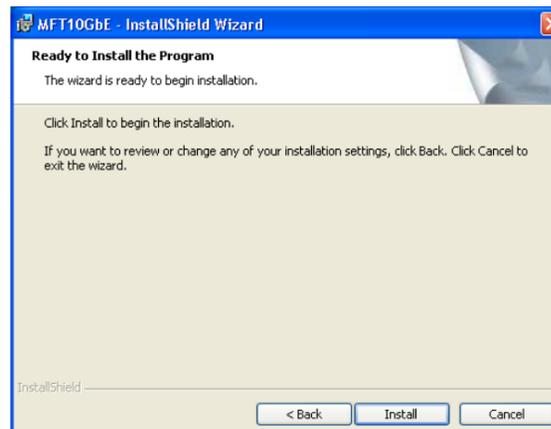

8. Click **Install** to begin installing the program. When the installation finishes successfully, the InstallShield Wizard Completed screen appears.



9. Click **Finish** to complete the installation. AQ1300/AQ1301 SetupSoftware is added to the Windows Start menu in the following location: All Programs > Yokogawa > AQ1300. A shortcut is also added to the desktop.

Uninstallation

1. Click **Start**, **All Programs**, **Yokogawa**, **AQ1300**, and then click **Uninstall**.
2. Follow the instructions that appear on the screen to uninstall the program.