

---

**User's  
Manual**

**Voltage Fluctuation/Flicker  
Measurement Software  
(IEC 61000-3-11 Compliant)**

---

# Product Registration

Thank you for purchasing YOKOGAWA products.

YOKOGAWA provides registered users with a variety of information and services.  
Please allow us to serve you best by completing the product registration form  
accessible from our website.

**<http://tmi.yokogawa.com/>**

---

Thank you for purchasing the Harmonic/Flicker Measurement Software (Model 761922). This user's manual describes the handling precautions, functions, and operating procedures of the Voltage Fluctuation/Flicker Measurement Software within the Harmonic/Flicker Measurement Software. To ensure correct use, please read this manual thoroughly before beginning operation.

Keep this manual for quick reference in the event a question arises.

For information about the handling precautions, functions, and operating procedures of WT3000 or WT3000E Precision Power Analyzer and the Harmonic Measurement Software as well as the handling and operating procedures for Windows, see the manuals for those products.

## Notes

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument's performance and functions. The figures given in this manual may differ from those that actually appear on your screen.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA dealer.
- Copying or reproducing all or any part of the contents of this manual without YOKOGAWA's permission is strictly prohibited.
- The TCP/IP software of this product and the document concerning the TCP/IP software have been developed/created by YOKOGAWA based on the BSD Networking Software, Release 1 that has been licensed from University of California.

## Trademarks

- Microsoft, Windows, Windows Vista, Windows 7, Windows 8, Windows 8.1, Windows 10, and Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated.
- Other company and product names are registered trademarks or trademarks of their respective holders.
- For purposes of this manual, the ® and TM symbols do not accompany their respective registered trademark names or trademark names.

## Revisions

1st Edition:	January 2008
2nd Edition:	October 2010
3rd Edition:	April 2012
4th Edition:	December 2013
5th Edition:	June 2015
6th Edition:	July 2016
7th Edition:	October 2017

---

# Notes about Using This Software

## **Storing the CD**

Keep the original CD for this software in a safe place. To use this software, install it on a PC hard disk, and run it from the PC.

## **Using the Software**

- Do not operate the WT while using this software. Doing so may cause errors.
- Disable the PC's standby mode. When a PC goes into standby mode, it may stop this software's operations.
- This software can only control one WT at a time. Also, it cannot connect multiple PCs to the same WT.
- If a connection error disrupts the connection between the WT and the PC, turn the WT OFF and then ON again.

# How to Use This Manual

## Structure of the Manual

This user's manual consists of the following sections.

Chapter	Title	Description
1	<b>Product Overview</b>	Explains the software's features and the details of its applicable standards.
2	<b>Preparation before Use</b>	Explains how to connect the WT to a PC and how to install this software.
3	<b>Starting and Using the Software</b>	Explains how to start the software and describes the main window.
4.	<b>Using the Start and Exit Pages</b>	Explains how to select a test schedule menu and how to close the software.
5	<b>Using the Open Page to Load Measured Data and Setting Information</b>	Explains how to load setting information and measured data.
6	<b>Using the Connection Page to Establish a Connection between the PC and a WT</b>	Explains how to establish a connection between the WT and a PC.
7	<b>Using the Setting Page to Configure Measurement and Judgment Conditions</b>	Explains how to set general test conditions.
8	<b>Using the Measure Page to Make Measurementsa</b>	Explains how to execute a compliance test.
9	<b>Using the Analysis Page to Display Judgment Results and Measured Data</b>	Explains how to display judgment results and measured data.
10	<b>Using the Print Page to Print Reports</b>	Explains how to print a report.
11	<b>Using the Save Page to Save Setting Information and Measured Data</b>	Explains how to save setting information and measured data.
12	<b>Other Features</b>	Explains how to arrange windows, use the help function, and display the software's version information.
13	<b>Troubleshooting</b>	Lists various error messages.
14	<b>Specifications</b>	Lists the specifications of the software.
<b>Index</b>		

---

## Software Versions That This Manual Applies To

This manual applies to IEC 61000-3-11-compliant WT3000 Voltage Fluctuation/Flicker Measurement Software versions 6.52 or later. If you are using an older version, you will not be able to use all of the features described in this manual. The software version is displayed in the upper right of this software's window.

# Terms and Conditions of the Software License

Yokogawa Electric Corporation and Yokogawa Test & Measurement Corporation, a Japanese corporation (hereinafter called "Yokogawa"), grants permission to use this Yokogawa Software Program (hereinafter called the "Licensed Software") to the Licensee on the conditions that the Licensee agrees to the terms and conditions stipulated in Article 1 hereof.

You, as the Licensee (hereinafter called "Licensee"), shall agree to the following terms and conditions for the software license (hereinafter called the "Agreement") based on the use intended for the Licensed Software.

Please note that Yokogawa grants the Licensee permission to use the Licensed Software under the terms and conditions herein and in no event shall Yokogawa intend to sell or transfer the Licensed Software to the Licensee.

Licensed Software Name: Harmonic/Flicker Measurement Software (IEC 61000-3-11 Compliant)

Number of License: 1

## Article 1 (Scope Covered by these Terms and Conditions)

1.1 The terms and conditions stipulated herein shall be applied to any Licensee who purchases the Licensed Software on the condition that the Licensee consents to agree to the terms and conditions stipulated herein.

1.2 The "Licensed Software" herein shall mean and include all applicable programs and documentation, without limitation, all proprietary technology, algorithms, and know-how such as a factor, invariant or process contained therein.

## Article 2 (Grant of License)

2.1 Yokogawa grants the Licensee, for the purpose of single use, non-exclusive and non-transferable license of the Licensed Software with the license fee separately agreed upon by both parties.

2.2 The Licensee is, unless otherwise agreed in writing by Yokogawa, not entitled to copy, change, sell, distribute, transfer, or sublicense the Licensed Software.

2.3 The Licensed Software shall not be copied in whole or in part except for keeping one (1) copy for back-up purposes. The Licensee shall secure or supervise the copy of the Licensed Software by the Licensee itself with great, strict, and due care.

2.4 In no event shall the Licensee dump, reverse assemble, reverse compile, or reverse engineer the Licensed Software so that the Licensee may translate the Licensed Software into other programs or change it into a man-readable form from the source code of the Licensed Software. Unless otherwise separately agreed by Yokogawa, Yokogawa shall not provide the Licensee the source code for the Licensed Software.

2.5 The Licensed Software and its related documentation shall be the proprietary property or trade secret of Yokogawa or a third party which grants Yokogawa the rights. In no event shall the Licensee be transferred, leased, sublicensed, or assigned any rights relating to the Licensed Software.

2.6 Yokogawa may use or add copy protection in or onto the Licensed Software. In no event shall the Licensee remove or attempt to remove such copy protection.

2.7 The Licensed Software may include a software program licensed for re-use by a third party (hereinafter called "Third Party Software", which may include any software program from affiliates of Yokogawa made or coded by themselves.) In the case that Yokogawa is granted permission to sublicense to third parties by any licensors (sub-licensor) of the Third Party Software pursuant to different terms and conditions than those stipulated in this Agreement, the Licensee shall observe such terms and conditions of which Yokogawa notifies the Licensee in writing separately.

2.8 In no event shall the Licensee modify, remove or delete a copyright notice of Yokogawa and its licensor contained in the Licensed Software, including any copy thereof.

## Article 3 (Restriction of Specific Use)

3.1 The Licensed Software shall not be intended specifically to be designed, developed, constructed, manufactured, distributed or maintained for the purpose of the following events:

- a) Operation of any aviation, vessel, or support of those operations from the ground;;
- b) Operation of nuclear products and/or facilities;;
- c) Operation of nuclear weapons and/or chemical weapons and/or biological weapons; or
- d) Operation of medical instrumentation directly utilized for humankind or the human body.

3.2 Even if the Licensee uses the Licensed Software for the purposes in the preceding Paragraph 3.1, Yokogawa has no liability to or responsibility for any demand or damage arising out of the use or operations of the Licensed Software, and the Licensee agrees, on its own responsibility, to solve and settle the claims and damages and to defend, indemnify or hold Yokogawa totally harmless, from or against any liabilities, losses, damages and expenses (including fees for recalling the Products and reasonable attorney's fees and court costs), or claims arising out of and related to the above-said claims and damages.

## Article 4 (Warranty)

4.1 The Licensee shall agree that the Licensed Software shall be provided to the Licensee on an "as is" basis when delivered. If defect(s), such as damage to the medium of the Licensed Software, attributable to Yokogawa is found, Yokogawa agrees to replace, free of charge, any Licensed Software on condition that the defective Licensed Software shall be returned to Yokogawa's specified authorized service facility within seven (7) days after opening the Package at the Licensee's expense. As the Licensed Software is provided to the Licensee on an "as is" basis when delivered, in no event shall Yokogawa warrant that any information on or in the Licensed Software, including without limitation, data on computer programs and program listings, be completely accurate, correct, reliable, or the most updated.

4.2 Notwithstanding the preceding Paragraph 4.1, when third party software is included in the Licensed Software, the warranty period and terms and conditions that apply shall be those established by the provider of the third party software.

4.3 When Yokogawa decides in its own judgement that it is necessary, Yokogawa may from time to time provide the Licensee with Revision upgrades and Version upgrades separately specified by Yokogawa (hereinafter called "Updates").

4.4 Notwithstanding the preceding Paragraph 4.3, in no event shall Yokogawa provide Updates where the Licensee or any third party conducted renovation or improvement of the Licensed Software.

4.5 THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF QUALITY AND PERFORMANCE, WRITTEN, ORAL, OR IMPLIED, AND ALL OTHER WARRANTIES INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED BY YOKOGAWA AND ALL THIRD PARTIES LICENSING THIRD PARTY SOFTWARE TO YOKOGAWA.

4.6 Correction of nonconformity in the manner and for the period of time provided above shall be the Licensee's sole and exclusive remedy for any failure of Yokogawa to comply with its obligations and shall constitute fulfillment of all liabilities of Yokogawa and any third party licensing the Third Party Software to Yokogawa (including any liability for direct, indirect, special, incidental or consequential damages) whether in warranty, contract, tort (including negligence but excluding willful conduct or gross negligence by Yokogawa) or otherwise with respect to or arising out of the use of the Licensed Software.

## Article 5 (Infringement)

5.1 If and when any third party should demand injunction, initiate a law suit, or demand compensation for damages against the Licensee under patent right (including utility model right, design patent, and trade mark), copy right, and any other rights relating to any of the Licensed Software, the Licensee shall notify Yokogawa in writing to that effect without delay.

5.2 In the case of the preceding Paragraph 5.1, the Licensee shall assign to Yokogawa all of the rights to defend the Licensee and to negotiate with the claiming party. Furthermore, the Licensee shall provide Yokogawa with necessary information or any other assistance for Yokogawa's defense and negotiation. If and when such a claim should be attributable to Yokogawa, subject to the written notice to Yokogawa stated in the preceding Paragraph 5.1, Yokogawa shall defend the Licensee and negotiate with the claiming party at Yokogawa's cost and expense and be responsible for the final settlement or judgment granted to the claiming party in the preceding Paragraph 5.1.

5.3 When any assertion or allegation of the infringement of the third party's rights defined in Paragraph 5.1 is made, or when at Yokogawa's judgment there is possibility of such assertion or allegation, Yokogawa will, at its own discretion, take any of the following countermeasures at Yokogawa's cost and expense.

- a) To acquire the necessary right from a third party which has lawful ownership of the right so that the Licensee will be able to continue to use the Licensed Software;
- b) To replace the Licensed Software with an alternative one which avoids the infringement; or
- c) To remodel the Licensed Software so that the Licensed Software can avoid the infringement of such third party's right.

5.4 If and when Yokogawa fails to take either of the countermeasures as set forth in the preceding subparagraphs of Paragraph 5.3, Yokogawa shall indemnify the Licensee only by paying back the price amount of the Licensed Software which Yokogawa has received from the Licensee. THE FOREGOING PARAGRAPHS STATE THE ENTIRE LIABILITY OF YOKOGAWA AND ANY THIRD PARTY LICENSING THIRD PARTY SOFTWARE TO YOKOGAWA WITH RESPECT TO INFRINGEMENT OF THE INTELLECTUAL PROPERTY RIGHTS INCLUDING BUT NOT LIMITED TO, PATENT AND COPYRIGHT.

## Terms and Conditions of the Software License

---

### Article 6 (Liabilities)

6.1 If and when the Licensee should incur any damage relating to or arising out of the Licensed Software or service that Yokogawa has provided to the Licensee under the conditions herein due to a reason attributable to Yokogawa, Yokogawa shall take actions in accordance with this Agreement. However, in no event shall Yokogawa be liable or responsible for any special, incidental, consequential and/or indirect damage, whether in contract, warranty, tort, negligence, strict liability, or otherwise, including, without limitation, loss of operational profit or revenue, loss of use of the Licensed Software, or any associated products or equipment, cost of capital, loss or cost of interruption of the Licensee's business, substitute equipment, facilities or services, downtime costs, delays, and loss of business information, or claims of customers of Licensee or other third parties for such or other damages. Even if Yokogawa is liable or responsible for the damages attributable to Yokogawa and to the extent of this Article 6, Yokogawa's liability for the Licensee's damage shall not exceed the price amount of the Licensed Software or service fee which Yokogawa has received. Please note that Yokogawa shall be released or discharged from part or all of the liability under this Agreement if the Licensee modifies, remodels, combines with other software or products, or causes any deviation from the basic specifications or functional specifications, without Yokogawa's prior written consent.

6.2 All causes of action against Yokogawa arising out of or relating to this Agreement or the performance or breach hereof shall expire unless Yokogawa is notified of the claim within one (1) year of its occurrence.

6.3 In no event, regardless of cause, shall Yokogawa assume responsibility for or be liable for penalties or penalty clauses in any contracts between the Licensee and its customers.

### Article 7 (Limit of Export)

Unless otherwise agreed by Yokogawa, the Licensee shall not directly or indirectly export or transfer the Licensed Software to any countries other than those where Yokogawa permits export in advance.

### Article 8 (Term)

This Agreement shall become effective on the date when the Licensee receives the Licensed Software and continues in effect unless or until terminated as provided herein, or the Licensee ceases using the Licensed Software by itself or with Yokogawa's thirty (30) days prior written notice to the Licensee.

### Article 9 (Injunction for Use)

During the term of this Agreement, Yokogawa may, at its own discretion, demand injunction against the Licensee in case that Yokogawa deems that the Licensed Software is used improperly or under severer environments other than those where Yokogawa has first approved, or any other condition which Yokogawa may not permit.

### Article 10 (Termination)

Yokogawa, at its sole discretion, may terminate this Agreement without any notice or reminder to the Licensee if the Licensee violates or fails to perform this Agreement. However, Articles 5, 6, and 11 shall survive even after the termination.

### Article 11 (Jurisdiction)

Any dispute, controversies, or differences between the parties hereto as to interpretation or execution of this Agreement shall be resolved amicably through negotiation between the parties upon the basis of mutual trust. Should the parties fail to agree within ninety (90) days after notice from one of the parties to the other, both parties hereby irrevocably submit to the exclusive jurisdiction of the Tokyo District Court (main office) in Japan for settlement of the dispute.

### Article 12 (Governing Law)

This Agreement shall be governed by and construed in accordance with the laws of Japan. The Licensee expressly agrees to waive absolutely and irrevocably and to the fullest extent permissible under applicable law any rights against the laws of Japan which it may have pursuant to the Licensee's local law.

### Article 13 (Severability)

In the event that any provision hereof is declared or found to be illegal by any court or tribunal of competent jurisdiction, such provision shall be null and void with respect to the jurisdiction of that court or tribunal and all the remaining provisions hereof shall remain in full force and effect.



# Contents

Notes about Using This Software .....	ii
How to Use This Manual .....	iii
Software Versions That This Manual Applies To .....	iv
Terms and Conditions of the Software License .....	v
<b>Chapter 1 Product Overview</b>	
1.1 Explanation of Functions .....	1-1
1.2 PC System Requirements .....	1-7
1.3 Applicable Standards .....	1-8
1.4 Flow of Operation .....	1-12
1.5 Terminology Related to Flicker .....	1-14
<b>Chapter 2 Preparation before Use</b>	
2.1 Connecting the WT3000 and the PC .....	2-1
2.2 Setting the GP-IB Control .....	2-3
2.3 Setting the Ethernet Control .....	2-5
2.4 Installing the Software .....	2-7
<b>Chapter 3 Starting and Using the Software</b>	
3.1 Starting the Software .....	3-1
3.2 Basic Operations .....	3-3
<b>Chapter 4 Using the Start and Exit Pages</b>	
4.1 Selecting a Test Schedule Menu .....	4-1
4.2 Closing the Software .....	4-6
<b>Chapter 5 Using the Open Page to Load Measured Data and Setting Information</b>	
5.1 Loading Setting Information and Measured Data .....	5-1
<b>Chapter 6 Using the Connection Page to Establish a Connection between the PC and a WT</b>	
6.1 Establishing a New Connection Between the PC and a WT .....	6-1
6.2 Using the Connection Settings from a Loaded File .....	6-5
6.3 Using the Same Connection Settings as Before .....	6-6
6.4 Ending a Connection by Switching to Offline Mode .....	6-7
<b>Chapter 7 Using the Setting Page to Configure Measurement and Judgment Conditions</b>	
7.1 Setting General Test Conditions .....	7-1
7.2 Setting the WT3000 Measurement Conditions .....	7-4
7.3 Setting the WT3000 Judgment Conditions .....	7-8
7.4 Setting the Optional Conditions .....	7-13
<b>Chapter 8 Using the Measure Page to Make Measurements</b>	
8.1 Executing the Normal Voltage Fluctuation and Flicker Measurement .....	8-1
8.2 Executing the Measurement of dmax Caused by Manual Switching .....	8-12

**Chapter 9 Using the Analysis Page to Display Judgment Results and Measured Data**

9.1	Displaying Numerical Judgments .....	9-1
9.2	Displaying Trend Graphs .....	9-6
9.3	Displaying a CPF Graph.....	9-12

**Chapter 10 Using the Print Page to Print Reports**

10.1	Setting a Report's Title and Comments .....	10-1
10.2	Setting the Print Mode, Print Language and Output Form .....	10-4
10.3	Setting Print Details (Detail Setting) .....	10-5
10.4	Printing .....	10-6

**Chapter 11 Using the Save Page to Save Setting Information and Measured Data**

11.1	Saving Setting Information and Measured Data.....	11-1
11.2	Saving Measured Data as a Report in CSV Format.....	11-5

**Chapter 12 Other Features**

12.1	Cascading Windows .....	12-1
12.2	Tiling Windows .....	12-2
12.3	Using the Help Function .....	12-3
12.4	Viewing Version Information .....	12-5
12.5	Setting the Displayed Language .....	12-6
12.6	Editing the Displayed Language.....	12-7

**Chapter 13 Troubleshooting**

13.1	Troubleshooting.....	13-1
13.2	Error Messages .....	13-2

**Chapter 14 Specifications**

Specifications.....	14-1
---------------------	------

**Index**

# 1.1    Explanation of Functions

This software application (761922) measures the voltage fluctuation and flicker of electrical equipment according to the IEC Standard (see section 1.3 for an overview) and indicates/saves the results of judgments made according to the standard.

## Applicable Measurement Instruments

This software can be used with YOKOGAWA's measurement instruments listed below.

Product	Model
WT3000	760301, 760302, 760303, and 760304
WT3000E	WT3001E, WT3002E, WT3003E, and WT3004E

For information about the handling precautions, functions, and operating procedures of the WT3000 or WT3000E (hereinafter referred to as the WT), see the respective manuals.

This user's manual (IM761922-04E) describes the case when this software is used in combination with the WT3000.

## Applicable Standard

For the applicable standards, see section 1.3.

## Setting Up Test Schedule Menus

You can arrange the following steps as you like to create custom test schedule menus.



Start: Select and edit test schedule menus.



Open:            Load measured data and WT setting information files.



Connection:    Configure the connection between the PC and a WT.



Setting:            Set compatibility and measurement conditions.



Measure:            Measure voltage fluctuation and flicker.



Analysis:            Display measured results as bar and trend graphs.



Print: Print screen images and reports.



Save:                Save measured data and setting information files.



Exit:                Close the software.

## 1.1 Explanation of Functions

---

You can start this software and then operate it according to the order of one of the test schedule menus. By designing appropriate menus, you can make the testing process smoother. You can also avoid forgetting and skipping steps when you have to repeat the same process over and over again.

Here are more details about each step:

### Start



Use to select and edit test schedule menus. There are four preset standard test schedule menus available, in addition to custom test schedule menus that you can make yourself (located under the “User Setting” option button).

### Open



#### **Loading Measured Data Saved in the Past (Off-Line Mode)**

The voltage fluctuation and flicker measurement data saved in the past can be loaded on the software. The software application shows the numeric data and judgment, trend graph view, and CPF graph view.\* The software application can judge whether the measured data loaded offline conforms to the standard.

\* Valid only for normal voltage fluctuation and flicker measurement.

#### **Loading Setting Information**

You can load setting information files that contain information such as measurement conditions, judgment conditions, and report titles and comments (reports contain information such as judgment results and lists of measured data values).

### Connection



Use to connect the PC on which this software is installed to a WT through a GP-IB or Ethernet interface.

## Setting



### WT Measurement Conditions

Use to set WT measurement conditions such as the range to be measured and the line filter.

### WT Judgment Conditions

Use to set the IEC 61000-3-11 first edition voltage fluctuation and flicker measurement standards to be used for judgment.

### Edition Settings for IEC 61000-4-15

IEC 61000-4-15 specifies requirements for measurement instruments. You can set the IEC edition from the following. This setting affects the flicker measurement parameters of the WT.

Edition No. of the IEC 61000-4-15	Flicker Measurement Parameters of the WT3000			
	50Hz		60Hz	
	230V	120V	120V	230V
Edition 1.1	Yes	No	Yes	No
Edition 2.0	Yes	Yes	Yes	Yes

For more details, see chapter 14.

## Measure



### Measurement Modes

There are two voltage and flicker measurement modes.

- **Normal Voltage Fluctuation and Flicker Measurement**

In this mode, the software calculates all voltage and flicker values: dc, dmax, d(t), Pst, and Plt. It makes an overall judgment by comparing the calculated values with the set limits.

- **Measurement of dmax Caused By Manual Switching**

The software measures the maximum relative voltage change, dmax, when the EUT (equipment under test) is turned ON and OFF manually. After the EUT has been turned ON and OFF 24 times, the software makes a judgment by comparing the average dmax with the set limit.

### Measurement Items

- Rated voltage Un
- Voltage frequency Freq
- Relative steady-state voltage change dc
- Maximum relative voltage change dmax
- Period during which relative voltage change exceeds the threshold level d(t)
- Short-term flicker value Pst
- Long-term flicker value Plt
- Instantaneous flicker sensation IFS\*
- Cumulative probability function CPF

\* Displayed as PF on the trend graph

### Starting/Stopping Measurements

You can start the voltage fluctuation and flicker measurement on the WT from your PC when in On-Line mode. The measurement cannot be started when in Off-Line mode.

### During Normal Voltage Fluctuation and Flicker Measurement

If the measurement is started from your PC, the measured data of the normal voltage fluctuation and flicker measurement on the WT is retrieved and stored in your PC. When the measurement of an observation period is completed, the judgment result is displayed, and the measurement of the next observation period is started. When the specified count of measurements is completed, the measurement and data retrieval automatically stops. Then, the application displays the overall judgment result from the data measured during all observation periods and judgment results. You can also abort the measurement from the PC before the specified measurement count is reached.

### During the Measurement of $d_{max}$ Caused by Manual Switching

With this measurement method, you start the measurement from your PC, manually turn ON the EUT (Equipment under Test) switch, and turn OFF the switch before the measurement of an observation period (1 minute) is complete. The data of  $d_{max}$  caused by manual switching that the WT measures is retrieved and stored in your PC. When the measurement of an observation period is complete, the application enters the ready state. If you start the measurement again from your PC, the measurement of the next observation period is started. You can measure the selected observation period again if it is before the judgment. When 24 measurements are completed and you execute the judgment, the judgment result is displayed. You can also abort the measurement from the PC before the specified measurement count is reached. However, if you do, all the measured data and judgment results up to that point are discarded.

## Analysis



### Numeric Data and Judgment

The application can display the judgment result indicating whether the measured data of normal voltage fluctuation and flicker measurement or measurement of  $d_{max}$  caused by manual switching is within the specified limits as well as the measured data. The judgment can be displayed for each of the selected WT elements.

### Trend Graph View

The application can display the trend graph of the normal voltage fluctuation and flicker measurement. The following parameters can be displayed:  $d_c$ ,  $d_{max}$ ,  $d(t)$ ,  $i_{dc}$ ,  $i_{dmax}$ ,  $i_d(t)$ , and PF.

### CPF Graph View

The application can display the CPF graph of the normal voltage fluctuation and flicker measurement.

## Print



You can attach comments and titles to a list of measured voltage fluctuation and flicker values and then save the list to .pdf or .bmp files or print the list as a report.

## Save



### Saving Setting Information

You can save setting information, such as measurement conditions, judgment conditions, and report titles and comments, to an .ini file (reports contain information such as judgment results and lists of measured data values.).

### Saving Measured Data

You can use this software to save the measured data that the PC has acquired from the WT to an .fdt file. When you save a measured data file, an .ini setting information file is also saved.

### Saving a Report in CSV Format

You can save report files in CSV format. This software cannot load CSV files, but you can use another program that can load CSV files to view the report data.

## Exit



Use to close the software.

### Online Mode and Offline Mode

#### Online Mode

The software is in online mode when the PC is connected to the WT through a GP-IB or Ethernet interface. The software must be in online mode to acquire voltage fluctuation and flicker data from the WT as it is measuring. You can switch to Online mode from the Connection page. In online mode, you can change the WT settings from the PC.

#### Offline Mode

You can load previously saved measured voltage fluctuation and flicker data into the software. You can use the loaded data to display numerical judgments, trend graphs,\* and CPF graphs.\*

\* Valid with general voltage fluctuation and flicker measurement.



## 1.2 PC System Requirements

### PC

CPU: Dual core or more processor  
 Memory: 2 GB or more recommended  
 Hard Disk: 10GB free space or more

### Operating System

English version of Windows Vista, Windows 7, Windows 8, Windows 8.1, or Windows 10

### Communication Card

#### GP-IB

NI (National Instruments)

	OS		
	Windows Vista Windows 7	Windows 8 Windows 8.1	Windows 10
	Version of the driver NI-488.2		
PCI-GPIB	2.7.2 or later	3.1.0 or later	15.5.0 or later
PCI-GPIB+			
PCIe-GPIB			
PCIe-GPIB+			
GPIB-USB-HS	2.8.1 or later	14.0 or later	
GPIB-USB-HS+			

#### Ethernet

An Ethernet port that supports 10BASE-T, 100BASE-TX, or 1000BASE-T

### Display, Disk Drive, Printer, and Mouse

Display Resolution: 1366×768 dots or higher  
 Disk Drive: A drive that can read CD-Rs  
 Operating System: Operating system mentioned above

### WT3000 or WT3000E

WT firmware version 4.01 or later with the following functions.

- Flicker measurement function (/FL option)
- GP-IB interface (standard) or Ethernet interface (/C7 option)

#### How Different WT Firmware Versions Handle IEC 61000-4-15

In WT firmware versions 5.21 and later, you can select the IEC 61000-4-15 edition.

##### Edition No. of the IEC 61000-4-15

- Edition 1.1
- Edition 2.0

IEC 61000-4-15 specifies requirements for measurement instruments. For details, see chapter 14. In WT firmware versions 4.01 to 5.20, the edition is fixed at IEC 61000-4-15 edition 1.1.

---

## 1.3 Applicable Standards

The software application supports the following standards.

### **Voltage Fluctuation and Flicker Suppression Standards**

- IEC 61000-3-11 Edition 1:2000
- EN 61000-3-11:2000

### **Flicker Meter Function and Design Specifications**

- IEC 61000-4-15 Edition 1.1:2003, IEC 61000-4-15 Edition 2.0:2010
- EN 61000-4-15:1998/A1:2003, EN 61000-4-15:2011

This section gives an overview of the standards. For further details, see the actual text of the applicable standard.

### **Scope**

The IEC 61000-3-11 voltage fluctuation and flicker suppression standard limits are applicable to electrical and electronic equipment with line-to-neutral voltages of 220 to 250 V, that operate with single-phase or three-phase 50-Hz public low voltage power supply systems, and that meet these criteria:

- Rated input current per phase is above 16 A and not greater than 75 A.
- Rated input current per phase is less than 16 A, but still does not meet the IEC 61000-3-3 limit.

## Limits

IEC 61000-3-11 Edition 1 specifies limits for a phase voltage of 230 V and a frequency of 50 Hz.

### Note

The software supports the specifications of flicker meters for 230 V and 50 Hz in IEC 61000-4-15 Edition 1.1 as well as those for 120 V and 60 Hz. For edition 2.0, 230 V/60 Hz and 120 V/50 Hz are additionally supported. However, IEC 61000-3-11 does not define limits for 120 V/60 Hz, 230 V/60 Hz, or 120 V/50 Hz.

#### Measurement Items and Limits in IEC 61000-3-11 Edition 1

Measurement Item	Limit
Relative steady-state voltage change dc	3.3% or less
Maximum relative voltage change dmax	4% or less (no conditions)* 6% or less (condition 1)* 7% or less (condition 2)*
Period during which relative voltage change exceeds 3.3% d(t)	500 ms or less
Short-term flicker value Pst	1.0 or less
Long-term flicker value Plt	0.65 or less

\* For the conditions, see the figure below.


#### Conditions for the Limit on Maximum Relative Voltage Change dmax

No conditions	Condition 1	Condition 2
<ul style="list-style-type: none"> <li>Devices that are not classified in condition 1 or 2</li> </ul>	<ul style="list-style-type: none"> <li>Manual switching device</li> <li>Automatic switching devices that are estimated to switch OFF and ON more than two times per day that restart with a delay (delay of 20 to 30 s or more) after a power failure or devices that require manual restarting.</li> </ul>	<ul style="list-style-type: none"> <li>Devices held by human hand (examples: hair driers, vacuum cleaners, cooking appliances such as a mixer, lawn mowers, portable tools such as a electric drill)</li> <li>Automatic switching devices that are estimated to switch two or less times per day or manual switching devices, which restart with a delay (delay of 20 to 30 s or more) after a power failure or require manual restarting.</li> </ul>

### Note


- The Pst and Plt limits are not applicable to the voltage fluctuation due to manual switching.
- The limits are not applicable to switching and interruptions in an emergency.
- The limits are not applicable on some measurement items depending on the EUT type.

## Wiring for Voltage Fluctuation and Flicker Measurement

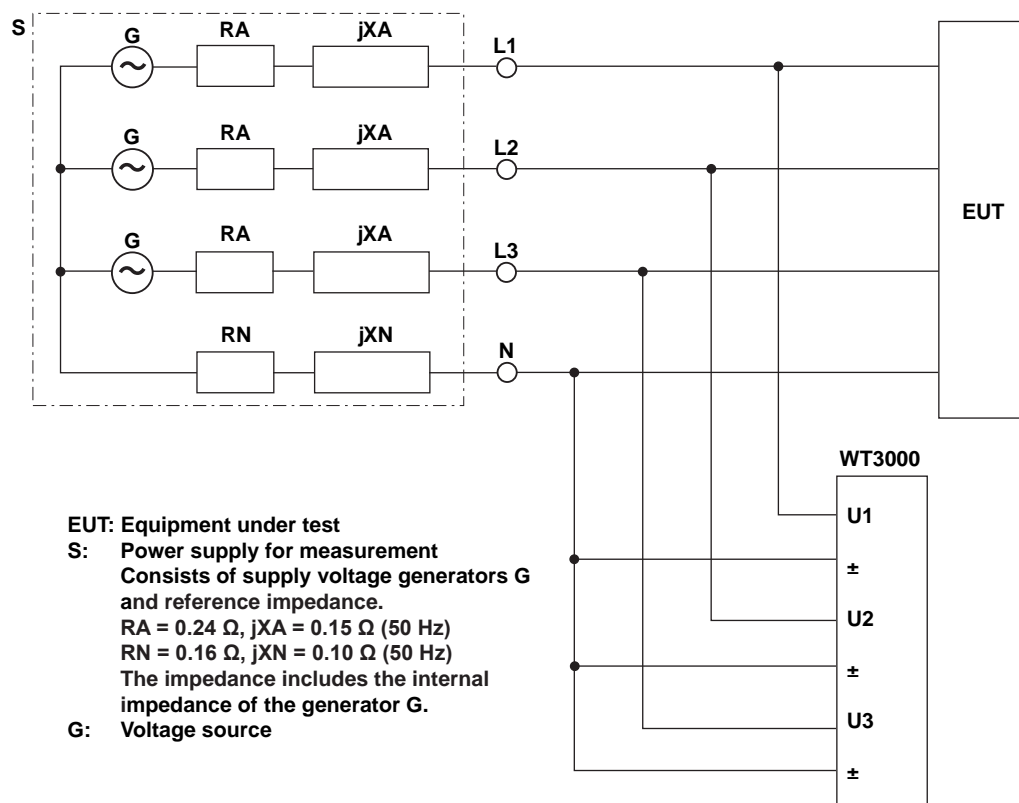

L2 and L3 are not connected if the wiring system is single-phase, two-wire.

## IEC 61000-3-11 Compatibility Testing and Power Supply Connection Conditions

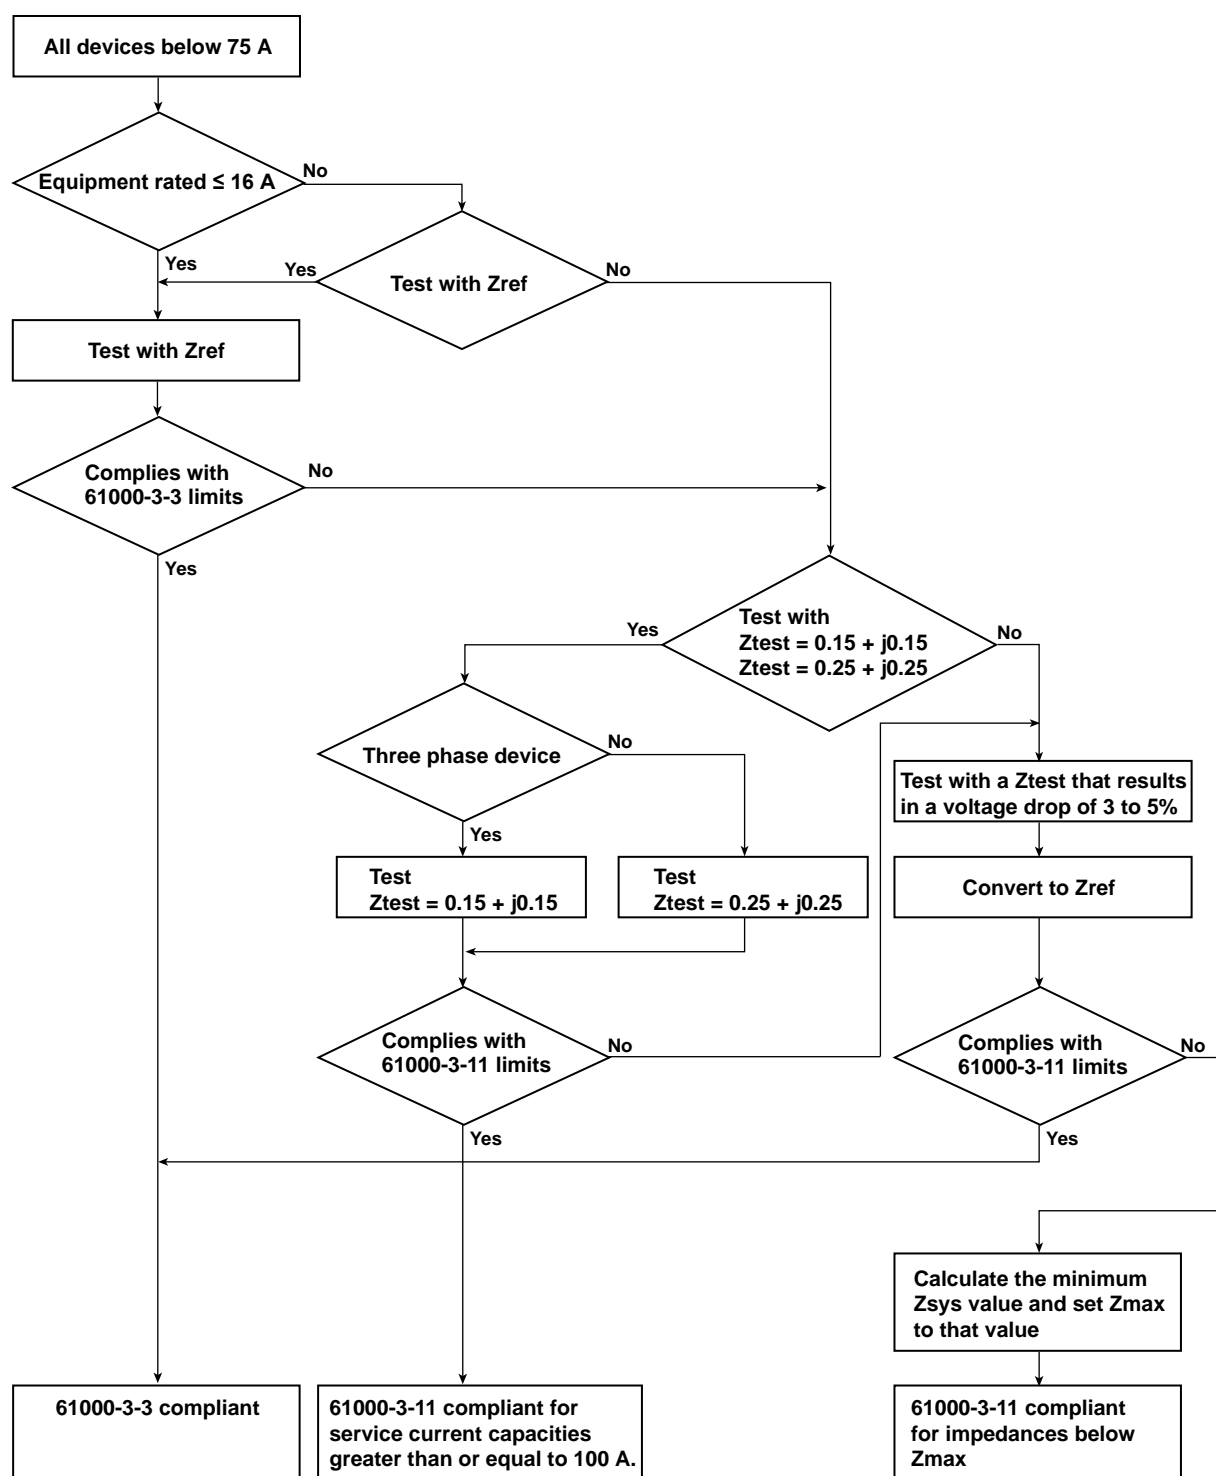


## 1.4 Flow of Operation


To display and judge the voltage fluctuation and flicker measurement data using this software, the WT and PC must be connected, the software must be installed, WT measurement conditions must be set, and judgment conditions of the applicable standard must be set. Follow the steps below.


There are two methods for connecting the PC and the WT: GP-IB and Ethernet (WT3000 option).

### Preparation Flow Chart

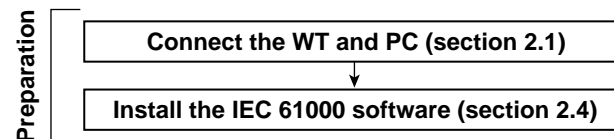

### Test Flowchart

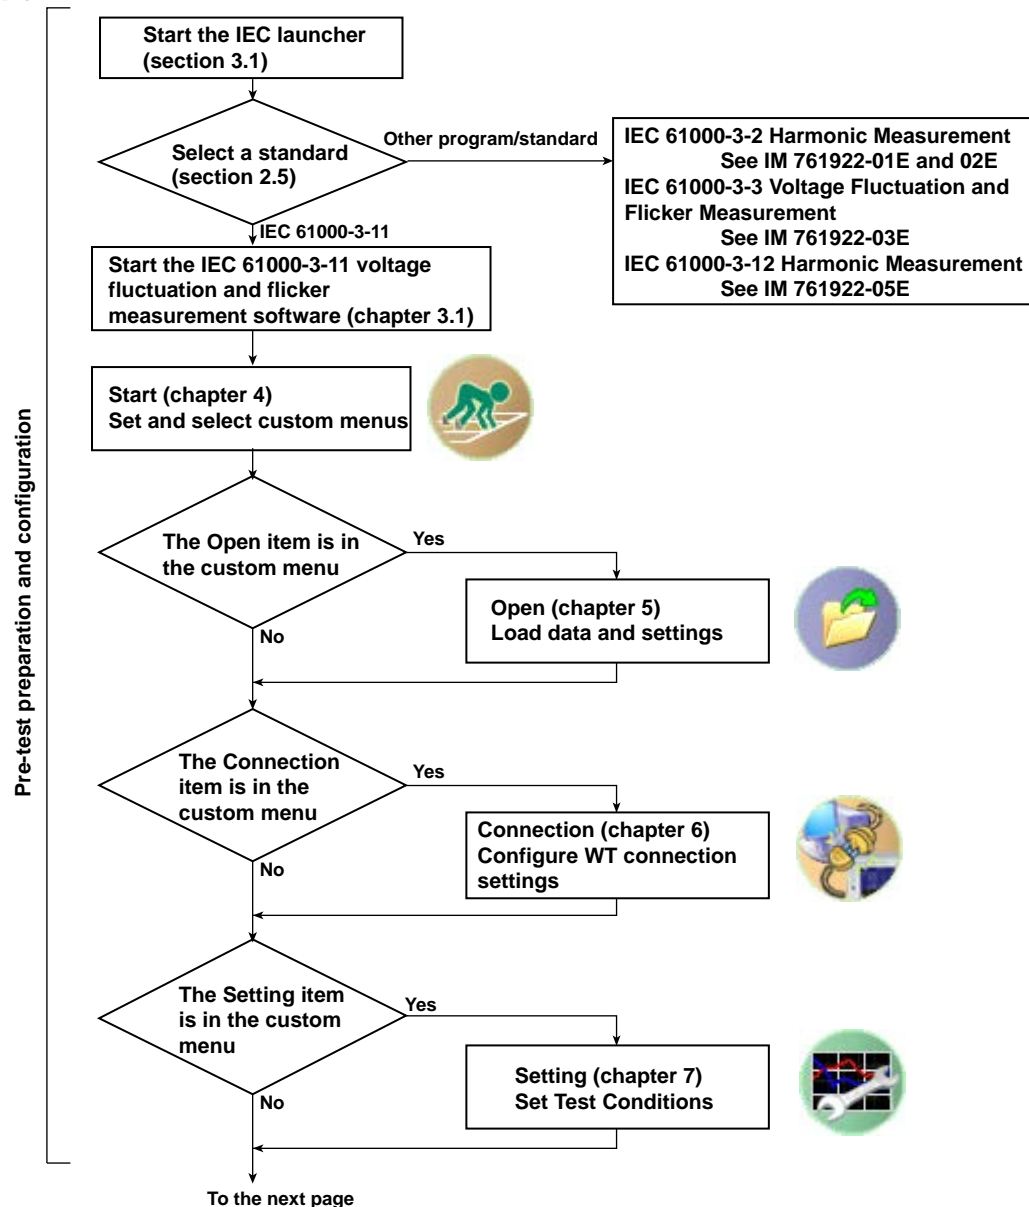

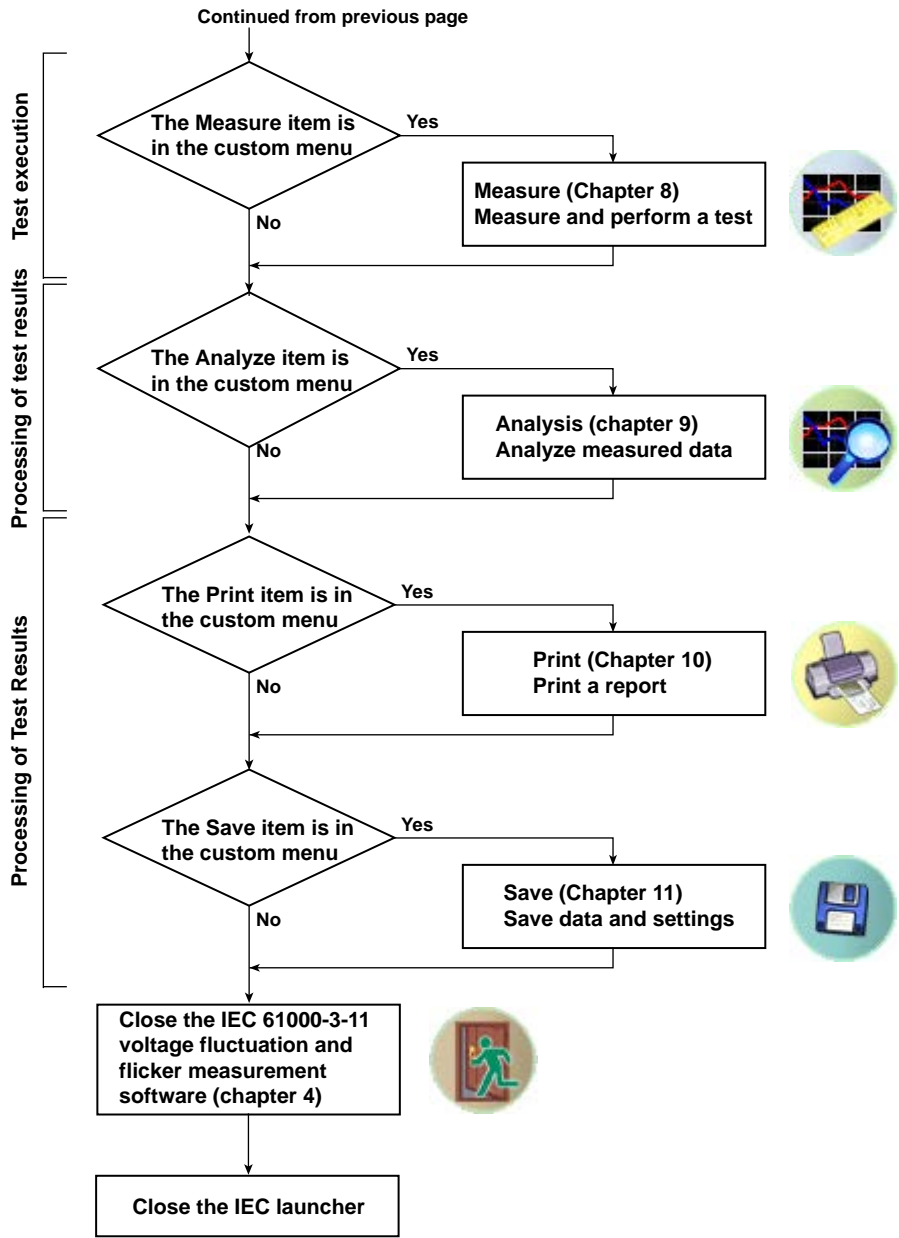

## 1.5 Terminology Related to Flicker

### Flicker

Flicker refers to the unstable impression perceived by the human eye that is induced by the fluctuating intensity or spectral distribution of light. It expresses the irritation that the people receive due to the fluctuation of brightness.

### Steady-state Condition

A condition in which the rms voltage per half period is stable for 1 s or more.

### Relative Steady-State Voltage Change dc

A value obtained by dividing the difference between two steady-state voltages before and after a single voltage fluctuation by the rated voltage expressed as a percentage. For example, for a power supply with a rated voltage of 230 V, the relative steady-state voltage change is as shown below if the steady-state voltage before the fluctuation is 231 V and that after the fluctuation is 232 V.

$$\frac{232-231}{230} \times 100(\%) = 0.43\%$$

### Note

- If no voltage fluctuation occurs on the WT in the measurement period, dc is zero.
- If a steady-state condition does not occur during the measurement period on the WT, it is considered to be a fluctuating condition. The measured value of dc is displayed as Undef (undefined, IEC 61000-4-15 Ed1.1) or 0 (IEC 61000-4-15 Ed2.0), and the judgment is displayed as Error (Ed1.1) or Pass (Ed2.0).

### Maximum Relative Voltage Change dmax

#### • For IEC 61000-4-15 Ed1.1

A value obtained by dividing the difference between the maximum and minimum values in a single voltage fluctuation\* by the rated voltage expressed as a percentage.

#### • For IEC 61000-4-15 Ed2.0

The absolute value of the difference between the maximum value and the value in the previous steady-state condition is compared with the absolute value of the difference between the minimum value and the value in the previous steady-state condition in a single voltage fluctuation.\* dmax is the value obtained by dividing the larger of the two values by the rated voltage expressed as a percentage.

\* Condition between two steady-state conditions.




### Period during Which Relative Voltage Change Exceeds the Threshold Level $d(t)$


The time during which the relative voltage change during a voltage fluctuation period exceeds the threshold level.

#### Relationship between $d_c$ , $d_{max}$ , and $d(t)$

- For IEC 61000-4-15 Ed1.1

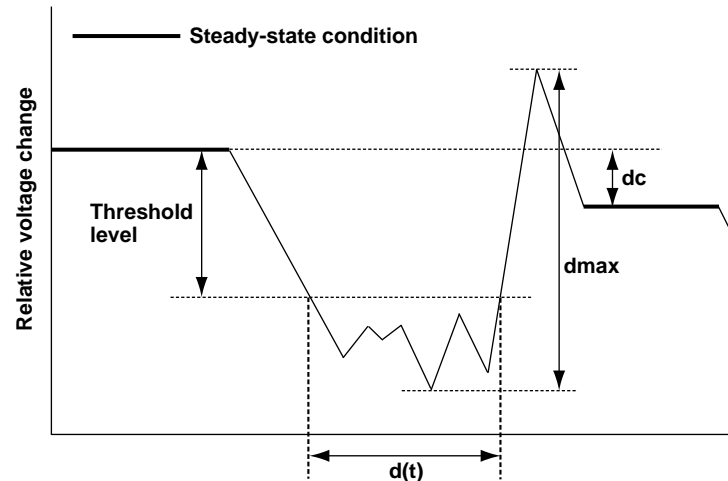


- For IEC 61000-4-15 Ed2.0

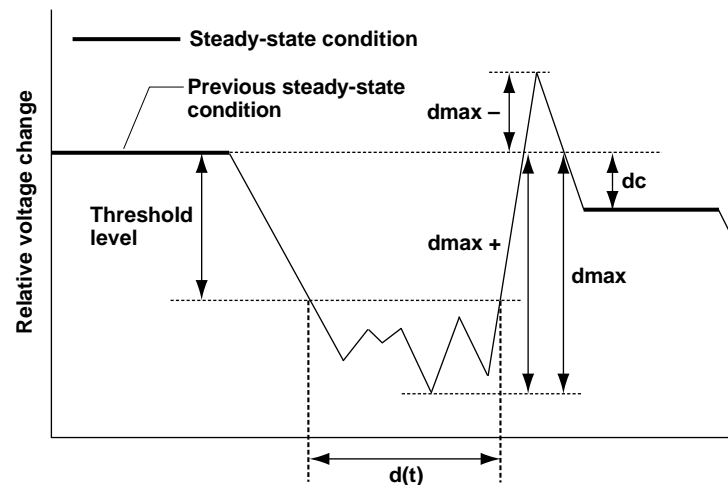

$d_{max} +$ : The difference between the minimum value and the value in the previous steady-state condition

$d_{max} -$ : The difference between the maximum value and the value in the previous steady-state condition

$d_{max}$ : The larger of the absolute values of  $d_{max} +$  and  $d_{max} -$

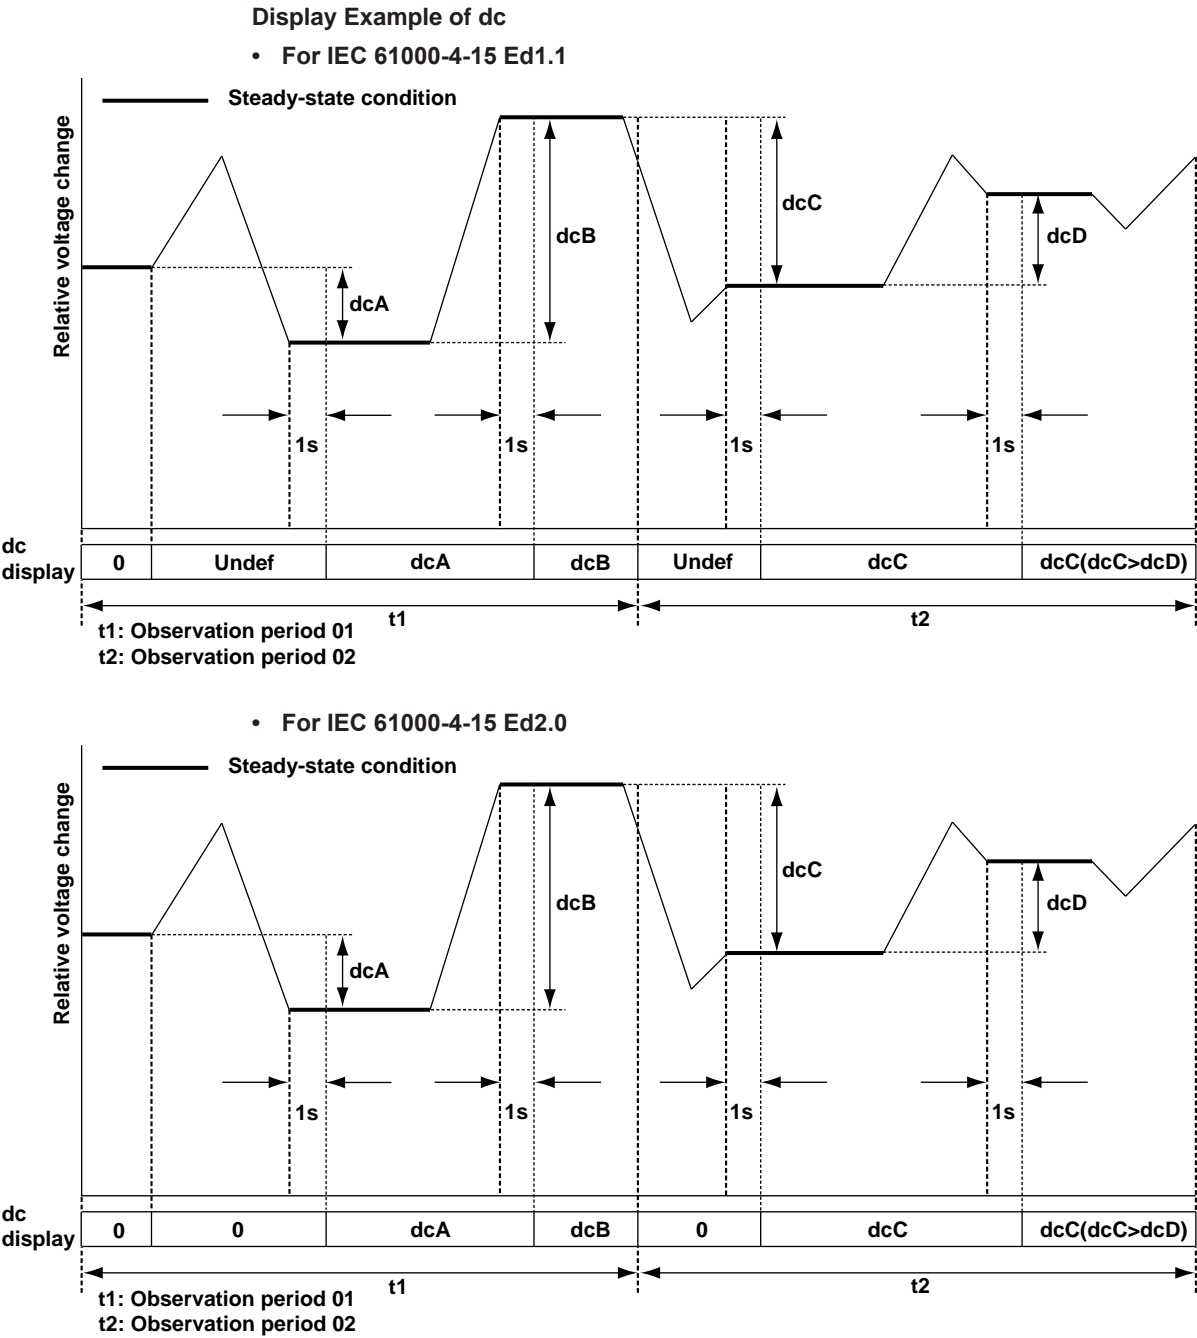

Short-Term Flicker Value Pst

The method using the flicker meter is standard in IEC 61000-3-11. For details on the flicker meter, see IEC 61000-4-15. The normal observation period of Pst is 10 minutes.

Long-Term Flicker Value Plt

The long-term flicker value is normally determined from 12 Pst values using the equation below. The normal observation period is 2 hours.

$$Plt = \sqrt[3]{\frac{Pst_1^3 + Pst_2^3 + \dots + Pst_{12}^3}{12}}$$

Pst<sub>1</sub> :Pst of the 1<sup>th</sup> 10 minutes

Pst<sub>2</sub> :Pst of the 2<sup>th</sup> 10 minutes

:

Pst<sub>12</sub> :Pst of the 12<sup>th</sup> 10 minutes


Note

If the number of observation periods is less than constant N (12) in the Plt equation, the Pst values that are not observed are computed as 0.0.


Instantaneous Flicker Sensation IFS

The output of block 4 of the flicker meter. For details on the flicker meter, see IEC 61000-4-15.

Block Diagram of the Flicker Meter in IEC 61000-4-15 Edition 1.1

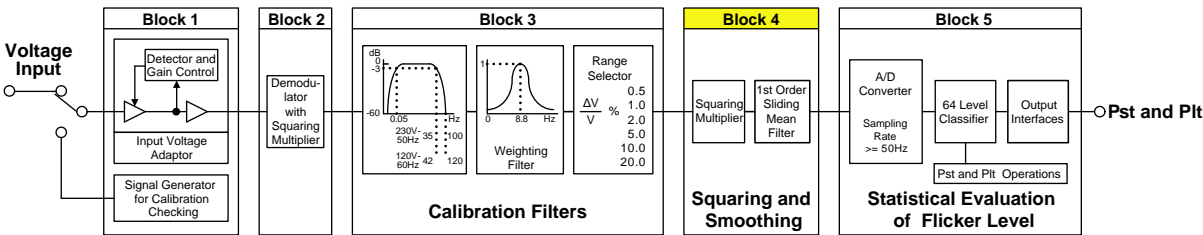

Block Diagram of the Flicker Meter in IEC 61000-4-15 Edition 2.0

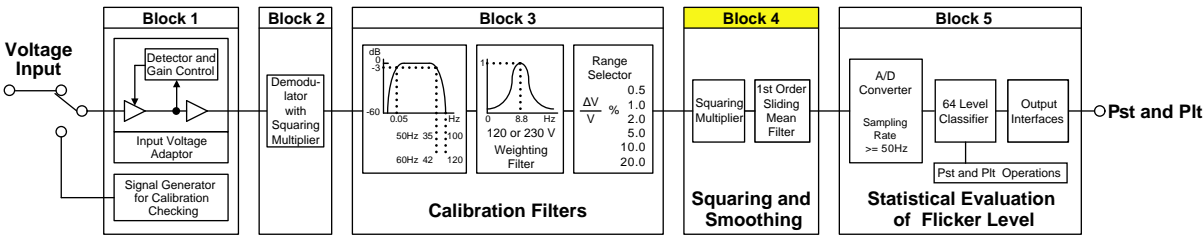


Note

This method does not necessarily match the processing method of the WT3000.

Cumulative Probability Function CPF

This function determines the probability density function of the flicker level from the instantaneous flicker sensation and accumulates the levels of the function from the highest level.

Example in Which Flicker Levels 0 to 6400 [P.U] Are Divided into 10 Flicker Classes

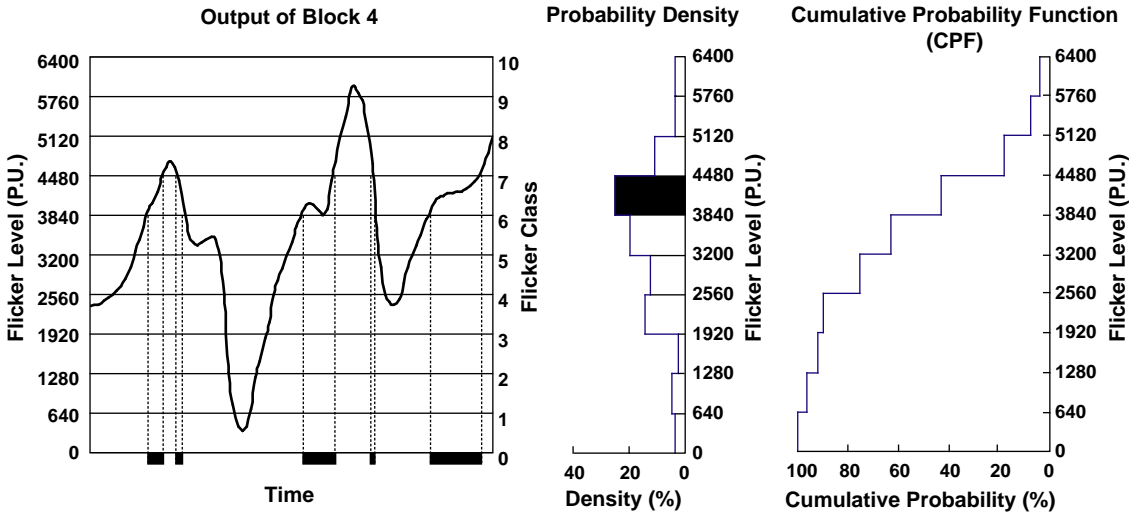

Note

The WT3000 performs processing different from the figure above to compute the CPF more accurately.

## 2.1 Connecting the WT3000 and the PC

### CAUTION

When connecting or disconnecting communication cables, make sure to turn OFF the PC and the WT. Otherwise, erroneous operation or damage to the internal circuitry may result.

French

### ATTENTION


Toujours mettre le PC et le WT hors tension avant de brancher ou de débrancher des câbles de communication, pour éviter tout dysfonctionnement ou panne du circuit interne.

### When Controlling the WT through the GP-IB

The GP-IB available on the WT is a 24-pin connector that conforms to the IEEE St'd 488-1978. Use a GP-IB cable that conforms to this standard. Connect the cable to the GP-IB connector on the rear panel of the WT. For details on the connection procedure and the specifications of the GP-IB interface, see the WT main unit user's manual.

- WT3000  
Communication Interface User's Manual IM760301-17E on the CD
- WT3000E  
Communication Interface User's Manual IMWT3001E-17EN on the CD


Use an appropriate connector for your PC to connect the other end of the GP-IB cable.

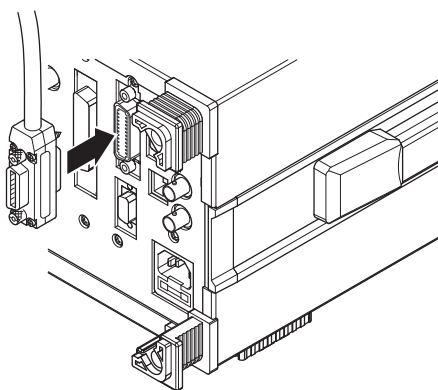

### When Controlling the WT through the Ethernet Interface

Connect the WT and your PC through a hub using straight UTP (Unshielded Twisted-Pair) or STP (Shielded Twisted-Pair) cables. Connect the cable to the ETHERNET port on the rear panel of the WT. Use hubs, cables, and Ethernet NIC that are appropriate for the data rate. For details on the connection procedure and the specifications of the Ethernet interface, see the WT main unit user's manual.

- WT3000  
Expansion Function User's Manual IM760301-51E  
Communication Interface User's Manual IM760301-17E on the CD
- WT3000E  
Expansion Function User's Manual IMWT3001E1-51EN  
Communication Interface User's Manual IMWT3001E-17EN on the CD

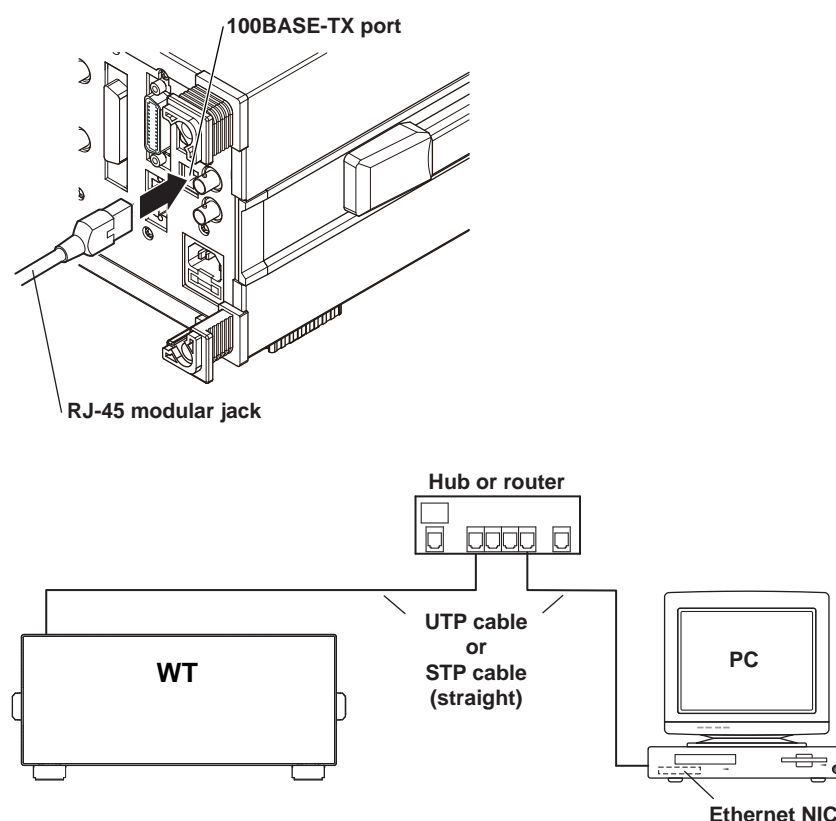

---


#### **Note**

- Use UTP (Unshielded Twisted-Pair) or STP (Shielded Twisted-Pair) cables of category 5 or better when connecting to a 100BASE-TX network.
  - Do not directly connect the WT to the PC without using a hub. Operations are not guaranteed for communications using direct connection.
-

## 2.2 Setting the GP-IB Control

### Procedure

1. Press **MISC** to display the Misc menu.
2. Press the **Remote Control** soft key to display the Remote Ctrl menu.
3. Press the **Device** soft key to select GP-IB.  
Only the communication interface selected here is enabled. The WT does not accept commands that are transmitted to other unselected communication interfaces.
4. Press the **cursor keys** to set the address.

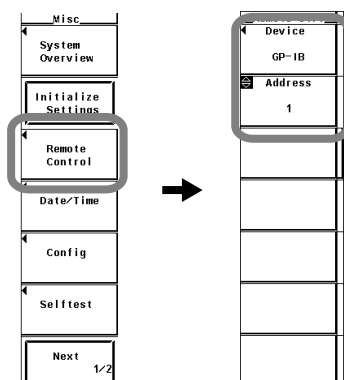

### Explanation

To use the software in On-Line mode through the GP-IB interface, operate the WT to select GP-IB.

#### Setting the Address

Set the WT address within the following range.

1 to 30

Each device that can be connected via GP-IB has a unique address within the GP-IB system. This address is used to distinguish the device from others. Therefore, make sure that the WT address does not overlap with other devices when connecting the WT to the PC.

#### **Note**

---

- Do not change the address while the controller (PC) or other devices are using the GP-IB system.
  - When connecting the WT to a single PC and controlling the WT using this software, multiple communication interfaces cannot be used simultaneously.
  - Use a GP-IB card by National Instruments on the PC end. For details, see section 1.2.
  - The software may not operate correctly, if an adapter is inserted in the middle of the connection between the WT and the PC (for example, GP-IB-to-USB adapter). For details, contact your nearest YOKOGAWA dealer.
-



## 2.3 Setting the Ethernet Control


### Procedure

2

Preparation before Use

#### Setting the Ethernet Interface

1. Press **MISC** to display the Misc menu.
2. Press the **Remote Control** soft key to display the Remote Ctrl menu.
3. Press the **Device** soft key to select Network.  
Only the communication interface selected here is enabled. The WT does not accept commands that are transmitted to other unselected communication interfaces.

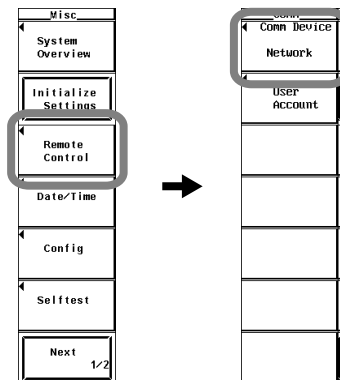


#### Setting the User Name and Password

4. Press the **User Account** soft key to display the User Account dialog box.
5. Press the **cursor keys** to select User Name.
6. Press **SET** to display the keyboard.
7. Use the **keyboard** on the WT to enter the user name.  
For the keyboard operation of the WT, see the WT User's Manual.
8. Press the **cursor keys** to select Password.
9. Press **SET** to display the keyboard.
10. Use the **keyboard** on the WT to enter the password.  
Enter the password twice for confirmation.  
A password is not required if the login name is anonymous.  
For the keyboard operation of the WT, see the WT User's Manual.

### Setting the Timeout Value

11. Press the **cursor keys** to select Time Out.
12. Press **SET** to display the timeout time selection box.
13. Press the **cursor keys** to set the timeout value.
14. Press **SET** or **ESC** to close the box.

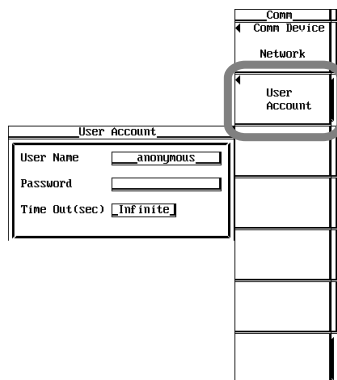

### Setting TCP/IP

You must enter TCP/IP settings to control the WT from a PC through the network. For the setup procedure, see the *Expansion Function User's Manual IM760301-51E* of the WT3000.

### Explanation

To use the software in On-Line mode through the network, operate the WT to select Network.

### Setting the User Name

- Enter the user name to allow access to the WT.
- Enter up to 15 characters.
- The characters that can be used are 0-9, A-Z, %, \_, ( ) (parentheses), - (minus sign).
- If you specify anonymous, the WT can be accessed from the PC without a password.

### Setting the Password

- Enter the password of the user name to allow access to the WT.
- Enter up to 15 characters.
- The characters that can be used are 0-9, A-Z, %, \_, ( ) (parentheses), - (minus sign).
- If you set the user name to anonymous, the WT can be accessed from the PC without a password.

### Setting the Timeout Value

The WT closes the connection to the network if there is no access for a certain period of time (timeout value).

The available settings are 1 to 3600 s, or Infinite. The default value is Infinite.

### Note

- To activate the settings, you must power cycle the WT.
- When connecting the WT to a single PC and controlling the WT using this software, multiple communication interfaces cannot be used simultaneously.
- The software may not operate correctly, if an adapter is inserted in the middle of the connection between the WT and the PC (for example, GP-IB-to-USB adapter). For details, contact your nearest YOKOGAWA dealer.

## 2.4 Installing the Software

### Procedure


Have the CD containing the software ready. Exit all programs that are currently running before starting the installation. If an older version of the Harmonic/Flicker Measurement Software is installed, uninstall it first (see page 2-10).

The following procedure explains how to install the software on Windows 7. The windows that appear will vary depending on the operating system.

1. Turn on the PC and start Windows. Log on as an administrator.
2. Insert the installation disk that contains this software into the CD drive.
3. On the PC, select the CD drive.
4. Double-click **Installer.exe**.




5. The "User Account Control" window will appear. Click **Allow** or **Yes** to continue the installation. The installer starts. Follow the instructions on the screen, and then click **Next**.

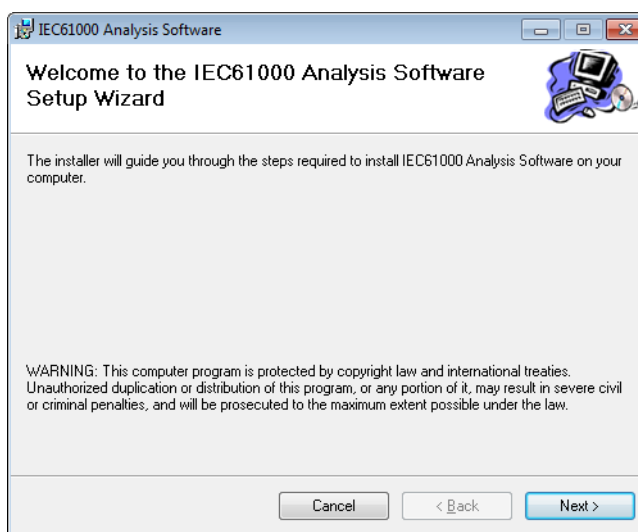


## 2.4 Installing the Software

6. If you agree with the license agreement, select **I Agree**, and click **Next**. Otherwise, select **I Do Not Agree**. The installation will be canceled.

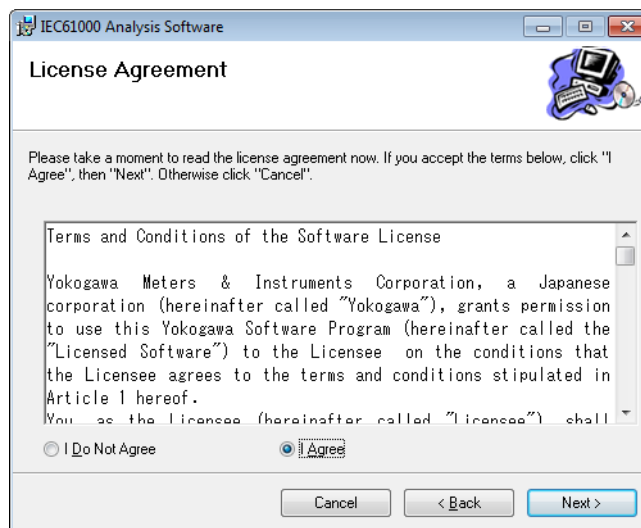


7. Select the installation destination, and click **Next**.  
Click **Browse** to specify the destination. The default installation destination is as follows:  
C:\ProgramFiles\YOKOGAWA\PowerViewerPlus

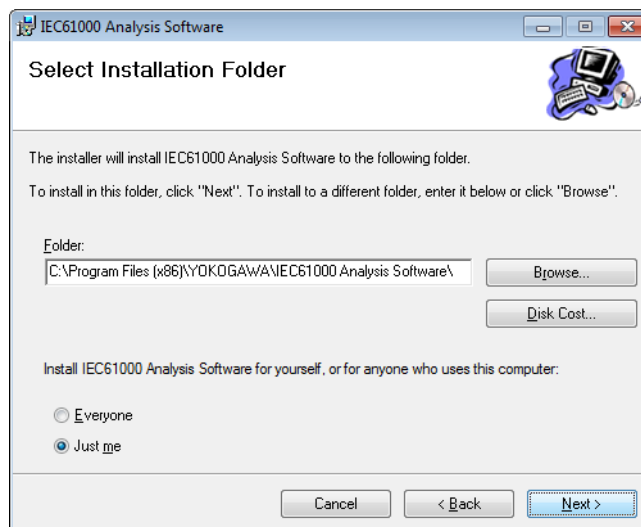


8. A window prompting you to start the installation appears. If the installation settings are okay, click **Next**. The software installation starts.

Click **Back** if you want to change the installation settings.

Click **Cancel** to cancel the installation.

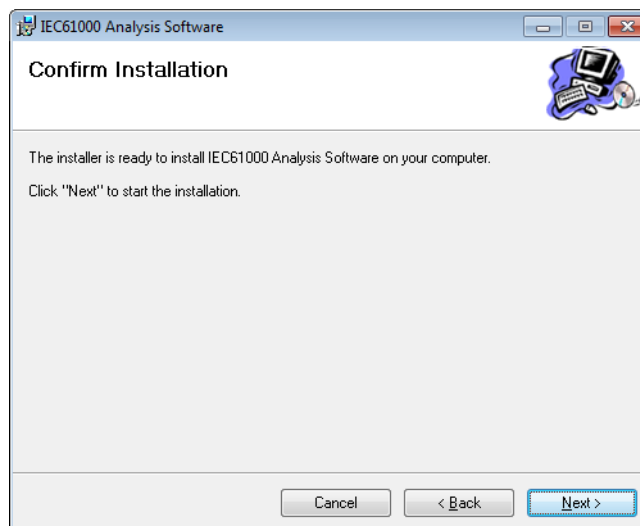

9. When the software installation finishes normally, the following window appears. Click **Close** to complete the installation. YOKOGAWA > IEC61000 Analysis > IEC61000 will be added to All Programs in the Windows Start menu.

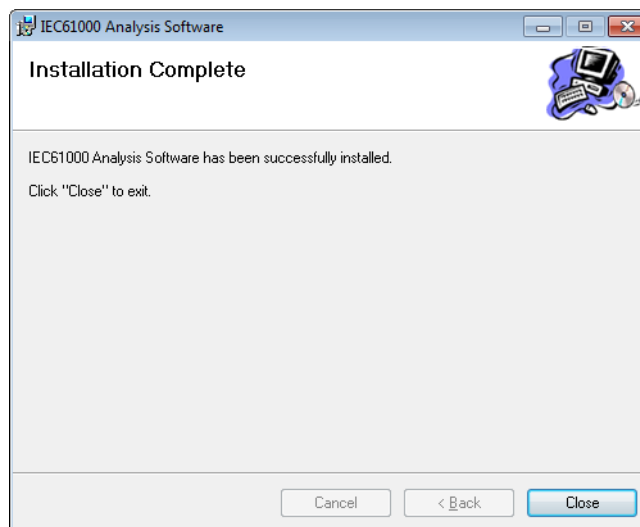

### Note

After the installation finishes, a Program Compatibility Assistant window may appear. The installation has been completed successfully, so select **"This program installed correctly"** or **Cancel** to close the window.

### Uninstalling the Software

This section explains how to uninstall the software on Windows 7.


1. On the Windows **Start** menu, click **Control Panel**.
2. Click **Uninstall a program** in the Control Panel.
3. Right-click **IEC61000 Analysis Software**, and then click **Uninstall**.
4. A uninstallation confirmation window appears.  
Click **Yes** to uninstall IEC61000 Analysis Software.  
Click **No** to cancel.
5. On Windows Vista or Windows 7, the "User Account Control" window will appear during the uninstallation. Click **Allow** or **Yes** to continue the installation. The uninstallation will continue.

## 3.1 Starting the Software

### Procedure

#### Starting the Software


1. Choose **Start > All Programs > YOKOGAWA > IEC61000 Analysis > IEC61000**.  
The procedure above applies when the default software installation destination and program folder are used.  
If you changed the installation destination or program folder at installation, select the corresponding location.

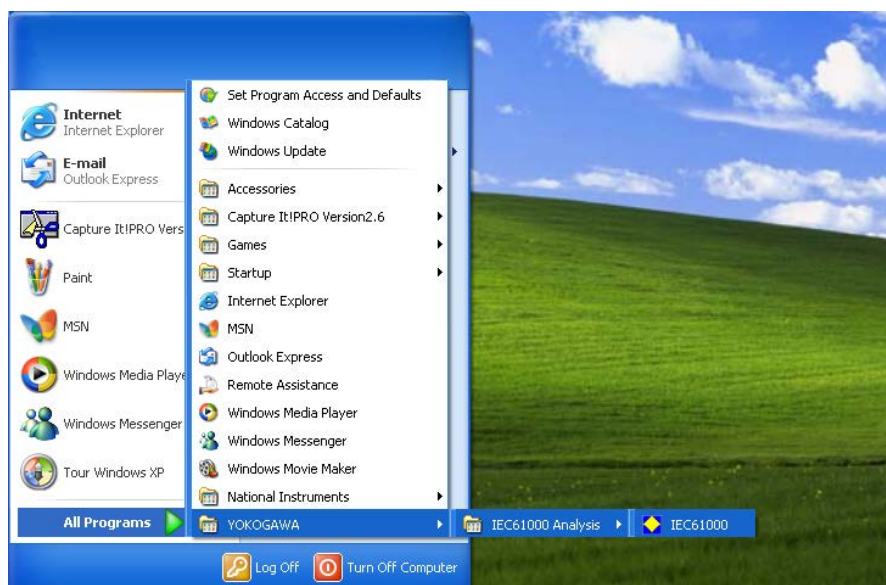


2. The "User Account Control" window will appear. Click **Allow** or **Yes**.  
The IEC Launcher appears. Use it to select the appropriate standard.

#### Selecting a Standard

3. Select **IEC 61000-3-11** to open the IEC 61000-3-11 voltage fluctuation and flicker measurement software.

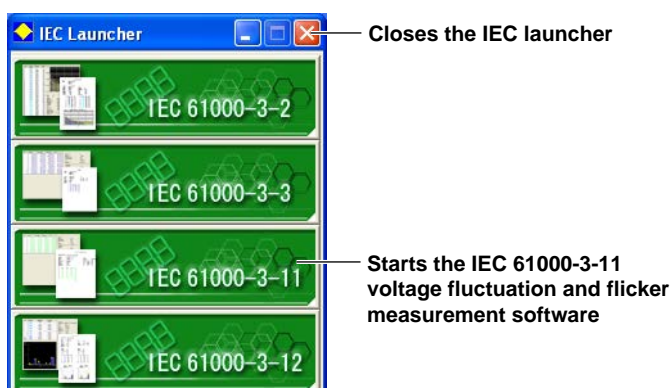

### 3.1 Starting the Software

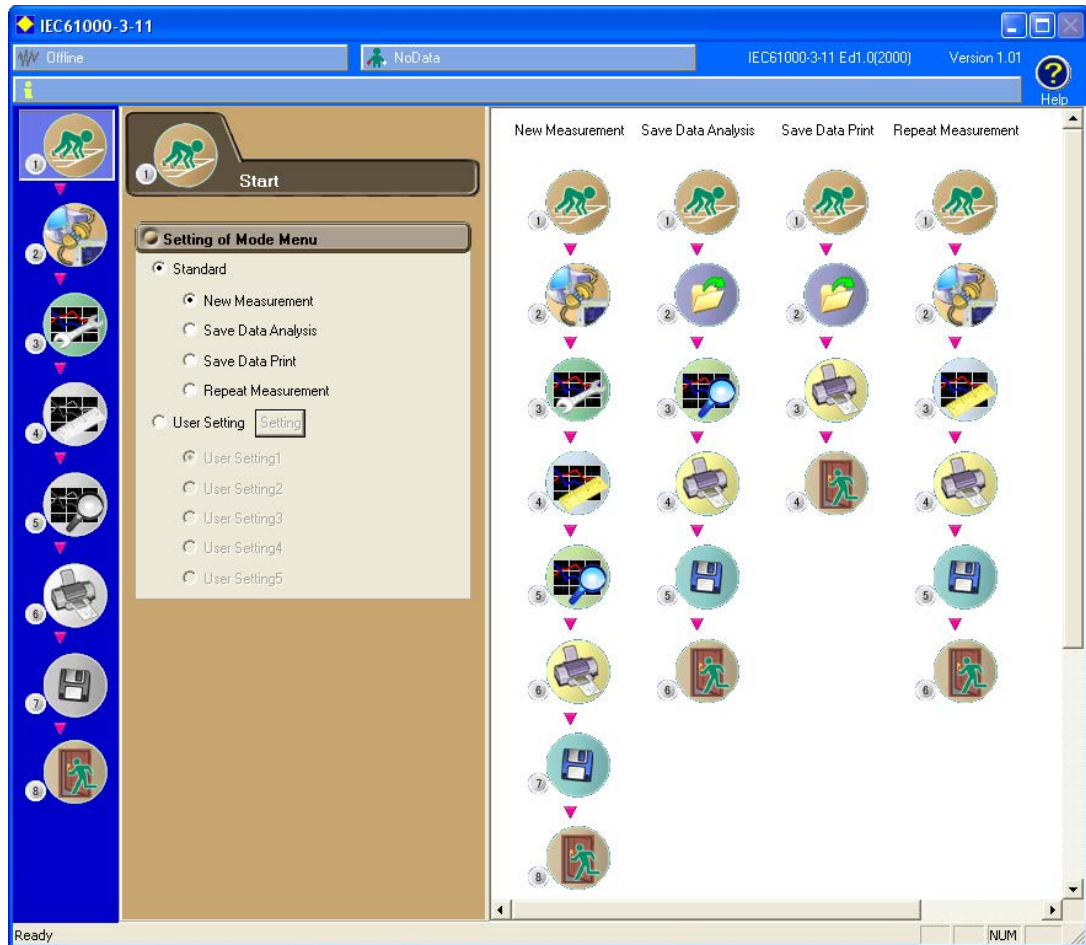

#### Explanation


You can start this software by accessing its shortcut from the start menu's program folder. This software is installed in the location that you specified in the previous chapter.

#### Selecting a Standard

To measure the voltage fluctuation and flicker of a device with an electric current above 16 A and not greater than 75 A, select IEC 61000-3-11. The voltage fluctuation and flicker measurement software will start. If you select a different standard, the program that corresponds to that standard will start. For information about the programs that correspond to other standards, see their user's manuals.



## 3.2 Basic Operations

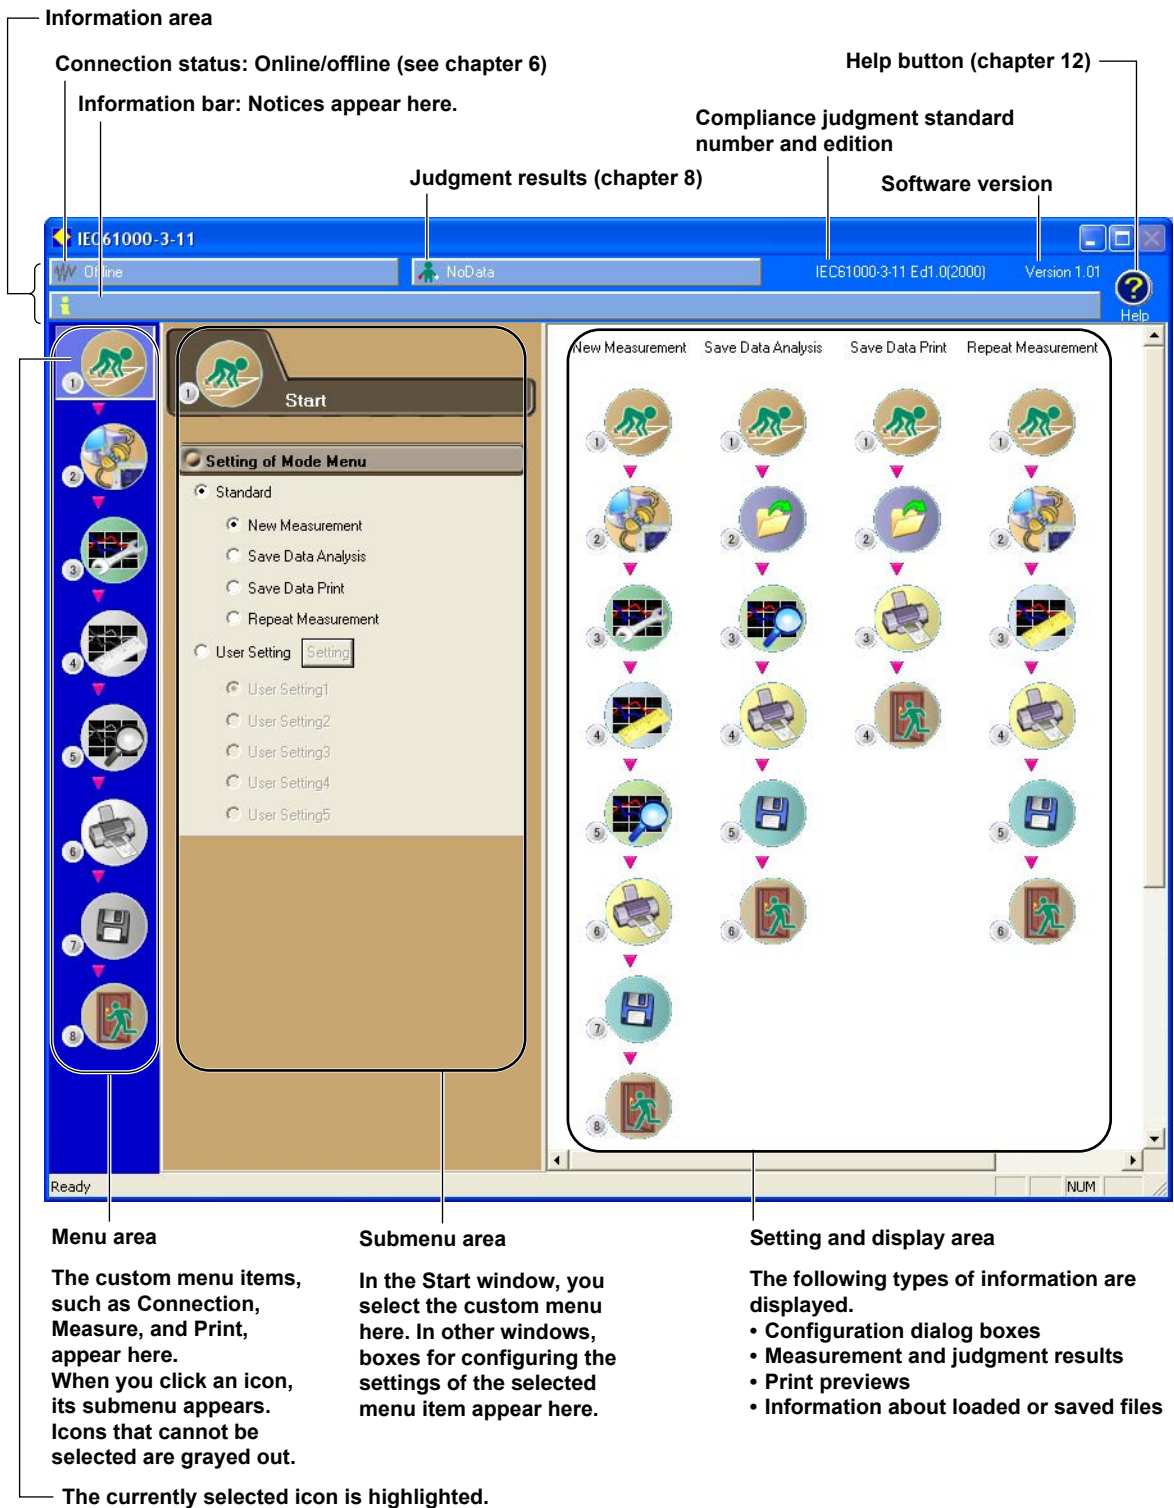

### Menu Area Icons



#### Start

Use to select and edit test schedule menus. There are four preset standard test schedule menus available, in addition to custom test schedule menus that you can make yourself (located under the "User Setting" option button).



#### Open

Use to open the following kinds of files:

- Setting information files that contain information such as measurement conditions and judgment conditions.
- Measured data files that contain measured data acquired by the PC from a WT.



#### Connection

Use to connect the PC to the WT through a GP-IB or Ethernet interface.



#### Setting

Use to set measurement and judgment conditions.



#### Measure

Use to measure voltage fluctuation and flicker. There are two measurement modes.

- Normal voltage fluctuation and flicker measurement (General mode)
- Measurement of dmax caused by manual switching (Manual dmax mode)



#### Analysis

Use to display measured results in one of the following formats.

- Numerical judgment
- Trend graph
- CPF graph



#### Print

You can attach comments and titles to a list of measured values and print the list as a report.



#### Save

Use to save the following kinds of files.

- Setting information files that contain information such as measurement conditions and judgment conditions.
- Measured data files that contain measured data acquired by the PC from a WT.
- CSV files that contain numerical judgment, trend, and CPF data.



#### Exit

Use to close the software.

## 4.1 Selecting a Test Schedule Menu

### Procedure



1. Select the  icon in the menu area. The Start submenu appears.



## 4.1 Selecting a Test Schedule Menu

### Selecting One of the Standard Test Schedule Menus

2. Click **Standard**.
3. Select one of the following test schedule menus. The icons representing the steps that are included in the menu that you select will appear in the menu area on the left.
  - New Measurement
  - Save Data Analysis
  - Save Data Print
  - Repeat Measurement

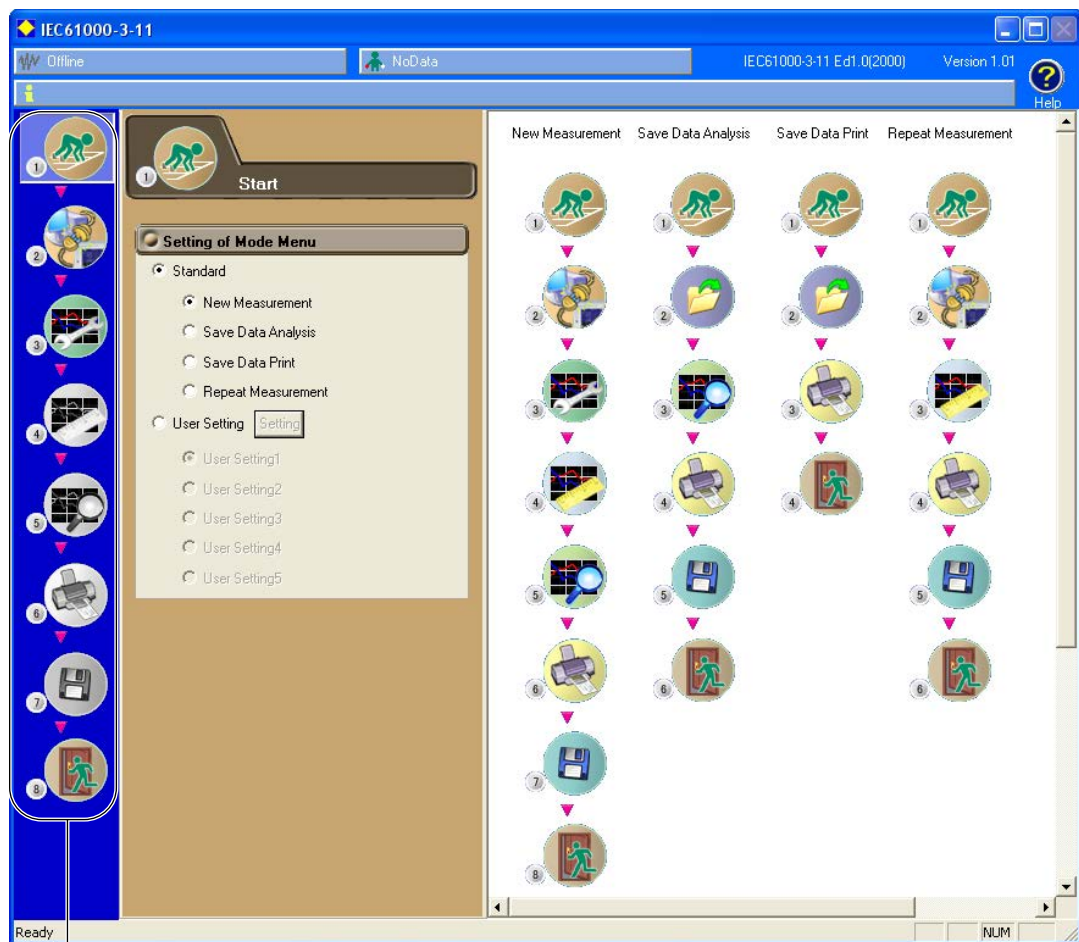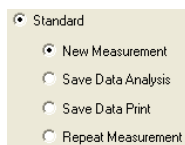


#### Menu area

The icons of the custom menu that you select appear.

Creating Your Own Custom Test Schedule Menu (User Setting)

- 2. Click **User Setting**.
- 3. Click **Setting**. The menu customization dialog box opens (the dialog box is labeled "Test menu user setting").
- 4. Use the check boxes to select the steps that you want to include in each of the five custom test schedule menus (labeled as "User Setting" 1 to 5 in the start window).
- 5. Click **OK**.
- 6. Select the custom test schedule menu that you want to use from "User Setting" 1 to 5. The icons representing the steps that are included in the custom test schedule menu that you select will appear in the menu area on the left.

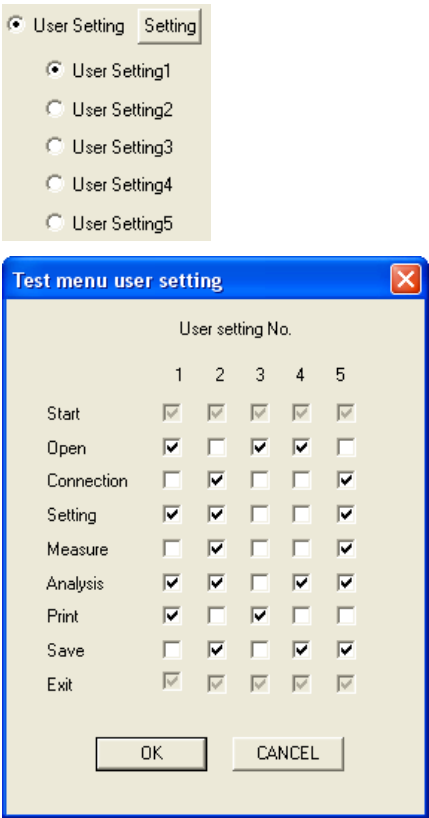

### Explanation

#### Selecting a Test Schedule Menu

A test schedule menu lays out the overall test structure. You can choose from test schedule menus that contain different combinations of the following 9 steps. For more information on each step, see sections 1.1 and 2.3.



Start: Select and edit custom menus.



Open: Load measured data and WT setting information files.



Connection: Configure the connection between the PC and a WT.



Setting: Set compatibility and measurement conditions.



Measure: Measure voltage fluctuation and flicker.



Analysis: Display measured results as bar and trend graphs.



Print: Print screen images and reports.



Save: Save measured data and setting information files.



Exit: Close the software.

#### Icon Display



#### Icon Number

This number indicates an icon's order in a menu.

#### Standard Menus

The following four standard menus are available.

- New Measurement: Set measurement and judgment conditions, make measurements, and then print and save the data.
- Save Data Analysis: Analyze, print, and save data that was measured and saved in the past.
- Save Data Print: Print data that was measured and saved in the past.
- Repeat Measurement: Make measurements with the same measurement and judgment conditions that you used for the previous measurement, and print and save data without analyzing it.

### Setting Up Custom Test Schedule Menus

You can create custom test schedule menus by selecting what steps to include in them.


You can create up to five different custom test schedule menus.

- Start and Exit steps are always selected. You cannot deselect them.
- The steps are arranged in the order that they appear in the menu customization dialog box. You cannot change this order.

### Icon Activation/Deactivation

Some icons cannot be selected out of order. These icons are grayed out.

Selectable (activated)



Not selectable (deactivated)




For example, the Measure icon cannot be selected when the Connection menu has been set such that the software is in offline mode. Icons such as Open, Connection, and Setting cannot be selected during measurement.

The following is a list of each icon and when it cannot be selected.

Start	During measurement
Open	During measurement
Connection	During measurement
Setting	During measurement
Measurement	When the software is in offline mode
Analysis	During measurement, or when there is no measured data to analyze
Print	During measurement, or when there is no measured data to print
Save	During measurement, or when there is no measured data to save
Exit	During measurement

## 4.2 Closing the Software


### Procedure

1. Select the  icon in the menu area. The Exit submenu appears.




### Closing the IEC 61000-3-11 Voltage Fluctuation and Flicker Measurement Software

2. Click **Exit**. The software closes.



### Closing the IEC61000 Launcher


Click the icon below.

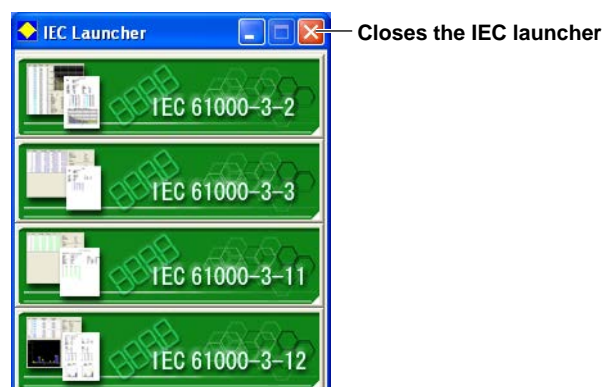




## 5.1 Loading Setting Information and Measured Data

### Procedure

1. Select the  icon in the menu area. The Open submenu appears.

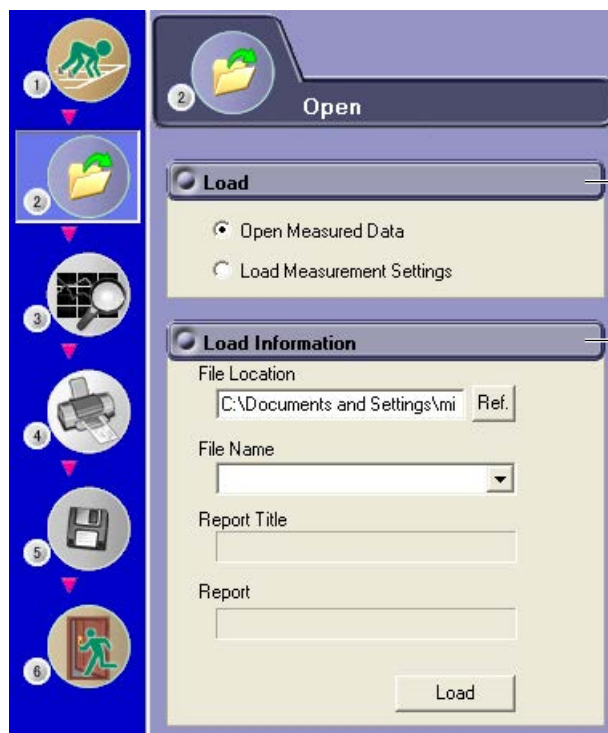

The screenshot shows the 'Open' submenu with the following sections:

- Load** (page 5-2): Select the type of data to load.
  - ☒ Open Measured Data
  - ☐ Load Measurement Settings
- Load Information** (page 5-2): Select a file to open. When you select a file, its information appears.
  - File Location:
  - File Name:
  - Report Title:
  - Report:
  -

**Load (page 5-2)**  
Select the type of data to load.

**Load Information (page 5-2)**  
Select a file to open. When you select a file, its information appears.

### Selecting the Type of Data to Load

2. Select one of the two data types listed under Load.

### Selecting a File to Open

3. Specify the file location. There are two places where you can specify the file location.
  - Under Load Information in the submenu
  - At the top of the setting and display area

When you specify the file location, information about the files that can be loaded appears in the setting and display area.
4. Select a file to open. When there is more than one available file, you can select which file to open using one of the following two methods.
  - Click on the ▼ next to the File Name box under Load Information. A list of available files appears. Select a file from the list.
  - Select a file to open from one of the files listed in the setting and display area.
5. Click **Load**, or double-click the file you want to open. The software will open the measured data or setting information file.

### Note

- When the software is in online mode, it will switch to offline mode if you load setting information or measured data.
- If an error occurs while loading the setting information, the settings are reset to their default values.
- If an error occurs while loading measured data or setting information, the data may not be loaded properly. Confirm the filename and extension and then reopen the file.
- You cannot load setting information or measured data while making measurements.

### Configuring File Information Display Settings

1. Right-click on the file information heading area at the top of the setting and display area. A list of the different types of information that can be displayed appears.
2. Select the type of information that you want to be displayed.

Date	Report Title	Report Comment	Gener...	Manu...	File Name ▲
2007/12/28 08:48:45	✓ Date	Experimental mo...	-	-	IEC61000
2007/12/28 08:49:10	✓ Report Title	Experimental mo...	-	-	IEC61000_3_11_0
2006/11/29 13:37:42	✓ Report Comment	Experimental mo...	-	-	IEC61000_3_11_1
	✓ General Data				
	✓ Manual Data				
	✓ File Name				

**Explanation****Loading Setting Information**

You can load the setting information that has been saved using the procedure described in section 11.1.

- A dash appears in the General Data and Manual Data columns for setting information files.
- Setting information file names have the following extension.  
Extension: .ini
- Setting information files contain the following:
  - Measurement and judgment conditions (see chapter 7)  
Data that has been acquired from the WT or loaded from a file can be judged using loaded judgment conditions.
  - Graph display settings (see sections 9.2 and 9.3)
  - Report titles and comments (see section 10.1)  
You can put comments and titles on reports of data acquired from the WT or loaded from files, and then print and save the reports. For more information about printing and saving, see chapters 10 and 11.

**Loading Measured Data and Setting Information**

- You can load the measured data and setting information that has been saved using the procedure described in section 11.1.
- An asterisk appears in the General Data and Manual Data columns for files that contain measured data.
- Files that contain measured data are composed of two types of files with the following extensions.  
Extension: .fdt    Measured data  
                  .ini    Setting information

**Note**


You cannot load setting information unless the flicker measurement status is Reset. For more information about the flicker measurement status, see sections 8.1 and 8.2.

**Kinds of File Information**

- Date: When the file was saved. Displayed in this format: year/month/day hour:minute:second
- Report Title (See section 10.1)
- Report Comment (See section 10.1)
- General Data: If data acquired in General mode (normal voltage fluctuation and flicker measurement) is contained in the file, an asterisk appears here.
- Manual Data: If data acquired in Manual mode (measurement of dmax caused by manual switching) is contained in the file, an asterisk appears here.
- Click ▼ or ▲ to switch between sorting in ascending and descending order.

## 6.1 Establishing a New Connection Between the PC and a WT

### Procedure

1. Select the  icon in the menu area. The Connection submenu appears.




## 6.1 Establishing a New Connection Between the PC and a WT

---

### Connection Condition

2. Select **New Connection**.

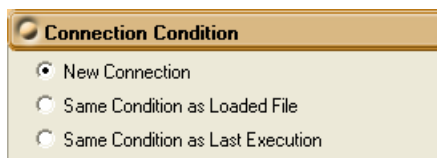


The screenshot shows a dialog box titled "Connection Condition". It contains three radio button options: "New Connection" (which is selected), "Same Condition as Loaded File", and "Same Condition as Last Execution".

### Note

- You can only select Same Condition as Loaded File if you load setting information or measured data using the procedure described in section 5.1.
  - You cannot select Same Condition as Last Execution when you first start up the software.
- 

### Connection Device


3. Select **GPIB** or **Ethernet**.
  - If you select GP-IB, proceed to step 4.
  - If you select Ethernet, proceed to step 5.

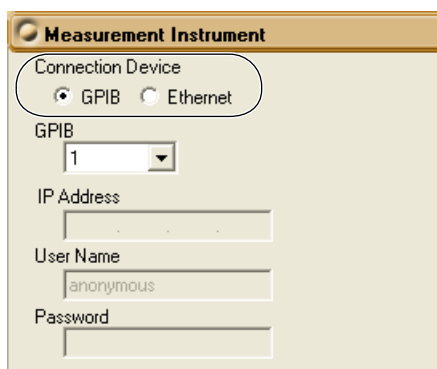

The screenshot shows a dialog box titled "Measurement Instrument". Under the "Connection Device" section, the "GPIB" radio button is selected. Below this, there are input fields for "GPIB" (showing "1"), "IP Address", "User Name" (showing "anonymous"), and "Password".

### Selecting a Communication Address (GP-IB)

4. Select the GP-IB address of the WT that you intend to connect to.

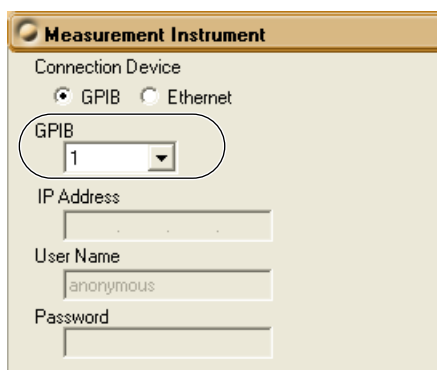

This screenshot is identical to the previous one, but the "GPIB" dropdown menu, which currently shows the value "1", is circled to indicate the selection step.

Proceed to step 6.


### Note

GP-IB address number 0 is reserved for the PC and cannot be selected.

---

**Setting the IP Address, User Name, and Password (Ethernet)**

5. Set the IP address, user name, and password of the WT that you intend to connect to.

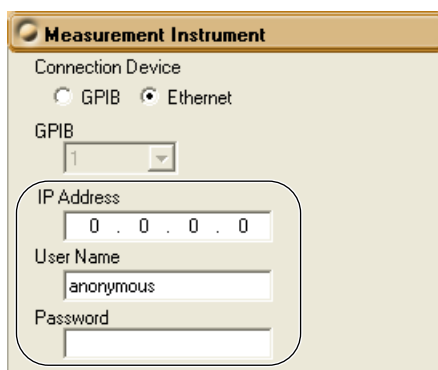


The **Measurement Instrument** dialog box contains the following fields:

- Connection Device:** Radio buttons for ☐ GPIB and ☒ Ethernet.
- GPIB:** A dropdown menu showing the value 1.
- IP Address:** A text field containing 0 . 0 . 0 . 0.
- User Name:** A text field containing anonymous.
- Password:** An empty text field.

**Making the Connection**

6. Click **Start Online Connection**. The software will establish a connection between the PC and the WT. The configuration and measurement operations listed onwards can be performed once the software has automatically determined that communication is possible.

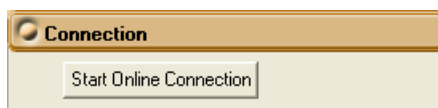

The **Connection** dialog box contains a single button labeled **Start Online Connection**.

**Note**

- You cannot proceed to measurement, analysis, printing, or saving until an online connection has been established.
- If you click Start Online Connection and establish a connection, but the connected WT is not in a measurement-ready state, a communication error will occur. If the GP-IB address, IP address, user name, or password is wrong, or if the PC is simply unable to connect to the WT, a communication error will occur.


### Explanation

#### Selecting a Communication Address

- **GP-IB**
  - Select the GP-IB address of the WT that you intend to connect to.  
Selectable range: 1 to 30
- **Ethernet**
  - Set the IP address of the WT that you intend to connect to.  
Selectable range: 0.0.0.0 to 255.255.255.255
  - You can set the user name and password of the WT that you intend to connect to.  
Usable characters: Those characters that the WT supports.

#### Displaying Connection Conditions and Status

The connection conditions that you set in the Connection submenu appear in the setting and display area along with the current connection status.

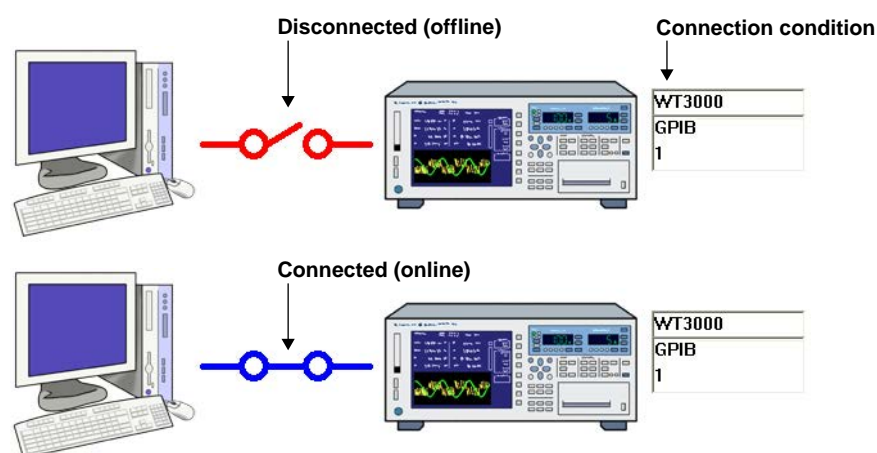

The connection status also appears in the information area.




#### Note


- It can take more than 10 seconds to switch from offline to online mode.
- We recommend that you use a National Instruments GP-IB card. GP-IB cards made by other companies may not function properly.

## 6.2 Using the Connection Settings from a Loaded File

### Procedure



1. Select the  icon in the menu area. The Connection submenu appears. For general information about the Connection submenu, see section 6.1.
2. Select **Same Condition as Loaded File** under Connection Condition.

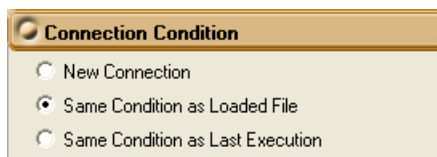


### Note

You can only select Same Condition as Loaded File if you load setting information using the process described in section 5.1.

### Making the Connection

3. Click **Start Online Connection**. The software will establish a connection between the PC and the WT. The configuration and measurement operations listed onwards can be performed once the software has automatically determined that communication is possible.



### Note

- You cannot proceed to measurement, analysis, printing, or saving until an online connection has been established.
- If you click Start Online Connection and establish a connection, but the connected WT is not in a measurement-ready state, a communication error will occur. If the GP-IB address, IP address, user name, or password is wrong, or if the PC is simply unable to connect to the WT, a communication error will occur.


### Explanation


Follow this procedure to use the settings from a file that has been loaded according to the procedure described in "Loading Setting Information" in section 5.1.



## 6.3 Using the Same Connection Settings as Before

### Procedure

1. Select the  icon in the menu area. The Connection submenu appears. For general information about the Connection submenu, see section 6.1.
2. Select **Same Condition as Last Execution** under Connection Condition.

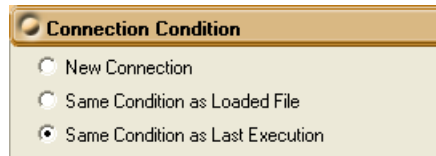

### Note

You cannot select Same Condition as Last Execution when you first start up the software.

### Making the Connection

3. Click **Start Online Connection**. The software will establish a connection between the PC and the WT. The configuration and measurement operations listed onwards can be performed once the software has automatically determined that communication is possible.



### Note


- You cannot proceed to measurement, analysis, printing, or saving until an online connection has been established.
- If you click Start Online Connection and establish a connection, but the connected WT is not in a measurement-ready state, a communication error will occur. If the GP-IB address, IP address, user name, or password is wrong, or if the PC is simply unable to connect to the WT, a communication error will occur.

### Explanation

Follow this procedure to set the connection settings to the same as when you last closed this software.

## 6.4 Ending a Connection by Switching to Offline Mode

### Procedure


1. Select the  icon in the menu area. The Connection submenu appears. For general information about the Connection submenu, see section 6.1.
2. When you are in online mode, click **Exit online connection**. The software will disconnect from the WT.



## 7.1 Setting General Test Conditions

### Procedure


1. Select the  icon in the menu area. The Setting submenu appears.

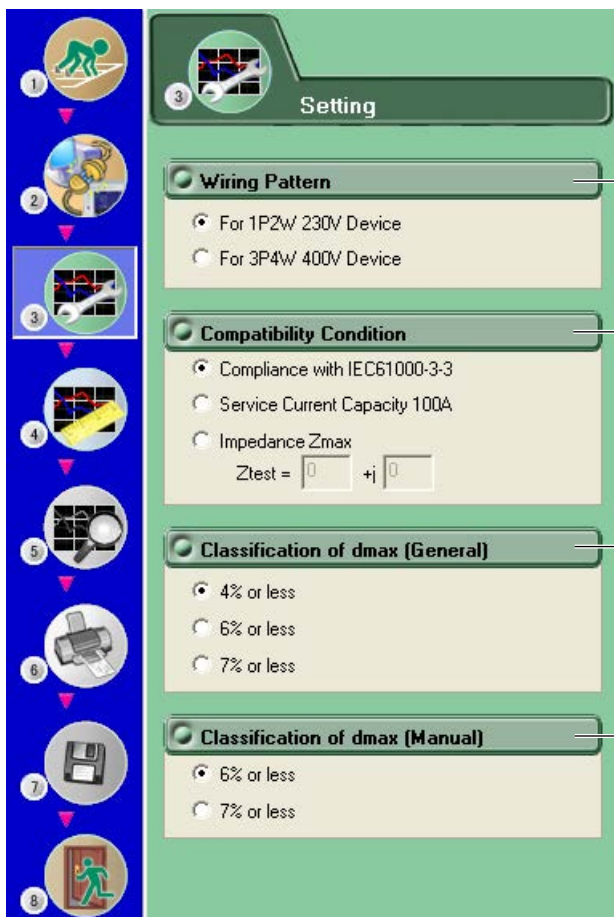

**Setting**

- Wiring Pattern** (page 7-2)  
Select the wiring pattern of the circuit you will measure.
  - ☒ For 1P2W 230V Device
  - ☐ For 3P4W 400V Device
- Compatibility Condition** (page 7-2)  
Select the appropriate compatibility condition.
  - ☒ Compliance with IEC61000-3-3
  - ☐ Service Current Capacity 100A
  - ☐ Impedance  $Z_{max}$   
 $Z_{test} = \boxed{0} + j \boxed{0}$
- Classification of dmax (General)** (page 7-2)  
When making normal voltage fluctuation and flicker measurements (General mode), select the dmax classification here.
  - ☒ 4% or less
  - ☐ 6% or less
  - ☐ 7% or less
- Classification of dmax (Manual)** (page 7-3)  
When measuring the dmax caused by manual switching (Manual dmax mode), select the dmax classification here.
  - ☒ 6% or less
  - ☐ 7% or less


In the setting and display area, you can switch between basic settings and advanced settings by clicking these buttons:  . For details, see sections 7.2 and 7.3.

 Basic settings

 Advanced settings

### Wiring Pattern

2. Select the wiring pattern of the circuit you will measure.

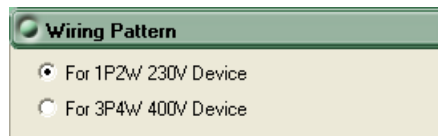

The screenshot shows a dialog box titled "Wiring Pattern". It contains two radio button options: "For 1P2W 230V Device" (which is selected) and "For 3P4W 400V Device".


### Note

When you switch wiring patterns, the following settings, which are displayed in the setting and display area, will change to default values that are appropriate to the wiring pattern that you select. For details, see sections 7.2 and 7.3.

- The WT3000 settings (the settings on the WT Measurement Instrument tab)
  - The testing judgment conditions (the settings under the Standard tab).
- 


### Compatibility Condition

3. Select the appropriate compatibility condition.  
If you select Impedance Zmax, proceed to step 4.  
Otherwise, proceed to step 5.

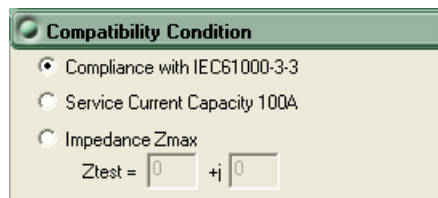

The screenshot shows a dialog box titled "Compatibility Condition". It has three radio button options: "Compliance with IEC61000-3-3" (selected), "Service Current Capacity 100A", and "Impedance Zmax". Below the options, the text "Ztest = " is followed by two input fields: the first contains "0" and the second contains "0", separated by "+j".


4. Set Ztest.

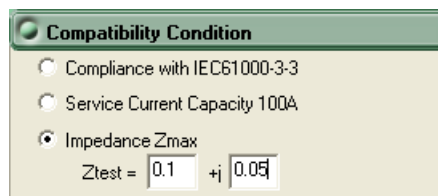

The screenshot shows the same "Compatibility Condition" dialog box. The "Impedance Zmax" radio button is now selected. The input fields for Ztest now contain "0.1" and "0.05", resulting in the display "Ztest = 0.1 +j 0.05".

### Classification of dmax (General)

5. When making normal voltage fluctuation and flicker measurements (General mode), select the dmax classification here.

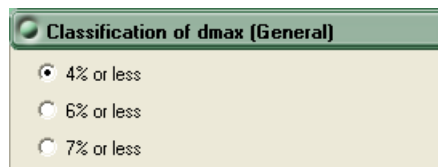

The screenshot shows a dialog box titled "Classification of dmax (General)". It contains three radio button options: "4% or less" (selected), "6% or less", and "7% or less".

### Note

When you change this setting, the dmax setting that is displayed under Judge (General) on the WT Measurement Instrument tab in the setting and display area will also change. For details, see section 7.3.

---

### Classification of dmax (Manual)

6. When measuring dmax caused by manual switching (Manual dmax mode), select the dmax classification here.

#### Note

When you change this setting, the dmax setting that is displayed under Judge (Manual) on the WT Measurement Instrument tab in the setting and display area will also change. For details, see section 7.3.

### Explanation

#### Compatibility Condition

Choose from one of the following three compatibility conditions (see section 1.3 for information about the standards).

##### Compliance with IEC 61000-3-3

The test impedance is the reference impedance  $Z_{ref}$  specified in IEC 61000-3-3. The limits used for judgments are also the same as those specified in IEC 61000-3-3.

If a device passes a test when this condition is selected, it can be called "IEC 61000-3-3 compliant."

##### Service Current Capacity 100A

The impedances used in the test are as follows:

- Single-phase device:  $Z_{test} = 0.25 + j0.25$
- Three-phase device:  $Z_{test} = 0.15 + j0.15$

The limits used for judgments are the same as those specified in IEC 61000-3-11. If a device passes a test when this condition is selected, it can be said to be compliant with IEC 61000-3-11 requirements for service current capacities greater than or equal to 100 A.

##### Impedance $Z_{max}$

$Z_{test}$  equations are as follows:

$$Z_{test} = R_{test} \text{ (resistance)} + jX_{test} \text{ (reactance)}$$

The settable range for  $R_{test}$  and  $X_{test}$  is 0.00 to 1.00.

Set the values such that:

- The EUT voltage drop is 3 to 5%.
- The ratio of  $X_{test}$  over  $R_{test}$  is 0.5 to 0.75.

The test will be performed using the impedance  $Z_{test}$ . The software calculates what the results of the test would have been had it been performed with the impedance  $Z_{ref}$ , and it compares those results with the IEC 61000-3-11 limits.

If a device passes a test when this condition is selected, it can be called "IEC 61000-3-3 compliant."



If the device does not pass this test, the minimum value for  $Z_{sys}$  will be calculated and displayed as the value  $Z_{max}$ . Then, you can say that the device is compliant with IEC 61000-3-11 for impedances below  $Z_{max}$ .

#### Classification of dmax

The limit dmax is 4, 6, or 7% depending on the conditions. For information about the conditions that affect dmax, see section 1.3.

## 7.2 Setting the WT3000 Measurement Conditions


### Procedure

1. Select the **WT Measurement Instrument** tab in the setting and display area. The WT3000 measurement condition configuration dialog box appears.
2. Click the basic settings button () or the advanced settings button () .
3. Configure the various settings.

### Note

When you select the basic settings button, the following settings are unavailable. To adjust these settings, click the advanced settings button.

- Filter Copy Exec
- Scaling ON/OFF

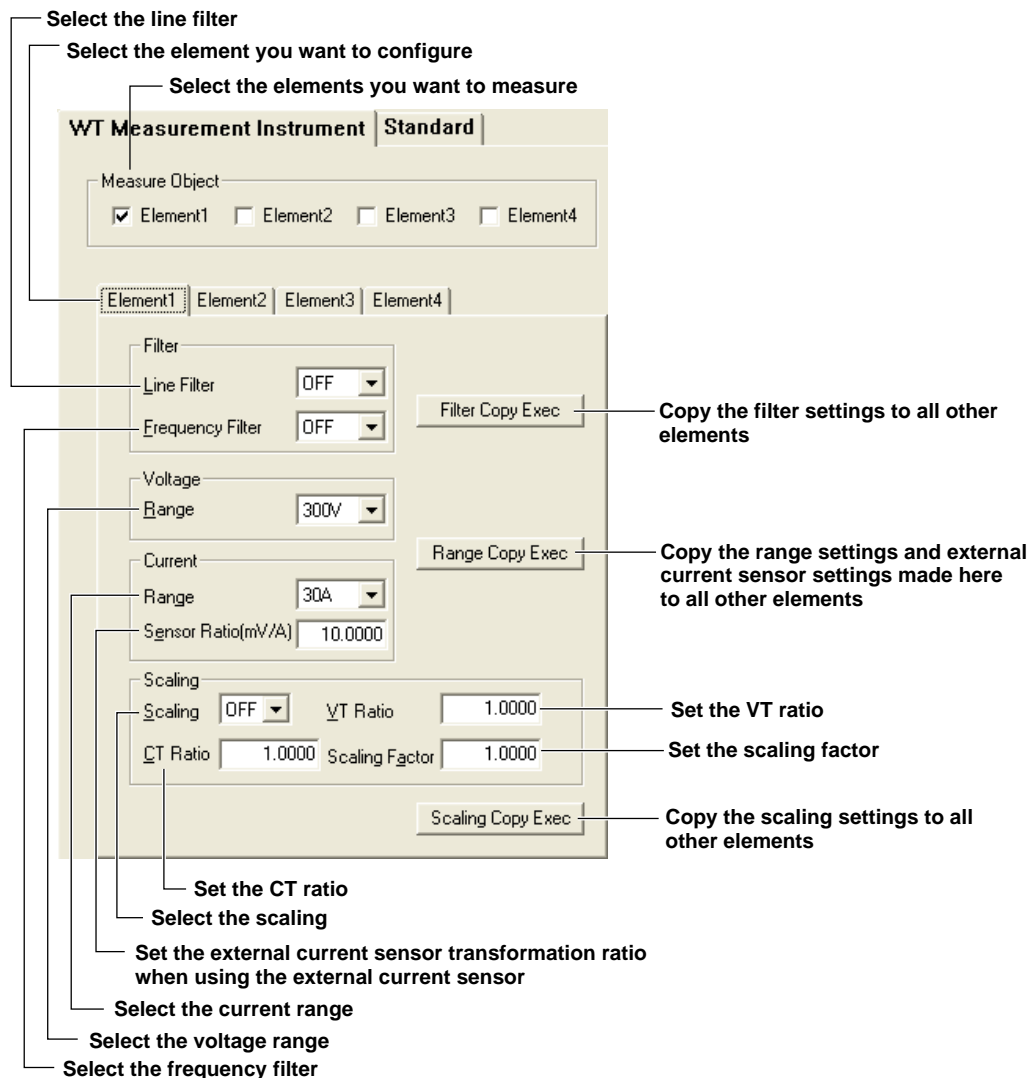

**Explanation****Measure Object**

Select the object whose voltage fluctuation and flicker will be measured. The equipped elements are displayed as settable objects.

**Copying the Line Filter**

You can copy the line filter settings configured for one element to all other elements with the same wiring.

**Copying the Frequency Filter**

You can copy the frequency filter settings configured for one element to all other elements with the same wiring.

**Copying the Range**

You can copy the range settings configured for one element to all other elements with the same wiring. The voltage range, the current range, and the external current sensor range are copied.

**Copying the Scaling Settings**

You can copy the scaling settings configured for one element to all other elements with the same wiring. The settings that are copied are:

- VT ratio
- CT ratio
- Scaling factor

For information about the following settings and how to make settings from the WT, see the *WT3000 User's Manual (IM760301-01E)*.

Setting	Corresponding section in the user's manual	
Line filter	IM760301-01E	Section 4.8
Frequency filter	IM760301-01E	Section 4.8
Voltage/current range	IM760301-01E	Sections 4.3 and 4.4
Scaling	IM760301-01E	Section 4.5

**Note**


You can only change measurement conditions in online mode with the flicker measurement status set to Reset. For more information about the flicker measurement status, see sections 8.1 and 8.2.

## 7.2 Setting the WT3000 Measurement Conditions

### Setting Changes Based on Wiring Pattern Selection


When you select a wiring pattern in the Setting submenu, the settings marked off in the following figures change to their default values. The values in the figures are the default values.

- Changes when you select “For 1P2W 230V Instrument.”

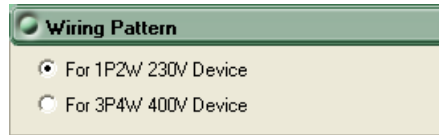

The dialog box titled "Wiring Pattern" contains two radio button options. The first option, "For 1P2W 230V Device", is selected with a filled circle. The second option, "For 3P4W 400V Device", is unselected with an empty circle.

Element1 selected. Element2 to Element4 deselected.

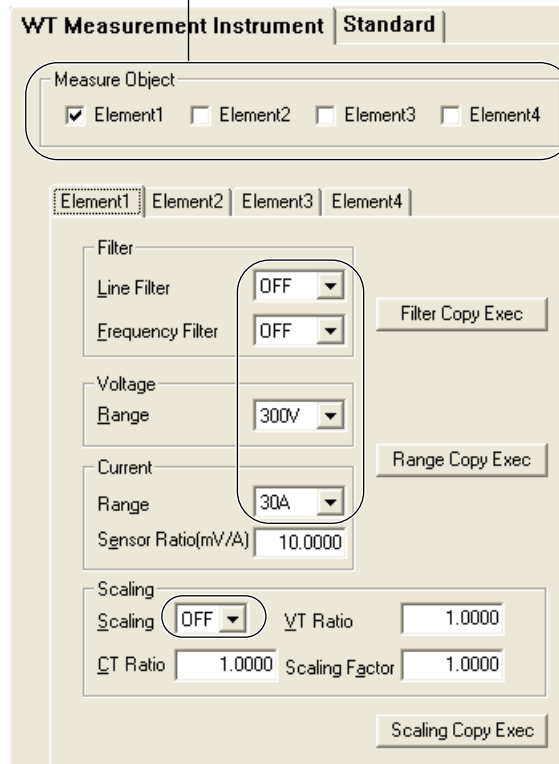

The "WT Measurement Instrument" window is shown with the "Standard" tab selected. The "Measure Object" section has checkboxes for Element1 (checked), Element2, Element3, and Element4. Below this, tabs for Element1, Element2, Element3, and Element4 are visible, with Element1 being the active tab. The settings for Element1 are displayed in a grouped box. The "Filter" section includes "Line Filter" and "Frequency Filter", both set to "OFF". The "Voltage" section shows the "Range" set to "300V". The "Current" section shows the "Range" set to "30A" and the "Sensor Ratio(mV/A)" set to "10.0000". The "Scaling" section shows "Scaling" set to "OFF", "VT Ratio" set to "1.0000", "CT Ratio" set to "1.0000", and "Scaling Factor" set to "1.0000". Buttons for "Filter Copy Exec", "Range Copy Exec", and "Scaling Copy Exec" are located to the right of their respective sections.



- Changes when you select “For 3P4W 400V Instrument.”

**Wiring Pattern**

☐ For 1P2W 230V Device  
☒ For 3P4W 400V Device

Element1 to Element3 selected. Element4 deselected.

**WT Measurement Instrument** | **Standard**

Measure Object

☒ Element1
 ☒ Element2
 ☒ Element3
 ☐ Element4

Element1 | Element2 | Element3 | Element4

Filter

Line Filter

Frequency Filter

Filter Copy Exec

Voltage

Range

Range Copy Exec

Current

Range

Sensor Ratio(mV/A)

Scaling

Scaling



VT Ratio

CT Ratio  Scaling Factor

Scaling Copy Exec

## 7.3 Setting the WT3000 Judgment Conditions

### Procedure

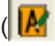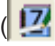1. Select the **Standard** tab in the setting and display area. The judgment condition configuration dialog box appears.
2. Click the basic settings button (  ) or the advanced settings button (  ).
3. Configure the various settings.

### Note

When you select the basic settings button, the following settings are unavailable. To adjust these settings, click the advanced settings button.

- Compatibility Condition
- Measure Mode
- Frequency
- Count

When measured data has been loaded, the normal voltage fluctuation and flicker measurement judgment condition d(t), located under Judge (General), is unavailable.

**Measure Mode**  
**General Mode:** Normal voltage fluctuation and flicker measurement  
**Manual dmax Mode:** Manual switching dmax measurement

Turn measurement of dmax caused by manual switching (Manual dmax Mode) ON or OFF and set the dmax limit.

Turn ON or OFF all of the judgment conditions for normal voltage fluctuation and flicker measurement (General Mode) and set each condition's limits.

**Compatibility Condition**  
Same as the compatibility condition settings in the submenu. (see page 7-2)

**Edition No. of the IEC 61000-4-15 (Ed1.1, Ed2.0)**

**Rated voltage assignment method (AUTO, SET)**

**Measurement target frequency**


**Steady-state range**

**Rated voltage (Valid when SET is selected)**

**Measurement target voltage (displayed when the edition number of the IEC 61000-4-15 is Ed2.0)**

**Measurement count (Valid with normal voltage fluctuation and flicker measurement.)**

**Length of one observation period (Valid with normal voltage fluctuation and flicker measurement.)**

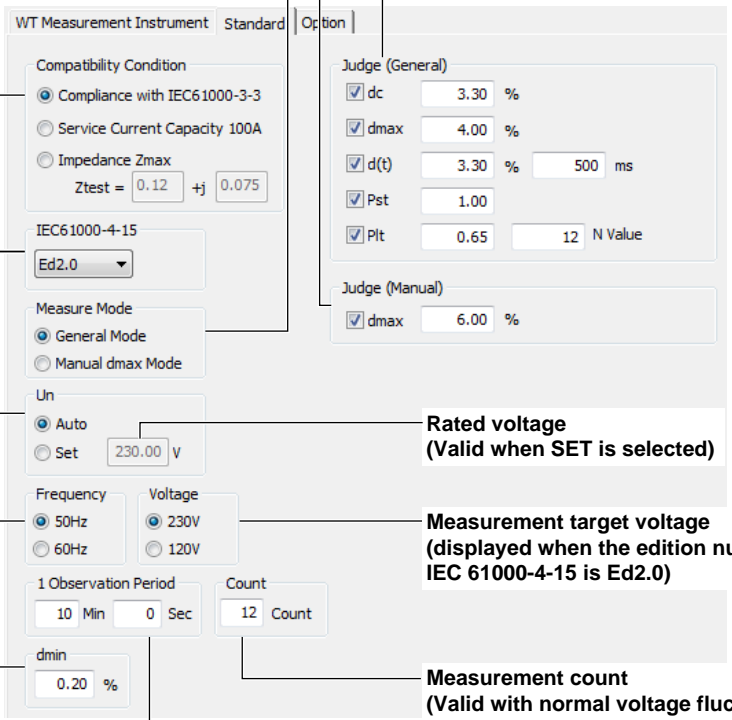

**Explanation**

For an explanation of the terminology, see section 1.5.

**Edition of the Standard**

In WT firmware versions 5.21 and later, you can select the IEC 61000-4-15.

**Edition No. of the IEC 61000-4-15**

- Edition 1.1
- Edition 2.0

IEC 61000-4-15 specifies requirements for measurement instruments. For details, see chapter 14. In WT3000 firmware versions 4.01 to 5.20, the edition is fixed at IEC 61000-4-15 edition 1.1.

**Measure Mode**

Select the voltage fluctuation and flicker measurement method from the two methods below.

- General Mode (normal voltage fluctuation and flicker measurement)  
Judges whether values such as  $d_c$ ,  $d_{max}$ ,  $d(t)$ , and  $P_{st}$  are within the specified limits.
- Manual  $d_{max}$  Mode (measurement of  $d_{max}$  caused by manual switching)  
You manually turn the EUT switch ON. The WT3000 measures the voltage fluctuation caused by the inrush current that flows when the power is turned ON, and judges whether the  $d_{max}$  average is within the specified limits.

**Rated Voltage ( $U_n$ )**

You can select the assignment method of the rated voltage.

- AUTO  
Automatically retrieves the measured voltage at the start of the voltage fluctuation and flicker measurement as the rated voltage.
- SET  
You can set the rated voltage in the range of 0.01 to 999.99 V.

**Measurement Target Frequency**

You can set the measurement target frequency to 50 Hz or 60 Hz.

Set the measurement source frequency appropriately as the transfer function of the flicker meter and other parameters change accordingly.

If the measurement mode is set to General Mode (normal voltage fluctuation and flicker measurement), you must set the single observation period, measurement count, and steady-state range.

**Measurement Target Voltage (Displayed when IEC 61000-4-15 Ed2.0 is selected)**

You can set the measurement target voltage to 230 V or 120 V.

Set the measurement source voltage appropriately as the transfer function of the flicker meter and other parameters change accordingly.

**1 Observation Period**

You can set the single observation period of short-term flicker value  $P_{st}$  in unit of minutes and seconds in the following range.

00:30 to 15:00 (only even values can be specified for the seconds)

### 7.3 Setting the WT3000 Judgment Conditions

#### Measurement Count

You can set the measurement count of short-term flicker value Pst in the range of 1 to 99.

#### Steady-State Range (dmin: Allowable Range of Relative Voltage Change to Be Considered Steady-State)

You can set steady-state range dmin in the range of 0.10 to 9.99%.

### Normal Voltage Fluctuation and Flicker Measurement (General Mode)

#### Judgment Conditions for Relative Steady-State Voltage Change dc

- **Turning ON/OFF the Judgment of Relative Steady-State Voltage Change dc**

You can select whether to include relative steady-state voltage change dc in the flicker measurement judgment.

- **Limit on Relative Steady-State Voltage Change dc**

You can set the limit in the range of 1.00 to 99.99%.

#### Judgment Conditions for Maximum Relative Voltage Change dmax

- **Turning ON/OFF the Judgment of Maximum Relative Voltage Change dmax**

You can select whether to include maximum relative voltage change dmax in the flicker measurement judgment.

- **Limit on Maximum Relative Voltage Change dmax**

You can set the limit in the range of 1.00 to 99.99%.

However, after you set a value, if you perform step 5 on page 7-2, the limit will be changed to the value you set there.

The screenshot displays the 'Setting' menu on the left, with 'Wiring Pattern', 'Compatibility Condition', 'Classification of dmax (General)', and 'Classification of dmax (Manual)' options. The main panel is titled 'WT Measurement Instrument' and 'Standard'. It contains several sections: 'Compatibility Condition' with radio buttons for 'Compliance with IEC61000-3-3', 'Service Current Capacity 100A', and 'Impedance Zmax'; 'Measure Mode' with radio buttons for 'General Mode' and 'Manual dmax Mode'; 'Un' with radio buttons for 'Auto' and 'Set' (set to 230.0 V); 'Frequency' with radio buttons for '50Hz' and '60Hz'; '1 Observation Period' with '10 Min' and '0 Sec' fields; 'Count' with '12 Count' field; 'dmin' with '0.10 %' field; 'Judge (General)' with checkboxes for 'dc', 'dmax', 'd(t)', 'Pst', and 'Plt' (set to 0.65), and 'N Value' (set to 12); and 'Judge (Manual)' with a checkbox for 'dmax' (set to 6.00 %). An arrow points from the 'Classification of dmax (General)' section to the 'dmax' checkbox in the 'Judge (General)' section.

### Judgment Conditions for Period during Which Relative Voltage Change Exceeds the Threshold Level d(t)

- **Turning ON/OFF the Judgment of Period during Which Relative Voltage Change Exceeds the Threshold Level d(t)**

You can select whether to include the period during which the relative voltage change exceeds the threshold level d(t) in the flicker measurement judgment.

- **Threshold Level**

You can set the threshold level in the range of 1.00 to 99.99%.

- **Limit on the Period during Which Relative Voltage Change Exceeds the Threshold Level d(t)**

You can set the limit in the range of 1 to 99999 ms.

### Judgment Conditions for Short-Term Flicker Value Pst

- **Turning ON/OFF the Judgment of Short-Term Flicker Value Pst**

You can select whether to include short-term flicker value Pst in the flicker measurement judgment.

- **Limit on Short-Term Flicker Value Pst**

You can set the limit in the range of 0.10 to 99.99.

### Judgment Conditions for Long-Term Flicker Value Plt

- **Turning ON/OFF the Judgment of Long-Term Flicker Value Plt**

You can select whether to include long-term flicker value Plt in the flicker measurement judgment.

- **Limit on Long-Term Flicker Value Plt**

You can set the limit in the range of 0.10 to 99.99.

- **Constant N of the Calculating Equation of Long-Term Flicker Value Plt**

You can set constant N in the range of 1 to 99.

#### Note

- The long-term flicker value (Plt) is computed using the following equation.

$$Plt = \sqrt[3]{\frac{\sum_{i=1}^{Count} Psti^3}{N}}$$

The variable Count in the equation is the measurement count of short-term flicker value (Pst). The variable N in the equation is the constant of the calculating equation of long-term flicker value (Plt).

In general, set Count and N to the same value.

If N is set greater than Count, the short-term flicker value is measured the number of times specified by Count. The short-term flicker values (Pst) that are not measured are substituted with zeroes in the above equation to calculate the long-term flicker value (Plt). N is set greater than Count such as when the measured source automatically stops within the specified observation time.

- You can change the judgment conditions only in On-Line Mode when the flicker measurement status is Reset or Complete. For details on the flicker measurement status, see section 8.1 or 8.2.
- You can set judgment conditions on items other than dmax during the measurement of dmax caused by manual switching, but judgment is not performed on them.

### Judgment Conditions for Measurement of dmax Caused by Manual Switching (Manual dmax mode)

#### Judgment Conditions for Maximum Relative Voltage Change dmax

- **Turning ON/OFF the Judgment of Maximum Relative Voltage Change dmax**  
You can select whether to include maximum relative voltage change dmax in the flicker measurement judgment.
- **Limit on Maximum Relative Voltage Change dmax**  
You can set the limit in the range of 1.00 to 99.99%.

However, after you set a value, if you perform step 5 on page 7-2, the limit will be changed to the value you set there.

The screenshot shows the 'Setting' menu on the left with four options: 'Wiring Pattern', 'Compatibility Condition', 'Classification of dmax (General)', and 'Classification of dmax (Manual)'. The 'Classification of dmax (Manual)' option is selected and highlighted with a red circle. An arrow points from this option to the 'WT Measurement Instrument' window on the right. In this window, the 'Judge (Manual)' section is visible, showing 'dmax' set to 6.00%.

### How Settings Change Based on the Selected Wiring Pattern

When you select a wiring pattern in the Setting submenu, the settings marked off in the figure below change to their default values. The values in the figure below are the default values.



The screenshot shows the 'WT Measurement Instrument' window with the 'Standard' tab selected. The 'Compatibility Condition' section has 'Compliance with IEC61000-3-3' selected. The 'Measure Mode' section has 'General Mode' selected. The 'Un' section has 'Auto' selected. The 'Frequency' section has '50Hz' selected. The '1 Observation Period' section has '10 Min' and '0 Sec' selected. The 'Count' section has '12 Count' selected. The 'dmin' section has '0.10 %' selected. The 'Judge (General)' section has 'dc', 'dmax', 'd(t)', 'Pst', and 'Plt' all checked. The 'Judge (Manual)' section has 'dmax' checked.


## 7.4 Setting the Optional Conditions

### Procedure

1. Select the **Option** tab in the setting and display area. The optional condition configuration dialog box appears.
2. Configure the various settings.

### Note

The items that you can set are the same whether you press the basic settings button  or the advanced settings button .

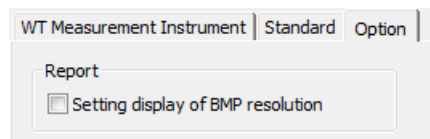

### Explanation

#### Report

Setting display of BMP resolution


In the BMP item under Output Form of the Print menu, the selectable output resolutions appear. (See section 10.2.)


## 8.1 Executing the Normal Voltage Fluctuation and Flicker Measurement

A normal voltage fluctuation and flicker measurement complying with IEC 61000-3-11 is executed.

Calculates all the voltage fluctuation and flicker values of  $d_c$ ,  $d_{max}$ ,  $d(t)$ ,  $P_{st}$ , and  $Plt$ , compares them to the preset limits, and indicates the overall judgment.

### Procedure

1. Select the  icon in the menu area. The submenu that appears will vary depending on the compatibility condition that you select according to the procedure described in section 7.1.
  - The submenu pictured below will appear when the compatibility condition is Impedance  $Z_{max}$ .
  - When the compatibility condition is Compliance with IEC 61000-3-3 or Service Current Capacity 100A, the submenu pictured on the next page will appear.

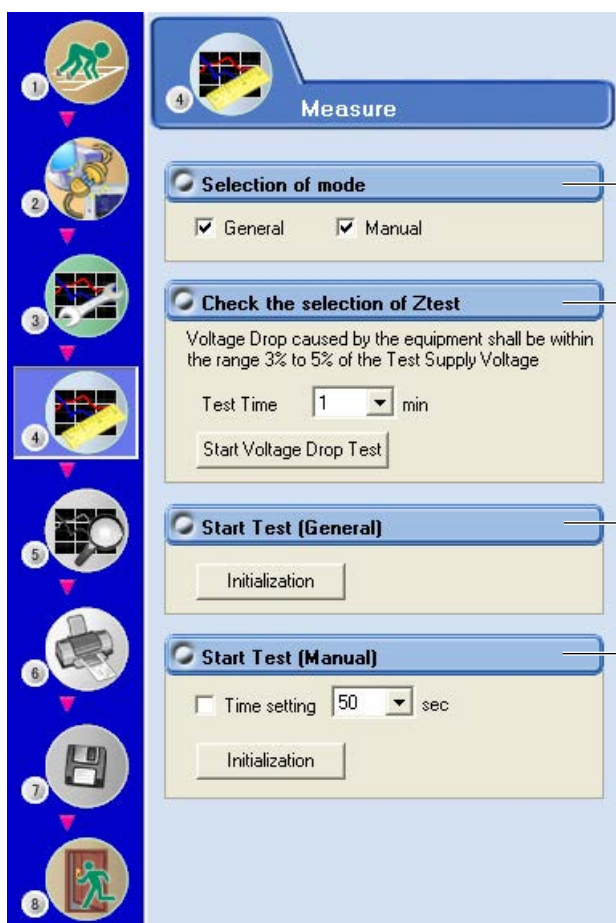

**Selection of mode (page 8-3)**  
Select which kind of measurement to perform.


**Check the selection of Ztest (page 8-3)**  
The software will confirm whether or not the voltage drop caused by the EUT is 3 to 5% of the test supply voltage.

**Start Test (General) (page 8-3)**  
Perform normal voltage fluctuation and flicker measurement (General mode).


**Start Test (Manual) (page 8-12)**  
Perform measurement of  $d_{max}$  caused by manual switching (Manual mode).



## 8.1 Executing the Normal Voltage Fluctuation and Flicker Measurement

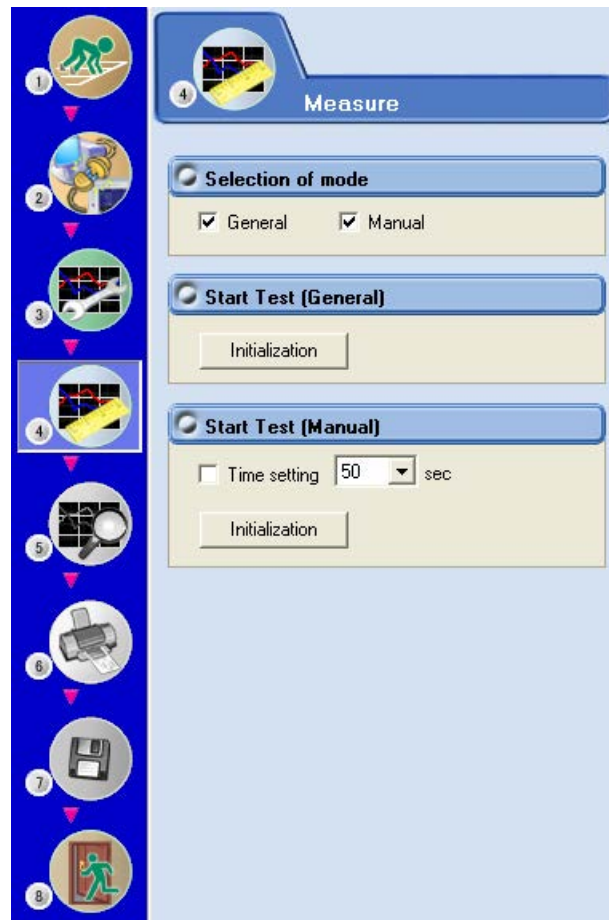


Upper portion of the setting and display area (icons that cannot be selected are grayed out):

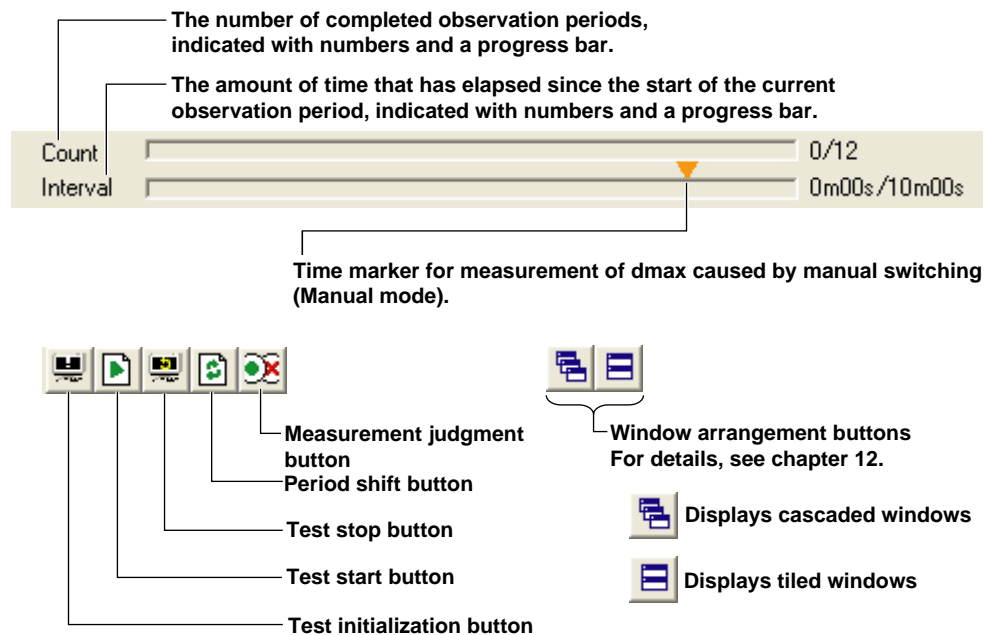

**Selecting a Test Mode**


2. Select **General**.

**Checking the Ztest Selection**

This item appears when you have selected Impedance Zmax as the compatibility condition according to the procedure described in section 7.1.


The software will confirm whether or not the voltage drop caused by the EUT is 3 to 5 % of the test supply voltage.



3. Set the test time.
4. Click **Start Voltage Drop Test**.

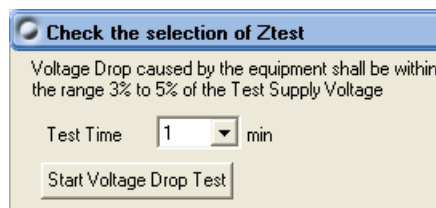**Starting a Compliancy Test**

Check that the software is in On-Line mode and that the flicker measurement status is indicating Reset (condition in which the measured value is reset and initialization can be executed). If not, set the flicker measurement status to Reset according to the procedure in "Resetting the Measurement" on page 8-7.

**Initializing a Test**

Click **Initialization** under Start Test (General) or click the  button. The initialization dialog box appears, and initialization begins.

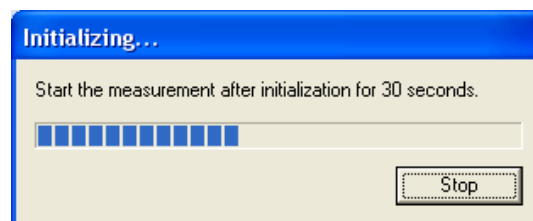

## 8.1 Executing the Normal Voltage Fluctuation and Flicker Measurement

Once initialization is complete, the initialization dialog box will automatically close, and the Numeric View window will display:


- The current measured values for Un[V] and Freq[Hz].
- “----” for dc[%], dmax [%], d(t)[ms], and Pst.

### **Note**

“----” will appear in every column for elements that you do not select under Measure Object in the Setting window.



	Un[V]	Freq[Hz]	dc[%]	dmax[%]	d(t)[ms]	Pst
Limit			3.30	4.00	500/3.30	1.
Element1	230.19	49.98	-----	-----	-----	-----
Element2	-----	-----	-----	-----	-----	-----
Element3	-----	-----	-----	-----	-----	-----

### Starting a Test


Click **Start Test** under Start Test (General) or click the  button. The Numeric View window will display:

- Fixed values for Un[V] and Freq[Hz]
- The maximum measured values within the observation period for dc[%], dmax [%], d(t)[ms], and Pst.

The bar and numbers next to Interval indicate how much time has passed. The bar and numbers next to Count indicate how many observation periods have finished. The measurement results appear in the Trend Graph View window.




	Un[V]	Freq[Hz]	dc[%]	dmax[%]	d(t)[ms]	Pst
Limit			3.30	4.00	500/3.30	1.
Element1	229.95	50.00	0.10 ----	0.57 ----	0.00 ----	-----
Element2	-----	-----	-----	-----	-----	-----
Element3	-----	-----	-----	-----	-----	-----

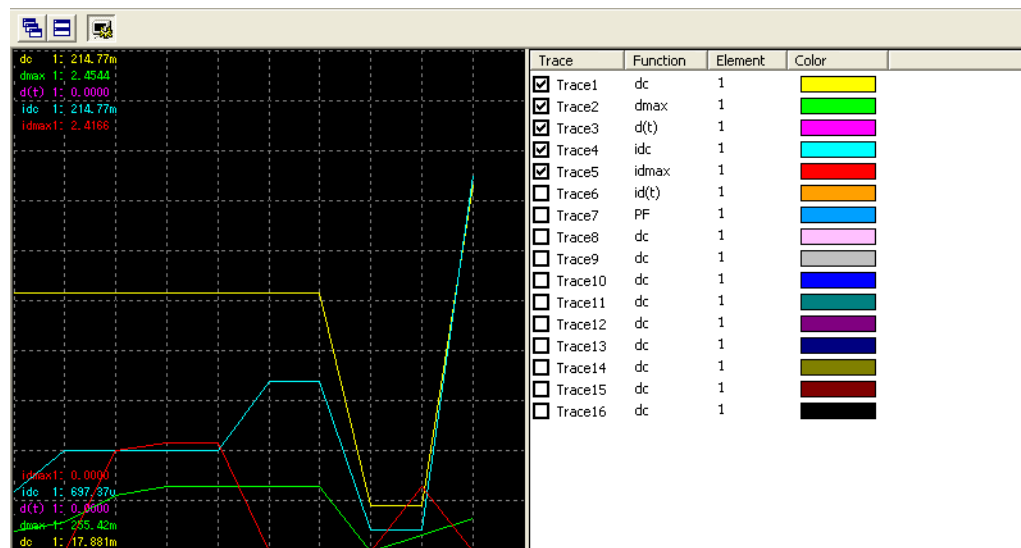


When the measurement of all observation periods is complete, the normal voltage fluctuation and flicker measurement automatically stops. The result and judgment are displayed.

	Un[V]	Freq[Hz]	dc[%]	dmax[%]	d(t)[ms]	Pst
Limit			3.30	4.00	500/3.30	1.
Element1	229.95	50.00	0.52 Pass	1.75 Pass	0.00 Pass	0.12 Pa
Element2	-----	-----	-----	-----	-----	-----
Element3	-----	-----	-----	-----	-----	-----

Stopping a Test

1. Click **Stop Test** under Start Test (General) or click the  button.
- The dialog box closes, and measurement stops. The measured data and test results are discarded, and Interval and Count in the Numeric View window are cleared.

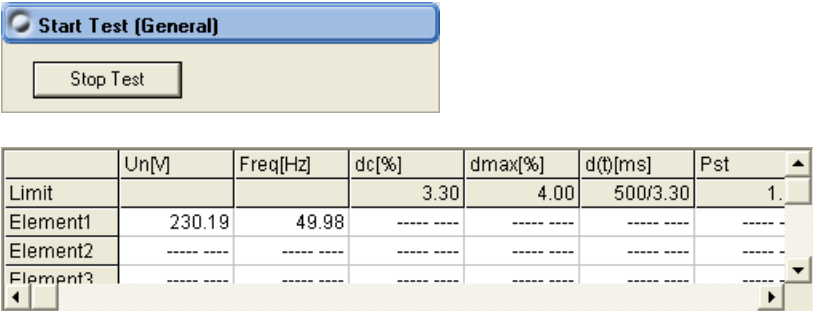


**Note**


If you click **Cancel**, the dialog box closes, and the measurement continues.

Changing the Judgment Conditions and Re-judging the Measured Data

When the normal voltage fluctuation and flicker measurement is complete, change the judgment conditions according to the procedure given in “Setting the Judgment Conditions” in chapter 6. If you change the judgment conditions, the measured voltage fluctuation and flicker data is re-judged, and the judgment is updated.

### Resetting a Test


1. Click **Stop Test** under Start Test (General) or click the  button.  
The dialog box closes, and measurement is reset. The measured data and test results are discarded, and Interval and Count in the Numeric View window are cleared.



### **Note**

If you do not want to reset the test, click **Cancel**.

## Setting the Trend Graph Traces

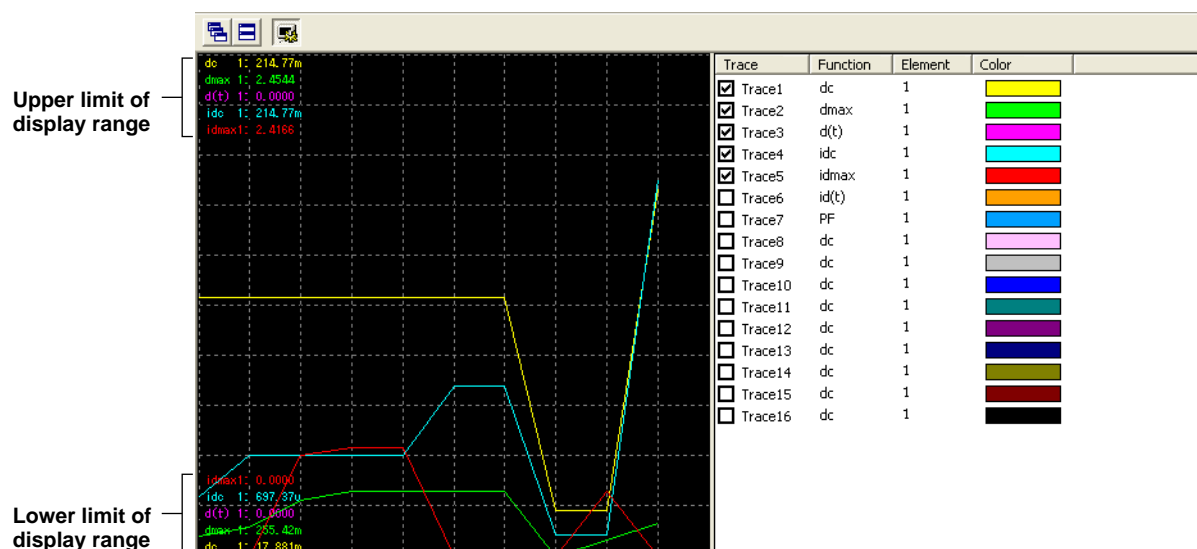

### Trace

Select the trends you want to display (select or clear the check boxes).  
Up to 16 trends can be displayed.

### Function

Select the measurement function to be displayed.

1. Click on the **Function** column. A combo box opens.
2. Select the measurement function.

### Note

You can select from the following measurement functions.

- dc Relative steady-state voltage change
- dmax Maximum relative voltage change
- d(t) Period during which relative voltage change exceeds the threshold level
- idc Instantaneous relative steady-state voltage change
- idmax Instantaneous maximum relative voltage change
- id(t) Period during which instantaneous relative voltage change exceeds the threshold level
- PF Instantaneous flicker sensation (IFS)

### Element

Select the element to be displayed.

1. Click on the **Element** column. A combo box opens.
2. Select the element.

### Color


Select the display color of the trend.

1. Click on the **Color** column. A combo box opens.
2. Select the display color of the trend.

## Explanation

## Display during Measurement

The figure below is a display example of normal voltage fluctuation and flicker measurement in progress.

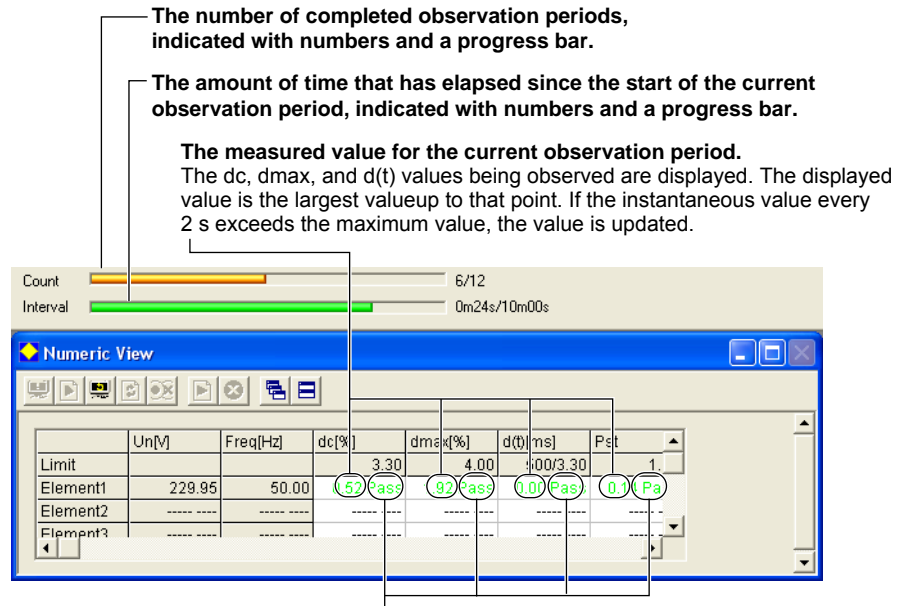


## Judgments displayed for completed observation periods


- The final values of dc, dmax, and d(t) are compared with the respective limits, and the judgment (pass or fail) is displayed.
- If a steady-state condition does not occur during the measurement period, it is considered to be a fluctuating condition. The measured value of dc is displayed as Undef (undefined, IEC 61000-4-15 Ed1.1) or 0 (IEC 61000-4-15 Ed2.0), and the judgment is displayed as Error (IEC 61000-4-15 Ed1.1) or Pass (IEC 61000-4-15 Ed2.0).
- The short-term flicker value, Pst, is calculated, compared to the limit, and the judgment (pass or fail) is displayed.
- The judgment of items whose judgment is turned OFF is displayed as Undef.

## Judgment Display after Measurement

Once the test is finished, the overall judgment appears in the information area.

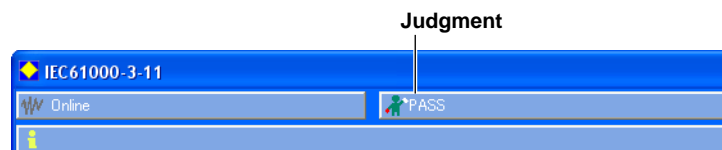

If all of the elements that are tested pass, PASS appears. Otherwise, FAIL appears.



PASS

Measurement ended without the relative voltage change ever having exceeded steady-state range dmin. (The measured values for dc, dmax, and d(t) were all 0.)

A steady-state condition did not occur in one or more observation periods (equivalent to dc = Undef in IEC 61000-4-15 Ed1.1).

\* Does not appear when Ed1.1 is selected.

FAIL

NoData



## 8.1 Executing the Normal Voltage Fluctuation and Flicker Measurement

---

### Selecting a Test Mode

- To perform a normal voltage fluctuation and flicker measurement (General mode), select General.
- To measure dmax caused by manual switching (Manual dmax mode), select Manual.
- You can also select both General and Manual.

### Initializing the Measurement

- The initialization takes approximately 30 s.
- Rms voltage Un and voltage frequency Freq are updated every 2 s while the initialization is in progress in the same manner as when the voltage fluctuation and flicker measurement is reset.
- Keep the voltage of the power supply to be measured in steady-state condition while the initialization is in progress.

### Rated Voltage Un and Voltage Frequency Freq

- If the assignment method of rated voltage is AUTO, the rms voltage at the start of measurement is used as rated voltage Un. The measured data is calculated with respect to rated voltage Un.
- If the assignment method of rated voltage is SET, the rated voltage setting is displayed as Un(Set).
- Rated voltage Un and voltage frequency Freq are not updated after the flicker measurement is started.

### Resetting a Test

To initialize and restart the measurement, reset the measurement after the normal voltage fluctuation and flicker measurement is complete and the flicker measurement status is indicating Complete. You cannot initialize or start the measurement in the Complete status.


In addition, reset the measurement to change the measurement conditions of the normal voltage fluctuation and flicker measurement (section 3.3).

### Flicker Measurement Status

The following five flicker measurement statuses are available.

Status	Meaning
Reset	Condition in which the measured value is reset and initialization can be executed.
Initializing	Initializing the measurement.
Ready	Initialized condition in which measurement can be started.
Start	Measurement in progress: Displays the elapsed time.
Complete	Displays the result (judgment by measurement item) and judgment (element judgment and overall judgment).

### Normal Voltage Fluctuation and Flicker Measurement Flowchart (Flicker Measurement Status Transitions)

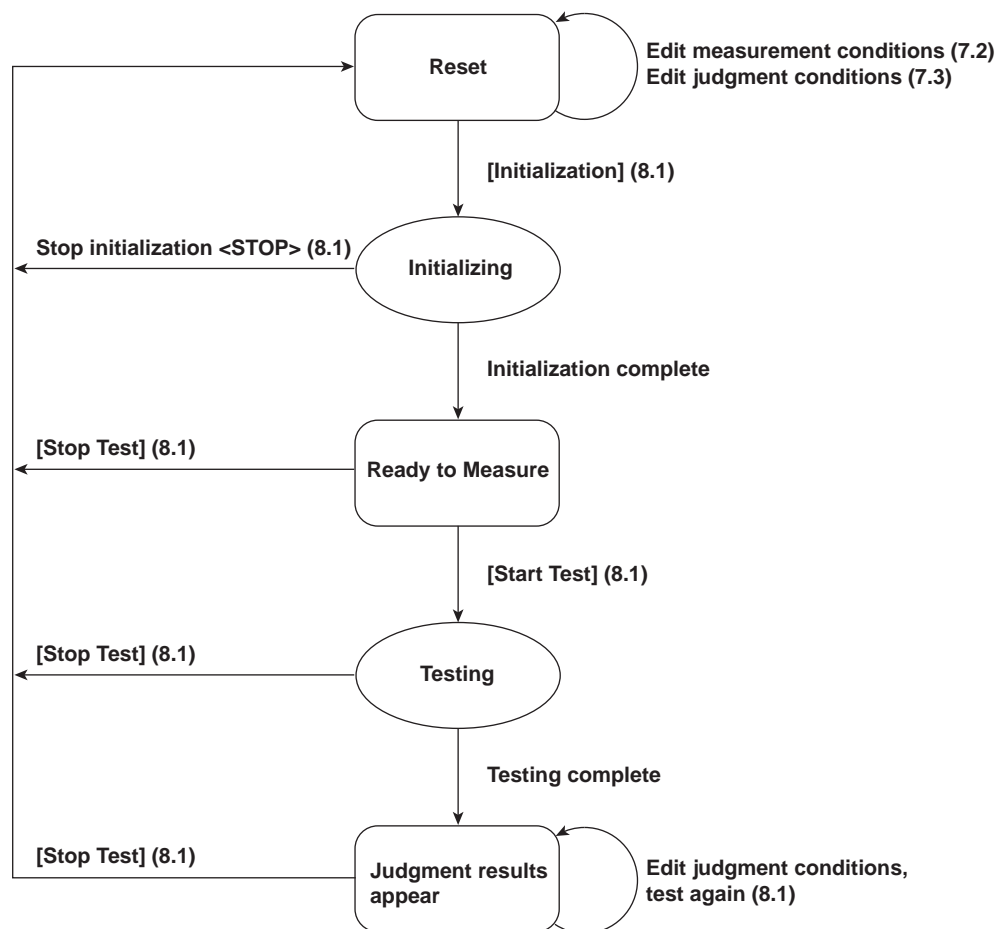

Numbers in parenthesis indicate relevant sections in the manual.

Brackets are used to indicate buttons or icons.


Greater than and less than signs are used to indicate buttons (i.e. <Stop Test>).

## 8.2 Executing the Measurement of dmax Caused by Manual Switching

Measurement of dmax caused by manual switching is executed.


Measures the maximum relative voltage change, dmax, when the EUT switch is manually turned ON and OFF, determines the average over 24 measurements, and compares and judges against the limit.

### Procedure

1. Select the  icon in the menu area. The Measure submenu appears. For general information about the Measure submenu, see section 8.1.

#### Selecting a Test Mode

2. Select **Manual**.

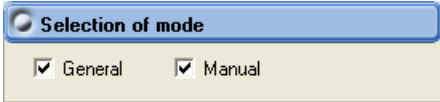

Selection of mode


☒ General ☒ Manual

#### Checking the Ztest Selection

This item appears when you have selected Impedance Zmax as the compatibility condition according to the procedure described in section 7.1.

The software will confirm whether or not the voltage drop caused by the EUT is 3 to 5 % of the test supply voltage.

3. Set the test time.
4. Click **Start Voltage Drop Test**.

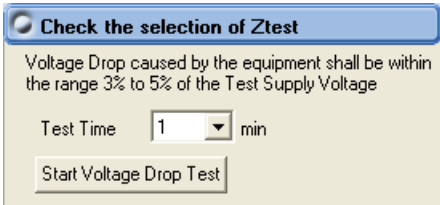


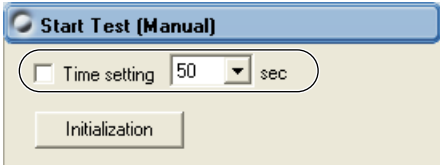
Check the selection of Ztest

Voltage Drop caused by the equipment shall be within the range 3% to 5% of the Test Supply Voltage

Test Time  min

#### Setting the Time Marker

5. Select the **Time setting** check box under Start Test (Manual).  appears above the Interval bar in the upper portion of the setting and display area.
6. Set **Time setting** to 1 to 60 seconds.



Start Test (Manual)

☐ Time setting  sec




Count  0/24



Interval  1m00s

## Starting a Compliancy Test

Check that the software is in On-Line mode and that the flicker measurement status is Reset (when the status is Reset, the measured values are reset and initialization can be performed). If the status is not Reset, follow the procedure described on page 8-19, "Resetting a Test," to set the flicker measurement status to Reset.

### Initializing a Test

Click **Initialization** under Start Test (Manual) or click the  button. The initialization dialog box appears, and initialization begins.

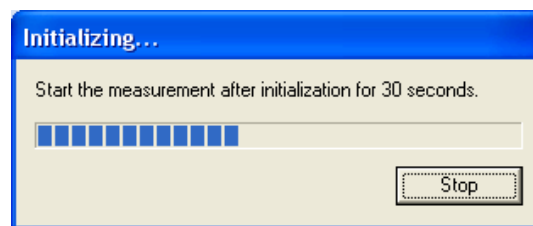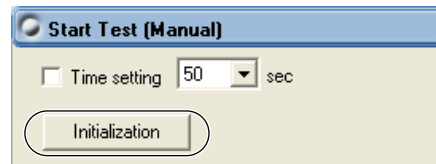

Once initialization is complete, the initialization dialog box will automatically close, and the Numeric View window will display:

- The current measured values for Un[V] and Freq[Hz].
- "----" for dmax[%].

### Note

"----" will appear in every column for elements that you do not select under Measure Object in the Setting window.

	Element1	Element2	Element3	Element4
Voltage	300.00			
Setting Freq	50Hz			
Un	229.18			
Freq	49.95			
No.	dmax[%]	dmax[%]	dmax[%]	dmax[%]
1	----	----	----	----
2	----	----	----	----
3	----	----	----	----
4	----	----	----	----
5	----	----	----	----
6	----	----	----	----
7	----	----	----	----
8	----	----	----	----
9	----	----	----	----

<Limit value>

Element1	6.00%
Element2	6.00%
Element3	6.00%
Element4	6.00%

<Result>


Element1(Average)	----
Element2(Average)	----
Element3(Average)	----
Element4(Average)	----

<Judge>


Element1 (Manual)	----
Element2 (Manual)	----

8.2 Executing the Measurement of dmax Caused by Manual Switching

Starting a Test

1. Click **Start Test** under Start Test (Manual) or click the  button. The Numeric View window will display:
- Fixed values for Un[V] and Freq[Hz]
  - The maximum value for dmax during the current observation period in light blue.

The bar and numbers next to Interval indicate how much time has passed. The bar and numbers next to Count indicate how many observation periods have finished. The measurement results appear in the Trend Graph View window.

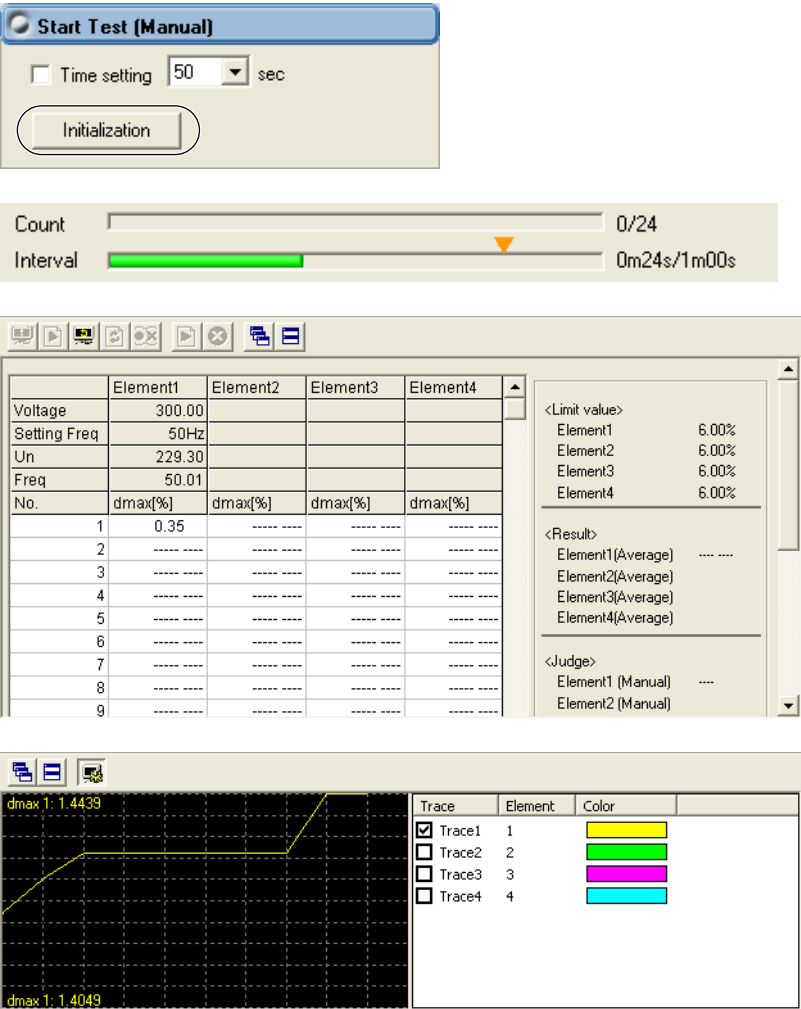

## 8.2 Executing the Measurement of dmax Caused by Manual Switching

- Turn the EUT ON to achieve normal operation. Operate the EUT in the normal condition as long as possible in the measurement period of one observation period (1 minute).
- Turn the EUT OFF before the measurement of one observation period (1 minute) completes. When the measurement of an observation period is complete, the measured result of the next number turns light blue.
- Repeat steps 1 and 3 to measure dmax 24 times.

Count 24/24  
Interval 0m00s/1m00s

**Numeric View(Manual)**

	Element1	Element2	Element3	Element4
Voltage	300.00			
Setting Freq	50Hz			
Un	229.56			
Freq	50.01			
No.	dmax[%]	dmax[%]	dmax[%]	dmax[%]
1	1.84	-----	-----	-----
2	1.72	-----	-----	-----
3	1.65	-----	-----	-----
4	1.78	-----	-----	-----
5	1.80	-----	-----	-----
6	1.72	-----	-----	-----
7	1.77	-----	-----	-----
8	1.73	-----	-----	-----
9	1.76	-----	-----	-----
10	1.90 max	-----	-----	-----
11	1.83	-----	-----	-----
12	1.74	-----	-----	-----
13	1.60 min	-----	-----	-----
14	1.82	-----	-----	-----
15	1.76	-----	-----	-----
16	1.76	-----	-----	-----
17	1.74	-----	-----	-----
18	1.64	-----	-----	-----
19	1.67	-----	-----	-----
20	1.66	-----	-----	-----
21	1.67	-----	-----	-----
22	1.85	-----	-----	-----
23	1.66	-----	-----	-----
24	1.71	-----	-----	-----

<Limit value>

Element1	6.00%
Element2	6.00%
Element3	6.00%
Element4	6.00%

---

<Result>

Element1(Average)	----
Element2(Average)	----
Element3(Average)	----
Element4(Average)	----

---


<Judge>

Element1 (Manual)	----
Element2 (Manual)	----
Element3 (Manual)	----
Element4 (Manual)	----
All (Manual)	----

## 8.2 Executing the Measurement of dmax Caused by Manual Switching


### Remeasuring by Shifting the Observation Period

If a measurement of a given observation period is not performed correctly, you can change the observation period to be measured by carrying out the procedure below and redo the measurement.

1. Click  on the toolbar. The Move dialog box opens.
2. Select the number of the observation period you want to re-measure.

### Note

You can only shift to and remeasure observation periods that have already been measured.

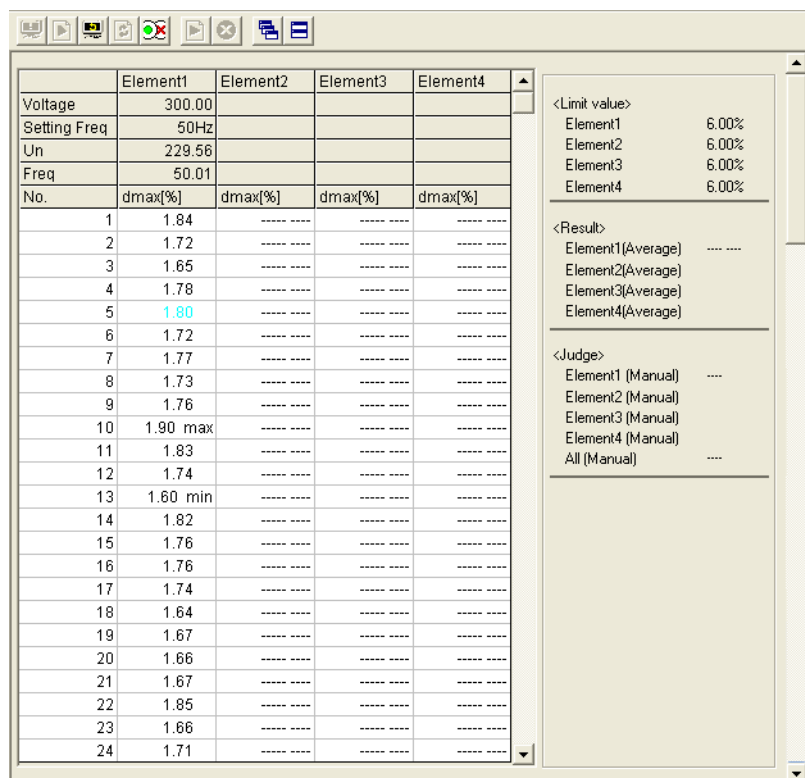The main measurement window displays a table of measurement data and summary statistics on the right.

	Element1	Element2	Element3	Element4
Voltage	300.00			
Setting Freq	50Hz			
Un	229.56			
Freq	50.01			
No.	dmax[%]	dmax[%]	dmax[%]	dmax[%]
1	1.84	-----	-----	-----
2	1.72	-----	-----	-----
3	1.65	-----	-----	-----
4	1.78	-----	-----	-----
5	1.80	-----	-----	-----
6	1.72	-----	-----	-----
7	1.77	-----	-----	-----
8	1.73	-----	-----	-----
9	1.76	-----	-----	-----
10	1.90 max	-----	-----	-----
11	1.83	-----	-----	-----
12	1.74	-----	-----	-----
13	1.60 min	-----	-----	-----
14	1.82	-----	-----	-----
15	1.76	-----	-----	-----
16	1.76	-----	-----	-----
17	1.74	-----	-----	-----
18	1.64	-----	-----	-----
19	1.67	-----	-----	-----
20	1.66	-----	-----	-----
21	1.67	-----	-----	-----
22	1.85	-----	-----	-----
23	1.66	-----	-----	-----
24	1.71	-----	-----	-----

<Limit value>

Element1	6.00%
Element2	6.00%
Element3	6.00%
Element4	6.00%

<Result>


Element1(Average)	-----
Element2(Average)	-----
Element3(Average)	-----
Element4(Average)	-----


<Judge>

Element1 (Manual)	----
Element2 (Manual)	----
Element3 (Manual)	----
Element4 (Manual)	----
All (Manual)	----

3. Carry out steps 2 to 4 to measure dmax.  
If you start the re-measurement, the measurement count and graph display shown in Count decrease by one. In addition, the total elapsed time of measurement decreases by one observation period. When the re-measurement is complete, the measured result of the observation period number that completed the measurement turns black.
4. If you want to continue with the measurement, repeat steps 2 to 4. To change the observation period to be measured, return to step 6.

### Stopping a Test

1. Click **Stop Test** under Start Test (Manual) or click the  button.  
The dialog box closes, and measurement stops. The measured data and test results are discarded, and Interval and Count in the Numeric View window are cleared.

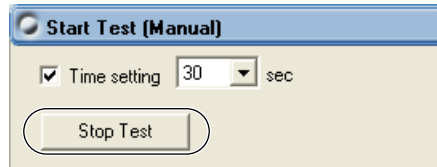

	Element1	Element2	Element3	Element4	
Voltage	300.00				
Setting Freq	50Hz				
Un	229.18				
Freq	49.95				
No.	dmax[%]	dmax[%]	dmax[%]	dmax[%]	
1	-----	-----	-----	-----	
2	-----	-----	-----	-----	
3	-----	-----	-----	-----	
4	-----	-----	-----	-----	
5	-----	-----	-----	-----	
6	-----	-----	-----	-----	
7	-----	-----	-----	-----	
8	-----	-----	-----	-----	
9	-----	-----	-----	-----	

<Limit value>	
Element1	6.00%
Element2	6.00%
Element3	6.00%
Element4	6.00%
<Result>	
Element1(Average)	----
Element2(Average)	
Element3(Average)	
Element4(Average)	
<Judge>	
Element1 (Manual)	----
Element2 (Manual)	


### Note


Click **cancel** to close the dialog box and continue measurement.



## 8.2 Executing the Measurement of dmax Caused by Manual Switching

### Completing the Measurement and Displaying the Judgment

1. Check that the measurement of all observation periods (24) is complete, and that the dmax data of each observation period is displayed.
2. Click **Start Judgment** under Start Test (Manual) or click the  button. The dmax data of all observation periods is confirmed, and the measurement of dmax caused by manual switching is complete. The flicker measurement status changes to Complete, and the result and judgment of the average of the measured dmax are displayed.

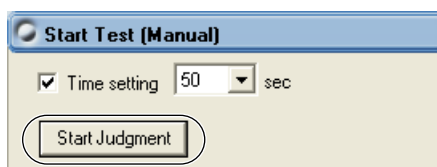

No.	dmax[%]	dmax[%]	dmax[%]	dmax[%]
1	1.84	-----	-----	-----
2	1.72	-----	-----	-----
3	1.65	-----	-----	-----
4	1.78	-----	-----	-----
5	1.80	-----	-----	-----
6	1.72	-----	-----	-----
7	1.77	-----	-----	-----
8	1.73	-----	-----	-----
9	1.76	-----	-----	-----
10	1.90 max	-----	-----	-----
11	1.83	-----	-----	-----
12	1.74	-----	-----	-----
13	1.60 min	-----	-----	-----
14	1.82	-----	-----	-----
15	1.76	-----	-----	-----
16	1.76	-----	-----	-----
17	1.74	-----	-----	-----
18	1.64	-----	-----	-----
19	1.67	-----	-----	-----
20	1.66	-----	-----	-----
21	1.67	-----	-----	-----
22	1.85	-----	-----	-----
23	1.66	-----	-----	-----
24	1.71	-----	-----	-----

<Limit value>	
Element1	6.00%
Element2	6.00%
Element3	6.00%
Element4	6.00%
<Result>	
Element1(Average)	1.74
Element2(Average)	
Element3(Average)	
Element4(Average)	
<Judge>	
Element1 (Manual)	Pass
Element2 (Manual)	
Element3 (Manual)	
Element4 (Manual)	
All (Manual)	Pass


**Averages**


**Judgments**

### Changing the Judgment Conditions and Re-judging the Measured Data

When the measurement of dmax caused by manual switching is complete, change the judgment conditions according to the procedure given in "Setting the Judgment Conditions" in section 3.4. If you change the judgment conditions, the average data of the measured dmax is re-judged, and the judgment is updated.

### Resetting a Test


1. Click **Stop Test** under Start Test (General) or click the  button.  
The dialog box closes, and measurement is reset. The measured data and test results are discarded, and Interval and Count in the Numeric View window are cleared.

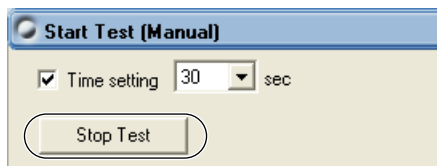

### **Note**

If you do not want to reset the test, click **Cancel**.

### Setting the Trend Graph Traces

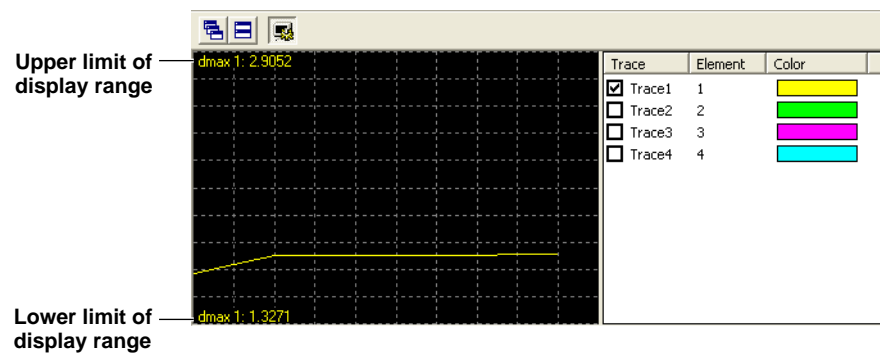

#### Trace

Select the trends you want to display (select or clear the check boxes).  
Up to 16 trends can be displayed.

#### Element

Select the element to be displayed.

1. Click on the **Element** column. A combo box opens.
2. Select the element.

#### Color


Select the display color of the trend.

1. Click on the **Color** column. A combo box opens.
2. Select the display color of the trend.

## Explanation

### Time Marker

One way you can use the time marker is as a reminder of when to turn OFF the power supply of an EUT that does not turn OFF immediately after it is switched OFF.

 appears above the Interval bar at the top of the setting and display area when you select the Time setting check box.


You can set the time marker to a value from 1 to 60 seconds.

### Display during Measurement

The figure below is a display example of the measurement of dmax caused by manual switching in progress.

The number of completed observation periods, indicated with numbers and a progress bar.

The amount of time that has elapsed since the start of the current observation period, indicated with numbers and a progress bar.

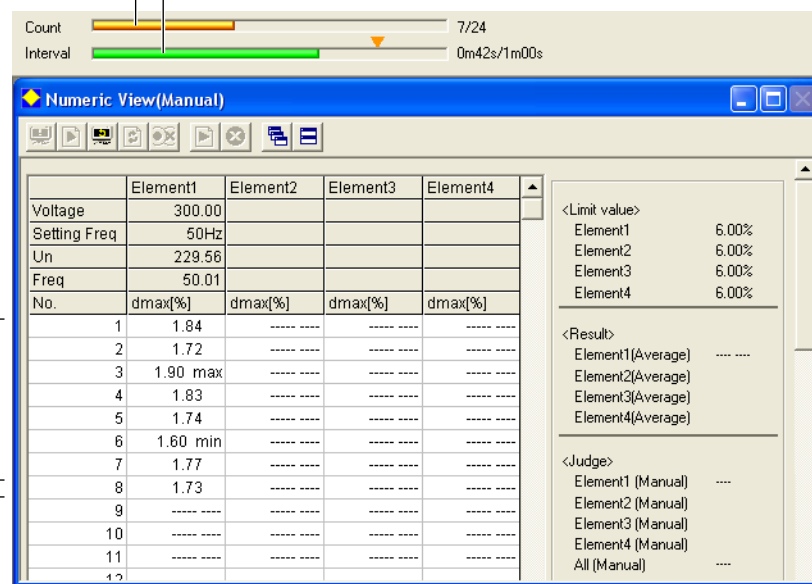

#### Observation period being measured

The dmax value being observed are displayed in light blue. The displayed value is the largest value up to that point.

If the instantaneous value every 2 s exceeds the maximum value, the value is updated.

#### Observation periods that have finished the measurement


Displays the dmax value of each observation period for which the measurement has been completed.

The maximum and minimum values over all observation periods are indicated as max and min, respectively.

## 8.2 Executing the Measurement of dmax Caused by Manual Switching

### Judgment Display When the Measurement Is Complete

The figure below is a display example when the measurement of dmax caused by manual switching is complete.

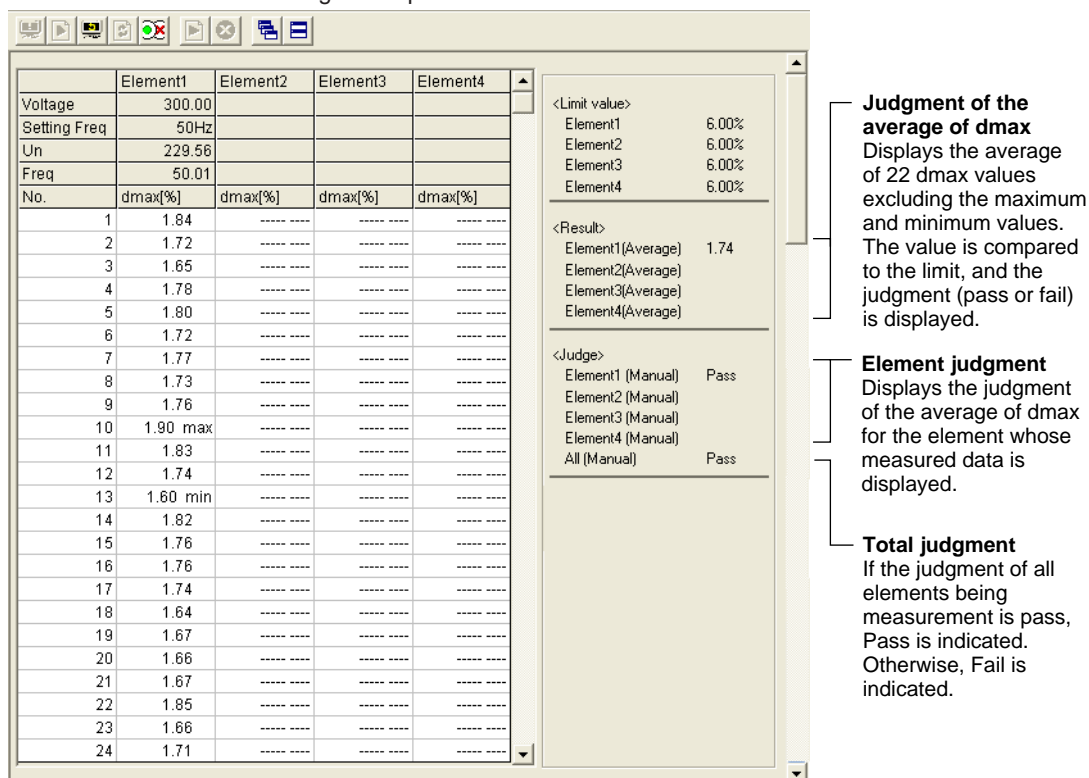

**Judgment of the average of dmax**  
Displays the average of 22 dmax values excluding the maximum and minimum values. The value is compared to the limit, and the judgment (pass or fail) is displayed.

**Element judgment**  
Displays the judgment of the average of dmax for the element whose measured data is displayed.

**Total judgment**  
If the judgment of all elements being measurement is pass, Pass is indicated. Otherwise, Fail is indicated.

### Note

If an element that is not being measured is assigned to a display target element, Off is displayed by the element number, and all measured data are displayed as blank.

### Initializing the Test

- The initialization takes approximately 30 s.
- Rms voltage Un and voltage frequency Freq are updated every 2 s while the initialization is in progress in the same manner as when the voltage fluctuation and flicker measurement is reset.
- Keep the voltage of the power supply to be measured in steady-state condition while the initialization is in progress.

### Rated Voltage Un and Voltage Frequency Freq

- If the assignment method of rated voltage is AUTO, the rms voltage at the start of the first measurement is used as rated voltage Un. The measured data is calculated with respect to rated voltage Un.
- If the assignment method of rated voltage is SET, the rated voltage setting is displayed as Un(Set).
- Rated voltage Un and voltage frequency Freq are fixed to the first measured values after the measurement of dmax caused by manual switching is started and are not updated.

### Resetting the Test

To initialize and restart the measurement, reset the measurement after the measurement of dmax caused by manual switching is complete and the flicker measurement status is indicating Complete. You cannot initialize or start the measurement in the Complete status.

In addition, reset the measurement to change the measurement conditions of the the measurement of dmax caused by manual switching (section 3.3).


**Flicker Measurement Status**

The following five flicker measurement statuses are available.

Status	Meaning
Reset	Condition in which the measured value is reset and initialization can be executed.
Initializing	Initializing the measurement.
Ready	Initialized condition in which measurement can be started.
Start	Measurement in progress: Displays the elapsed time.
Complete	Displays the result (judgment by measurement item) and judgment (element judgment and overall judgment).

**Flow Chart of the Measurement of dmax Caused by Manual Switching**

(Transition Diagram of the Flicker Measurement Status)

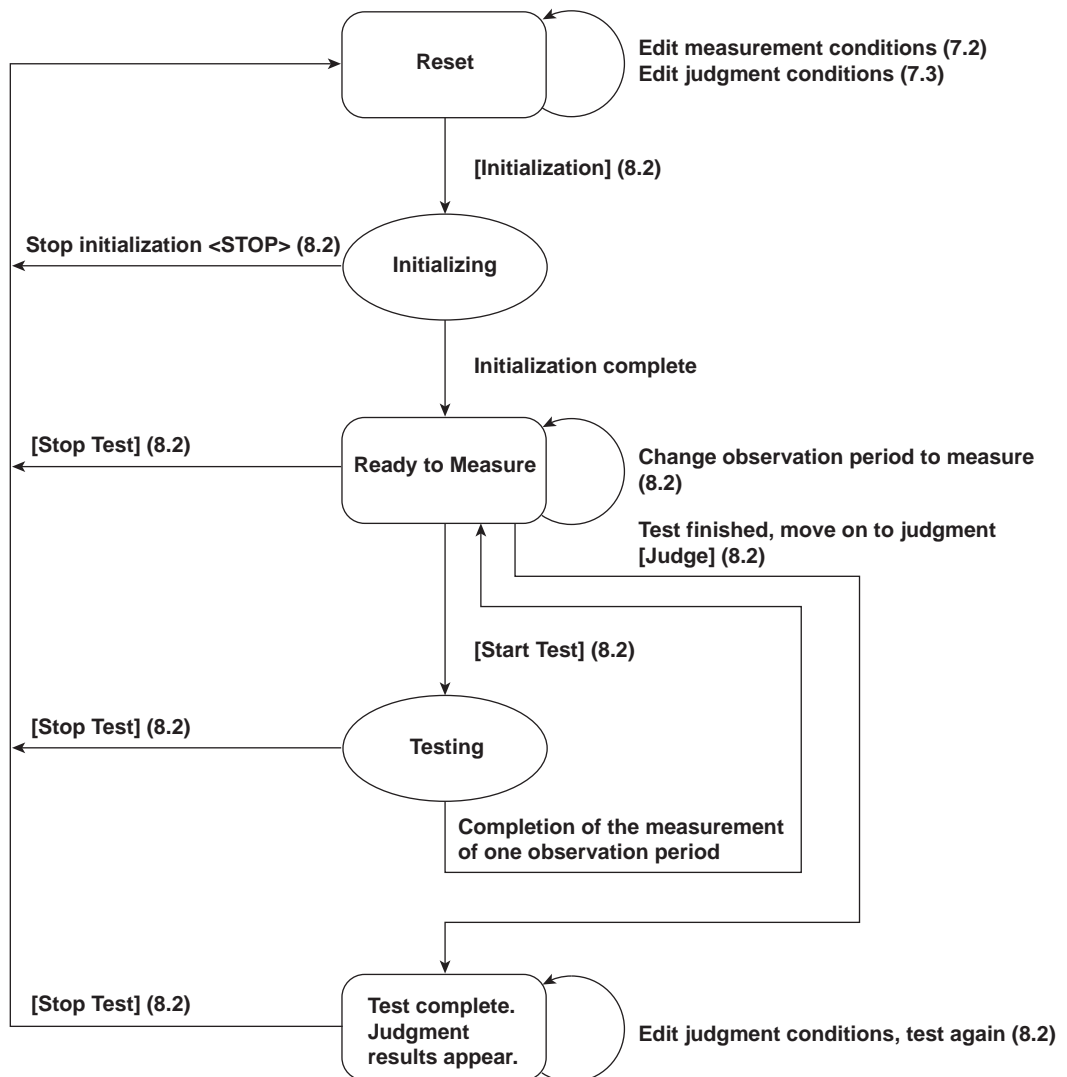


Numbers in parenthesis indicate relevant sections in the manual.


Brackets are used to indicate buttons or icons.

Greater than and less than signs are used to indicate buttons (i.e. <Stop Test>).

## 9.1 Displaying Numerical Judgments

### Procedure

1. Select the  icon in the menu area. The Analysis submenu appears.

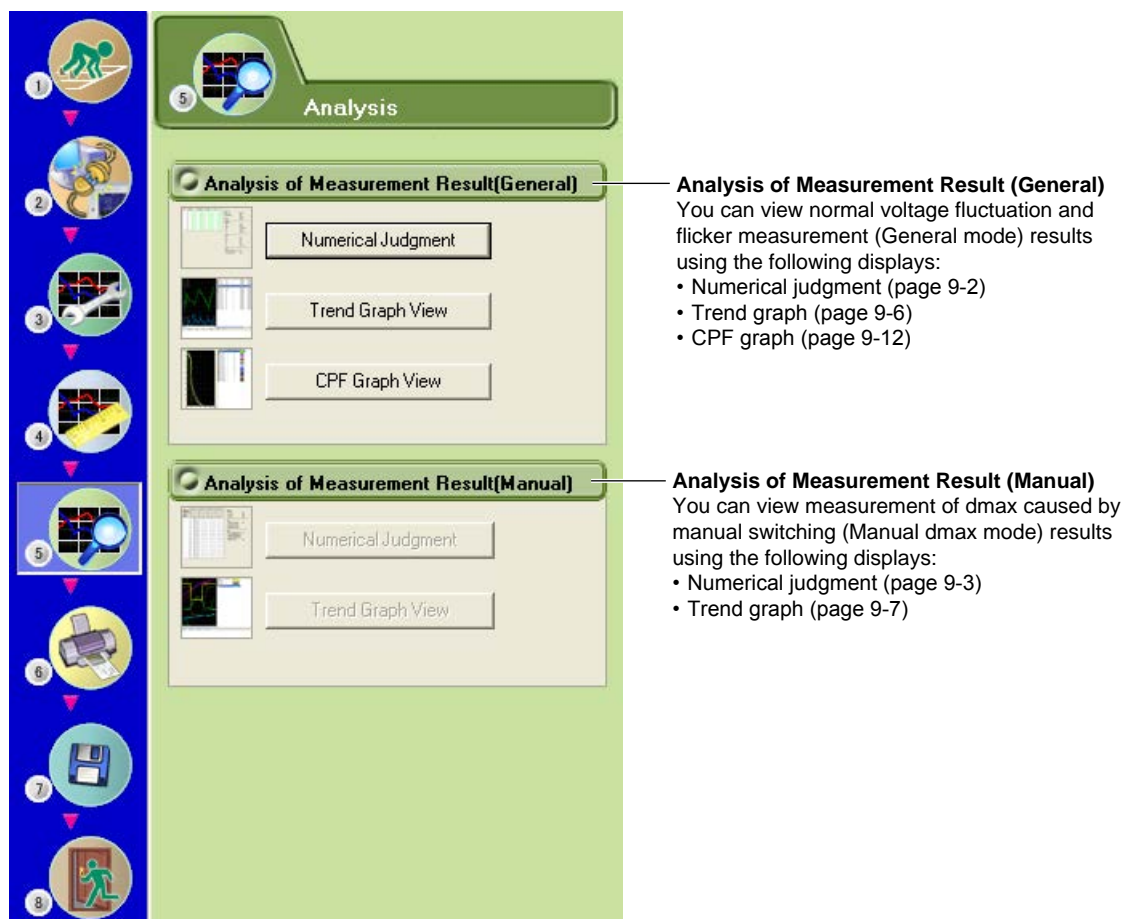

Window arrangement buttons  
For details, see chapter 12.



Displays cascaded windows




Displays tiled windows

### Loss of Measured Data


While in the Analysis window, if you click the Measure icon and switch to the Measure window, the measured data will be discarded. Save the data if you do not want it to be discarded (see chapter 11 for information on how to save data).

### Displaying Numerical Judgments for Normal Voltage Fluctuation and Flicker Measurements (General Mode)

- Click **Numerical Judgment** under Analysis of Measurement Result (General).  
The numerical judgment display window will appear and show numerical values and judgments for the selected element.

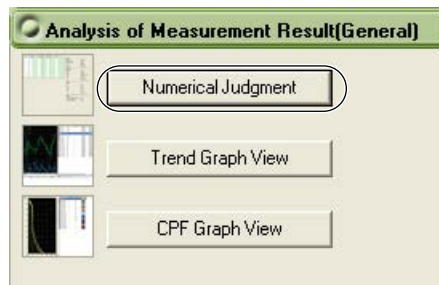

- Click , and select which element's numerical judgment you want to display.

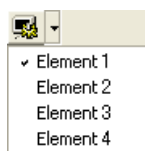

#### Note

- You can only select Numeric Data and Judgment in Off-Line mode with the measured data loaded.
- In On-Line mode, the numeric data and judgment view is displayed for the element that is selected in the measurement conditions of the WT.

### Normal Voltage Fluctuation and Flicker Measurement

#### Measured value and judgment for each observation period

No.	dc[%]	dmax[%]	d(t)[ms]	Pst		
1	0.00 Pass	0.00 Pass	-----	0.00 Pass	Element	1
2	0.00 Pass	0.00 Pass	-----	0.00 Pass	Voltage Range	300.00V
3	0.00 Pass	0.00 Pass	-----	0.00 Pass	Setting	50Hz
4	0.00 Pass	0.00 Pass	-----	0.00 Pass	Un	229.81V
5	0.00 Pass	0.00 Pass	-----	0.00 Pass	Frequency	50.01Hz
6	0.00 Pass	0.00 Pass	-----	0.00 Pass		
7	0.00 Pass	0.00 Pass	-----	0.00 Pass	<Limit Value>	
8	0.00 Pass	0.00 Pass	-----	0.00 Pass	dc	3.30%
9	0.00 Pass	0.00 Pass	-----	0.00 Pass	dmax	4.00%
10	0.00 Pass	0.00 Pass	-----	0.00 Pass	d(t)	-----
11	0.00 Pass	0.00 Pass	-----	0.00 Pass	Pst	1.00%
12	0.00 Pass	0.00 Pass	-----	0.00 Pass	Plt	0.65% 12N
					<Result>	
					dc	Pass
					dmax	Pass
					d(t)	-----
					Pst	Pass
					Plt	0.12 Pass
					<Judgment>	
					Element (General)	Pass
					All (General)	Pass
					<Zsys Calculation>	
					Zsys1	0.00
					Zsys2	-----
					Zsys3	0.00
					Zsys4	0.00
					Zmax	0.00

Measurement conditions

Limit

Judgment by measurement item

Element judgment

Total judgment


Zsys values\*

\* When Impedance Zmax is selected as the Compatibility Condition, Zsys will be displayed. For ordinary voltage fluctuation and flicker measurements, Zsys1 to Zsys4, and Zmax are displayed.



### Displaying Numerical Judgments for Measurements of dmax Caused by Manual Switching (Manual dmax mode)

- Click **Numerical Judgment** under Analysis of Measurement Result (Manual). The numerical judgment display window will appear and show numerical values and judgments for each element that was measured.

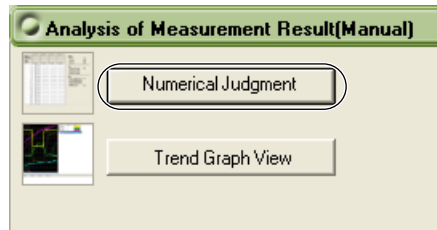

### Measurement of dmax Caused by Manual Switching

Measured value and judgment for each observation period

	Element1	Element2	Element3	Element4	
Voltage	300.00				
Setting Freq	50Hz				
Un	229.56				
Freq	50.01				
No.	dmax[%]	dmax[%]	dmax[%]	dmax[%]	
1	1.84	-----	-----	-----	
2	1.72	-----	-----	-----	
3	1.65	-----	-----	-----	
4	1.78	-----	-----	-----	
5	1.80	-----	-----	-----	
6	1.72	-----	-----	-----	
7	1.77	-----	-----	-----	
8	1.73	-----	-----	-----	
9	1.76	-----	-----	-----	
10	1.90 max	-----	-----	-----	
11	1.83	-----	-----	-----	
12	1.74	-----	-----	-----	
13	1.60 min	-----	-----	-----	
14	1.82	-----	-----	-----	
15	1.76	-----	-----	-----	
16	1.76	-----	-----	-----	
17	1.74	-----	-----	-----	
18	1.64	-----	-----	-----	
19	1.67	-----	-----	-----	
20	1.66	-----	-----	-----	
21	1.67	-----	-----	-----	
22	1.85	-----	-----	-----	
23	1.66	-----	-----	-----	
24	1.71	-----	-----	-----	

<Limit value>			
Element1	6.00%	} Limit	
Element2	6.00%		
Element3	6.00%		
Element4	6.00%		
<Result>			
Element1(Average)	1.74	} Judgment of the average of dmax	
Element2(Average)			
Element3(Average)			
Element4(Average)			
<Judge>			
Element1 (Manual)	Pass	} Element judgment	
Element2 (Manual)			
Element3 (Manual)			
Element4 (Manual)			
All (Manual)	Pass	} Total judgment	
<ZsysCalculation>			
Zmax(Zsys1)	-----	} Zsys values*	

\* When Impedance Zmax is selected as the Compatibility Condition, Zsys will be displayed. In manual dmax mode, Zsys1 and Zmax are displayed.

### Explanation

#### Measurement Conditions

The element number for which the measured data is displayed, the voltage, the rated voltage ( $U_n$ ), the target frequency (specified frequency), the voltage frequency, and the measurement interval of each observation period are displayed.

#### Limit

- Displays  $d_c$ ,  $d_{max}$ ,  $d(t)$ ,  $P_{st}$ , and  $Plt$  for normal voltage fluctuation and flicker measurement.
- Displays  $d_{max}$  for measurement of  $d_{max}$  caused by manual switching.

#### Measured Value and Judgment for Each Observation Period

##### Normal Voltage Fluctuation and Flicker Measurement

- The final values of  $d_c$ ,  $d_{max}$ , and  $d(t)$  are compared with the respective limits, and the judgment (pass or fail) is displayed to the right of the final value.
- If a steady-state condition does not occur during the measurement period, it is considered to be a fluctuating condition. The measured value of  $d_c$  is displayed as Undef (undefined, IEC 61000-4-15 Ed1.1) or 0 (IEC 61000-4-15 Ed2.0), and the judgment is displayed as Error (IEC 61000-4-15 Ed1.1) or Pass (IEC 61000-4-15 Ed2.0).
- The short-term flicker value,  $P_{st}$ , is calculated, compared to the limit, and the judgment (pass or fail) is displayed.
- The judgment of items whose judgment is turned OFF is displayed as Undef.

##### Measurement of $d_{max}$ Caused by Manual Switching

The words max and min are indicated to the right of the maximum and minimum  $d_{max}$  values over all observation periods, respectively.

##### Judgment by Measurement Item (Normal Voltage Fluctuation and Flicker Measurement)

- If the judgment of  $d_c$ ,  $d_{max}$ ,  $d(t)$ , and  $P_{st}$  is pass for all observation periods, Pass is indicated. Otherwise, Fail is indicated. The items whose judgment is turned OFF are displayed as Undef.
- Compares the long-term flicker value,  $Plt$ , to the limit, and displays the judgment (pass or fail). The items whose judgment is turned OFF are displayed as Undef.

##### Judgment of the Average of $d_{max}$ (Measurement of $d_{max}$ Caused by Manual Switching)

Displays the average of 22  $d_{max}$  values excluding the maximum and minimum values. The values are compared with limit, and the judgment (pass or fail) is displayed.

#### Element Judgment

##### Normal Voltage Fluctuation and Flicker Measurement

For elements whose measured data is displayed, if the judgment of all items whose judgment is turned ON is pass, Pass is indicated. Otherwise, Fail is indicated. However, if  $d_c$  is error, Error is indicated.

##### Measurement of $d_{max}$ Caused by Manual Switching

Displays the judgment of the average of  $d_{max}$  for the element whose measured data is displayed.

---

## 9.1 Displaying Numerical Judgments

### Overall Judgment

If the judgment of all elements being measurement is pass, Pass is indicated. Otherwise, Fail is indicated. However, if dc is error, Error is indicated in normal voltage fluctuation and flicker measurement.

### Selecting the Element for Displaying the Measured Data

You can select the element from below. The selectable items vary depending on the installed elements.

Element1, Element2, Element3, and Element4

### **Note**


---

If an element that is not being measured is assigned to a display target element, Off is displayed by the element number, and all measured data are displayed as blank.

---



## 9.2 Displaying Trend Graphs

### Procedure

1. Select the  icon in the menu area. The Analysis submenu appears. For general information about the Analysis submenu, see section 9.1.

### Displaying Trend Graphs for Normal Voltage Fluctuation and Flicker Measurements (General Mode)

2. Click **Trend Graph View** under Analysis of Measurement Result (General). The trend graph display window appears.

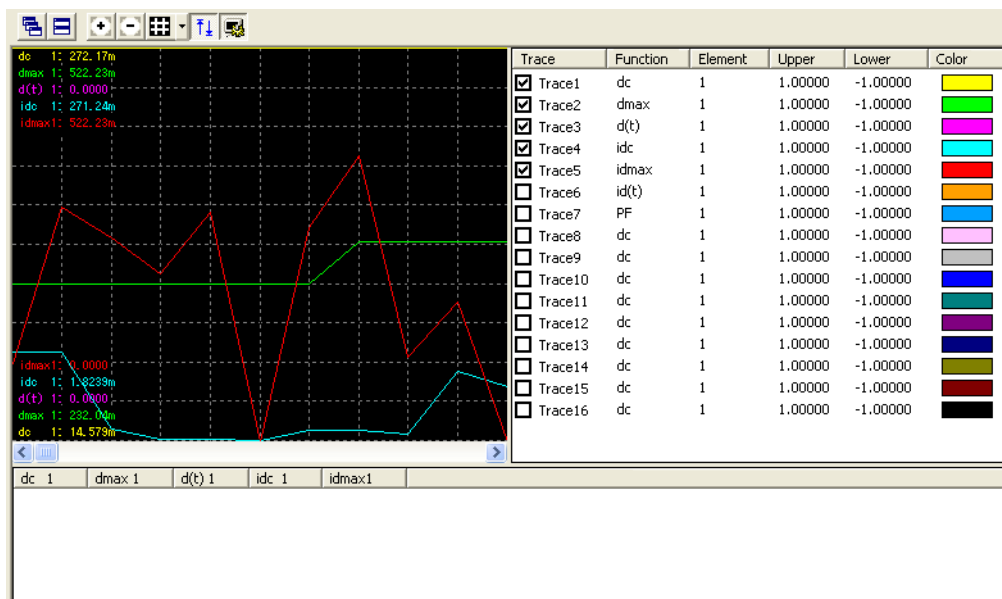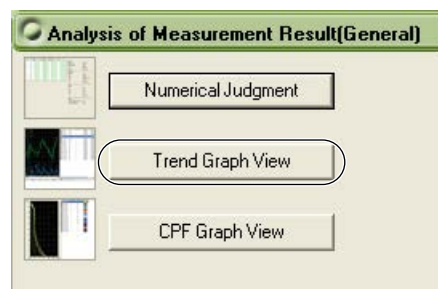


### Note

- You can only select Trend Graph View in Off-Line mode with the measured data loaded.
- If you change the size of the trend window while the trend graph is displayed, the size of the trend display area also changes.

Displaying Trend Graphs for Measurements of dmax Caused by Manual Switching (Manual dmax mode)

- 2. Click **Trend Graph View** under Analysis of Measurement Result (Manual). The trend graph display window appears.

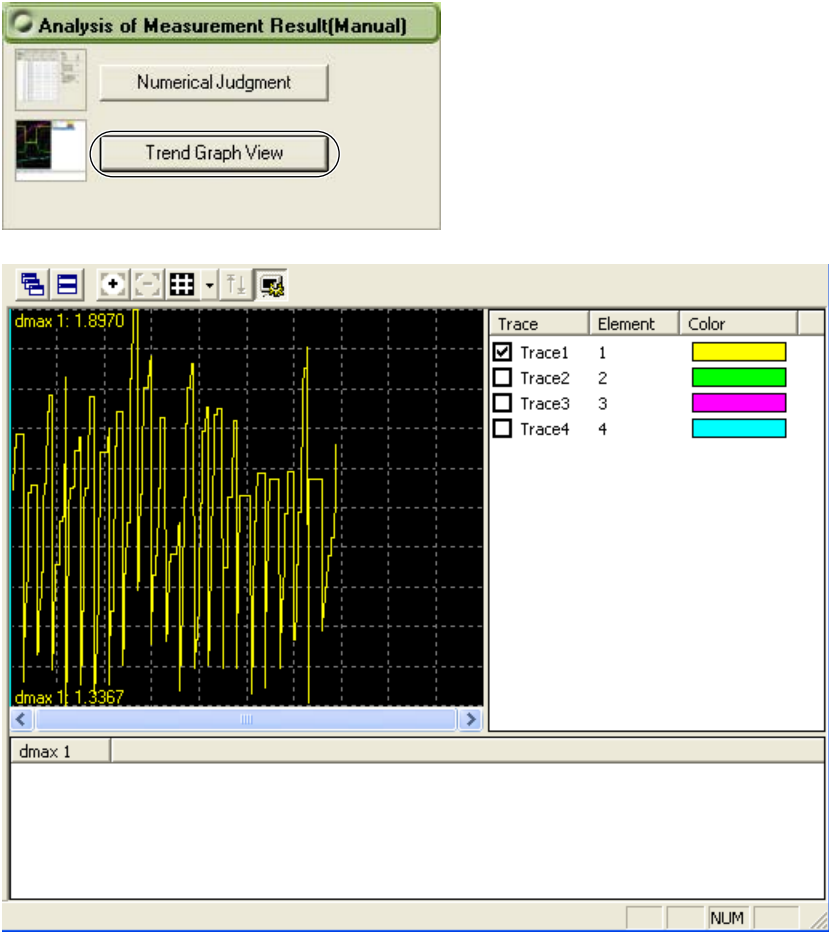


**Note**


- You can only select Trend Graph View in Off-Line mode with the measured data loaded.
- If you change the size of the trend window while the trend graph is displayed, the size of the trend display area also changes.

Setting the Trend Graph

- Graticule**  
Select the grid type to be displayed in the trend display area (Dotted, Line, or None).
- Dotted: Use dotted lines for the grid.
  - Line: Use lines for the grid.
  - None: Not display the grid.
- Auto Ranging**
- **If the Auto Ranging Button Is Selected**  
The range automatically switches according to the retrieved value.
  - **If the Auto Ranging Button Is Not Selected**  
If you click the Upper or Lower column, a combo box is displayed. You can set the Upper limit and Lower limit of the display range for each trend (trace).

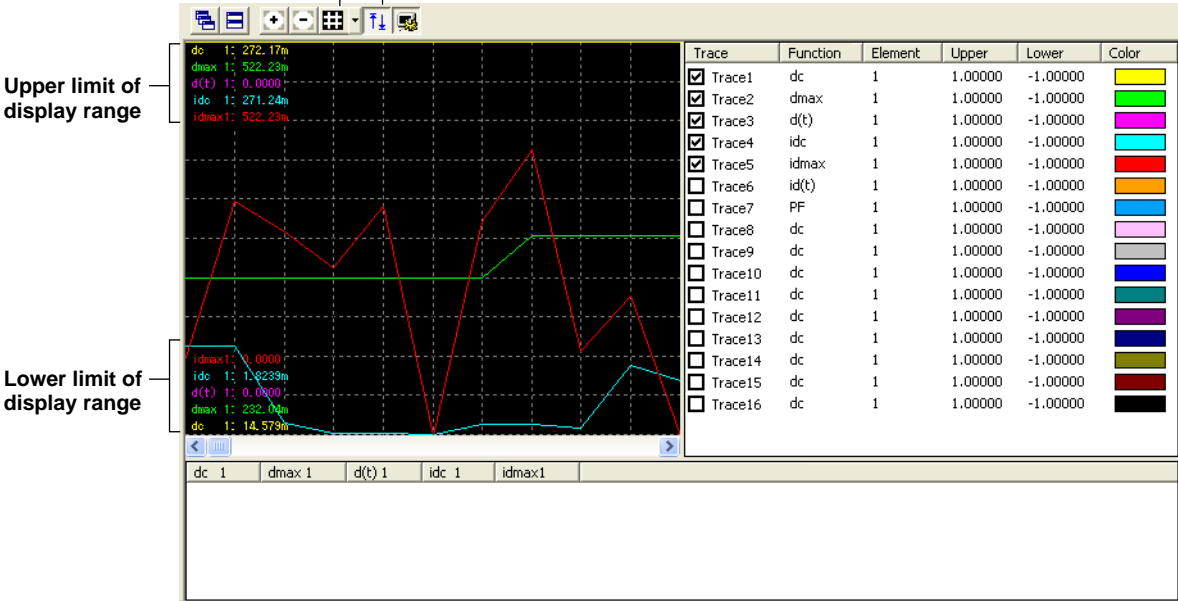

Setting the Trace

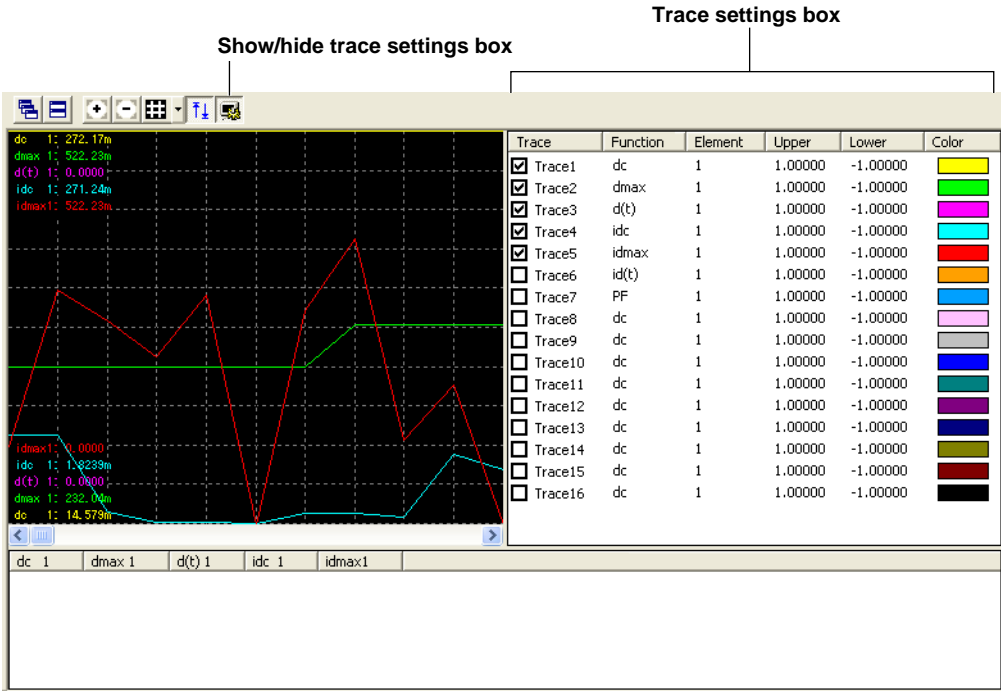

Trace

Select the trends you want to display (select or clear the check boxes).

Function

Select the measurement function to be displayed. You can only select what measurement functions to display for normal voltage fluctuation and flicker measurement (General mode). In Manual dmax mode (measurement of dmax caused by manual switching), the only function that is displayed is dmax.

1. Click on the **Function** column. A combo box opens.
2. Select the measurement function.

Note

You can select from the following measurement functions.

- dc Relative steady-state voltage change
- dmax Maximum relative voltage change
- d(t) Period during which relative voltage change exceeds the threshold level
- idc Instantaneous relative steady-state voltage change
- idmax Instantaneous maximum relative voltage change
- id(t) Period during which instantaneous relative voltage change exceeds the threshold level
- PF Instantaneous flicker sensation (IFS)

### Element

Select the element to be displayed.

1. Click on the **Element** column. A combo box opens.
2. Select the element.

### Upper and Lower

If the Auto Ranging check box is not selected, set the Upper and Lower limit of the display range.

1. Click the **Upper** or **Lower** column. A combo box opens.
2. Set the upper or lower limit value of the display range.

### Color


Select the display color of the trend.

1. Click on the **Color** column. A combo box opens.
2. Select the display color of the trend.




Zooming In/Out

- Zoom in**  
Each time you click Zoom+, the display is magnified. You can zoom up to a display time of 2 s in the trend display area.
- Zoom out**  
Each time you click Zoom-, the display is reduced. You can zoom out to the elapsed time in the trend display area.

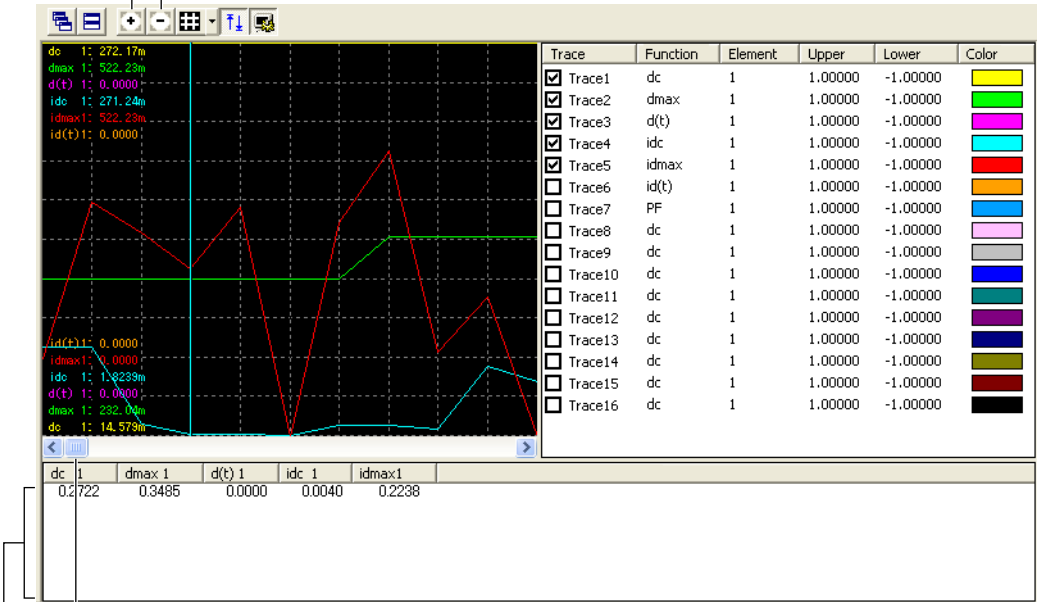



- Slider**  
Drag the slider to the desired time position on the waveform.
- Cursor**  
Click in the trend display area to show the cursor at the clicked position. You can drag the displayed cursor.

## 9.3 Displaying a CPF Graph

1. Select the  icon in the menu area. The Analysis submenu appears. For general information about the Analysis submenu, see section 9.1.

### Displaying a CPF Graph for Normal Voltage Fluctuation and Flicker Measurements (General Mode)


2. Click **CPF Graph View** under Analysis of Measurement Result (General). The CPF graph display window appears.

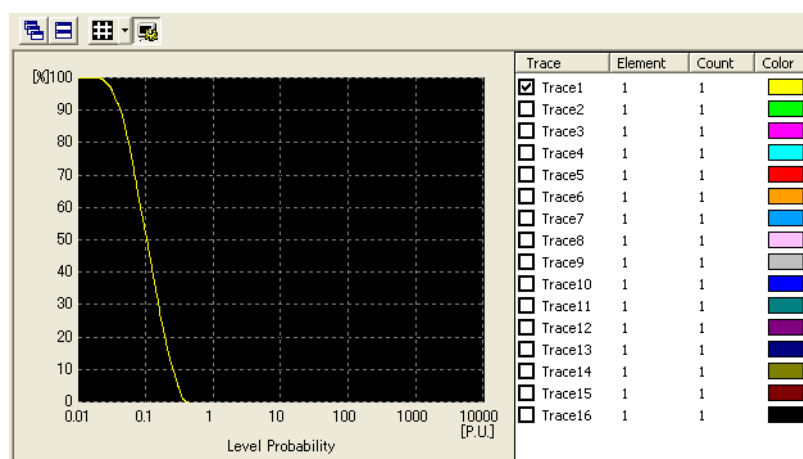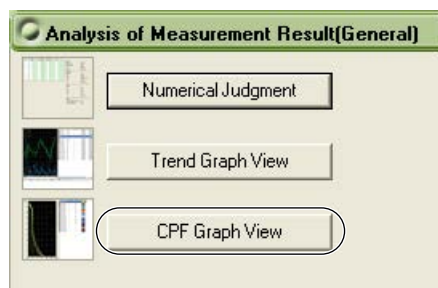

### Note

- This view is available only for normal voltage fluctuation and flicker measurement.
- You can only select CPF Graph View in Off-Line mode with the measured data loaded.
- The CPF graph is displayed for each observation period selected by the period number.
- You cannot display the CPF graph during measurement.

## Setting the Trace

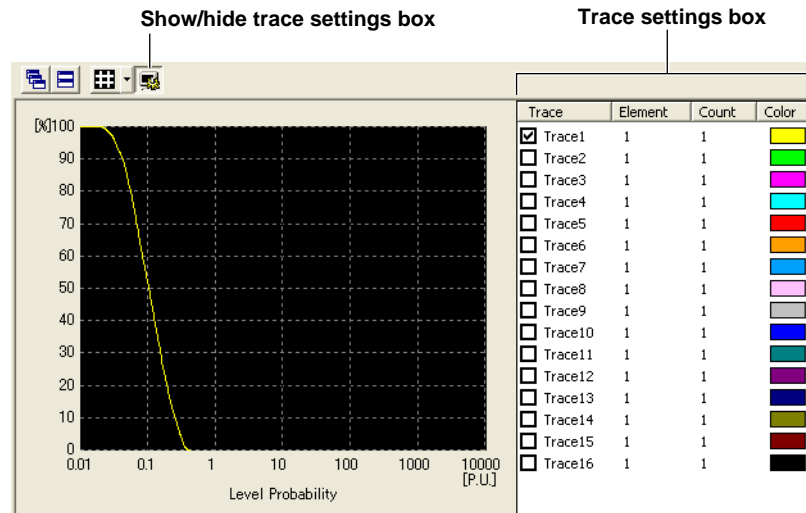

### Trace

Select the trends you want to display (select or clear the check boxes).

### Element

Select the element to be displayed.

1. Click on the **Element** column. A combo box opens.
2. Select the element.

### Color

Select the display color of the trend.

1. Click on the **Color** column. A combo box opens.
2. Select the display color of the trend.


### Count


Selects the observation period to be displayed on the CPF graph.

If you select a non-existing observation period, the waveform is not displayed.

## 10.1 Setting a Report's Title and Comments

### Procedure

1. Select the  icon in the menu area. The Print submenu appears.

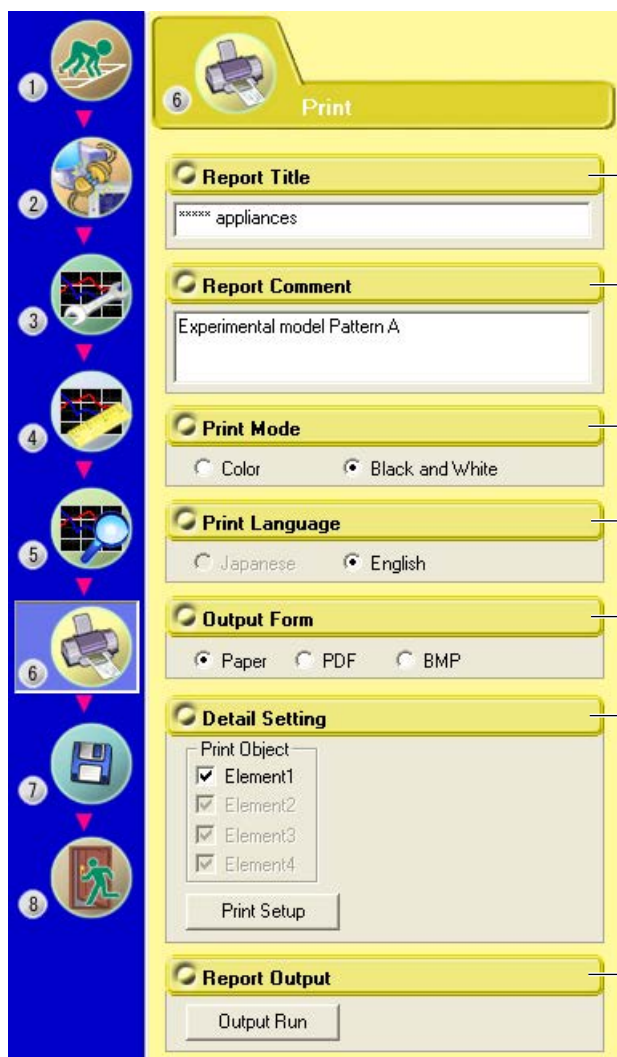

The screenshot shows the 'Print' submenu with the following sections and options:

- Report Title**: A text field containing 'XXXXXX appliances'.
- Report Comment**: A text field containing 'Experimental model Pattern A'.
- Print Mode**: Radio buttons for 'Color' and 'Black and White' (selected).
- Print Language**: Radio buttons for 'Japanese' and 'English' (selected).
- Output Form**: Radio buttons for 'Paper' (selected), 'PDF', and 'BMP'.
- Detail Setting**: A section with a 'Print Object' list containing 'Element1', 'Element2', 'Element3', and 'Element4', all of which are checked. Below the list is a 'Print Setup' button.
- Report Output**: A section with an 'Output Run' button.

Numbered steps (1-8) are shown on the left side of the menu area, corresponding to the following actions:

1. Select the printer icon.
2. Enter the report title.
3. Enter report comments.
4. Set the print mode.
5. Set the print language.
6. Set the output form.
7. Set print options.
8. Print.

## 10.1 Setting a Report's Title and Comments

Switches pages (elements)

Print

Zooms the print preview in or out

Print preview

**Report Title**  
XXXXXX appliances

**Report Comment**  
Experimental model Pattern A

**Print Mode**  
☐ Color ☒ Black and White

**Print Language**  
☐ Japanese ☒ English

**Output Form**  
☒ Paper ☐ PDF ☐ BMP

**Detail Setting**  
Print Object  
☒ Element1  
☒ Element2  
☒ Element3  
☒ Element4  
Print Setup

**Report Output**  
Output Run

**Print preview**  
XXXXXX appliances  
Analysis date/Measurement date : Sat Jan 01 07:32:07 2000 (Sat Jan 01 07:32:42 2000)  
Comment : Experimental model Pattern A  
Regulation : IEC60332-11 B1 L1  
Report : 0M300C  
Model : YO KOGAKU/AVT300  
Power :  
Impedance : 0.4-6.25  
Voltage : single-phase 2-wire  
Voltage range : 300V  
Voltage V1 : 230V  
Deflection : 0.01  
Frequency V1 : 50Hz  
Element : 1  
Pass  
Compatibility Credit: Compliance with IEC60332-3  
Element : Pass  
Total Element : Pass  
AC : (100%) Pass  
dmax : (100%) Pass  
d3 : (100%) Pass  
P1 : (100%) Pass  
P1 : 0.05  
P1 : 0.2

No.	d1(%)	dmax(%)	d3(%)	P1
1	0.05	1.00	0.00	0.10
2	0.10	1.75	0.00	0.10
3	0.15	1.75	0.00	0.10
4	0.05	1.00	0.00	0.10
5	0.05	1.00	0.00	0.10
6	0.05	1.00	0.00	0.10
7	0.05	1.00	0.00	0.10
8	0.10	1.00	0.00	0.10
9	0.10	1.00	0.00	0.10
10	0.05	1.00	0.00	0.10
11	0.05	1.00	0.00	0.10
12	0.05	1.00	0.00	0.10

2. Enter the report title and the report comments in their respective boxes.

**Report Title**  
XXXXXX appliances


**Report Comment**  
Experimental model Pattern A

**Explanation**

You can create reports using the data measured with the software.

**Print Preview Display Range**

If the print preview is being zoomed in on, the displayed area is indicated with a red frame.

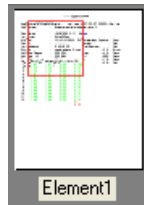**Moving the Print Preview Display Range**

Drag the red frame (which indicates the display range) to move the display range.

**Setting the Title and Comment of Reports**

As necessary, you can set the title and comment of a report.

- **Number of Characters That Can Be Entered**

See the table below.


Item	Number of Characters That Can Be Entered
Title	Up to 40 characters can be entered.
Comment	Up to 1000 characters can be entered.
	Up to 90 characters can be displayed on one line.
	Up to 6 lines can be displayed.

## 10.2 Setting the Print Mode, Print Language and Output Form

### Procedure

#### Selecting the Print Mode

1. Select Color or Black and White under Print Mode. When you change the print mode, the print preview in the setting and display area will change accordingly.

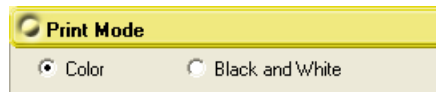
A dialog box titled "Print Mode" with a yellow header. It contains two radio button options: "Color" (selected) and "Black and White".

**Print Mode**

☒ Color ☐ Black and White

#### Selecting a Print Language

2. Select English or Japanese under Print Language. When you change the print language, the print preview in the setting and display area will change accordingly.

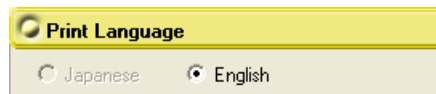
A dialog box titled "Print Language" with a yellow header. It contains two radio button options: "Japanese" and "English" (selected).

**Print Language**

☐ Japanese ☒ English

#### Selecting a Output Form

3. Select Paper, PDF or BMP under Output Form.

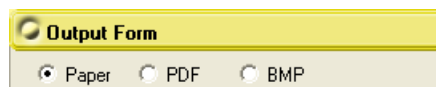
A dialog box titled "Output Form" with a yellow header. It contains three radio button options: "Paper" (selected), "PDF", and "BMP".

**Output Form**

☒ Paper ☐ PDF ☐ BMP

#### Selecting the BMP Resolution

4. On the Option tab in the setting and display area of section 7.4, if you selected the "Setting display of BMP resolution" check box, select the BMP resolution.

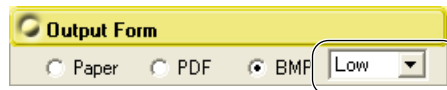A dialog box titled "Output Form" with a yellow header. It contains three radio button options: "Paper", "PDF", and "BMP" (selected). To the right of the "BMP" option is a dropdown menu showing "Low".

**Output Form**

☐ Paper ☐ PDF ☒ BMP Low

### Explanation

#### Selecting the BMP Resolution

You can select the resolution from the following:


- Lowest: Approx. 2MB, 768 × 1024
- Low: Approx. 9MB, 1536 × 2048
- High: Approx. 36MB, 3072 × 4096
- Highest: Approx. 147MB, 6144 × 8192

## 10.3 Setting Print Details (Detail Setting)

### Procedure


#### Selecting the Elements Whose Data You Want to Print

1. In the Print Object box, select the elements whose data you want to print.

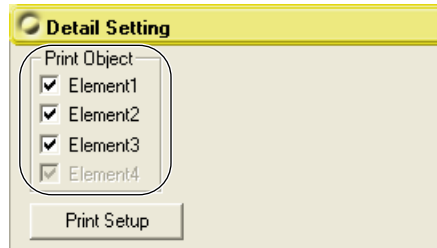


#### Setting Up the Printer

1. Choose **Print Setup**. The Print Setup dialog box opens.

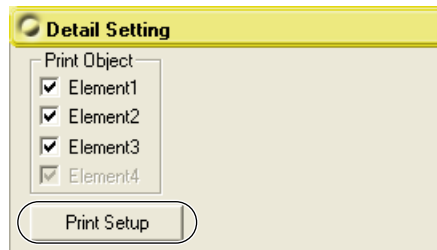

2. Enter appropriate settings for **Printer**, **Size**, **Source**, and **Orientation**.
3. Click **OK**.

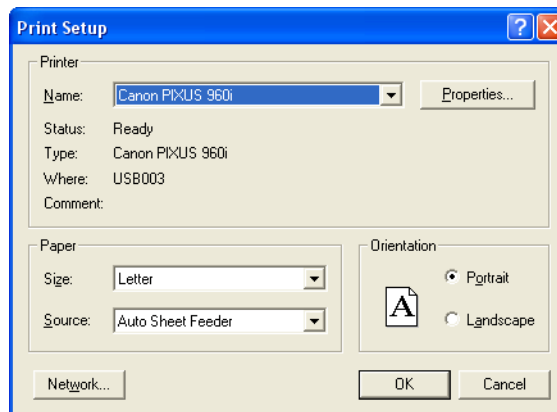

### Explanation

#### Selecting the Elements Whose Data You Want to Print

You can select the elements that were selected under Measure Object. The Measure Object setting is explained in section 7.2.

#### Print Setup

Make printer settings according to your system environment.




## 10.4 Printing

### Procedure

#### Printing a Report

You can print a report when measured data has been acquired or has been loaded from memory.

1. Click **Output Run**.
  - If Paper has been selected, proceed to step 2.
  - If PDF or BMP has been selected, proceed to step 3.



2. Enter appropriate settings for **Printer**, **Range**, **Copies**, etc. Click **OK**. The report is printed.

\*\*\*\*\* appliances

Analysis Date(Measure Date) : Sat Jan 01 07:32:07 2000 (Sat Jan 01 07:22:42 2000 )

Comment : Experimental model: Pallem A

Regulation	: IEC 61000-3-11	BI 1.1
Inlet	: OMIn303c	
Model	: YO KOGAKU/NA/WT3000	
Voltage	: single-phase 2-wire	
Voltage Range	: 300.00V	
Voltage U1	: 230.88V	
Self Frequency	: 50Hz	
Frequency U1	: 50.004Hz	
Element	: 1	

Pass

Compatibility Conf: Compliance with IEC 61000-3-3

Element	: Pass
Total Element	: Pass
d.c. (3.30%)	: Pass
dmax (4.00%)	: Pass
d(t) (500ms)	: Pass
Psi (1.00%)	: Pass
Pti (0.65)	: Pass

No.	dc[%]	dmax[%]	d(t)[ms]	Psi
1	0.57	1.57	0.00	0.13
2	0.75	1.75	0.00	0.12
3	0.75	1.75	0.00	0.12
4	0.81	1.81	0.00	0.12
5	0.81	1.81	0.00	0.14
6	0.83	1.83	0.00	0.13
7	0.83	1.83	0.00	0.12
8	0.75	1.88	0.00	0.15
9	0.75	1.88	0.00	0.11
10	0.81	1.88	0.00	0.12
11	0.81	1.88	0.00	0.11
12	0.83	1.88	0.00	0.10

Pti

0.12

3. Set the **location** and **file name** to save to. Click **Save**. The report is saved in the specified output format (PDF or BMP).

#### Printing a Report Using the Print Button

1. Click the  button. A Print dialog box appears.
2. Enter appropriate settings for **Printer**, **Range**, **Copies**, etc. Click **OK**. The report is printed.

### Explanation


Set the printer according to the environment of the system that you are using.

#### Printing Reports

You can print a report when the measured data has been retrieved (or loaded).  
You can print a report for each input element.

## 11.1 Saving Setting Information and Measured Data

### Procedure


1. Select the  icon in the menu area. The Save submenu appears.



### Saving the Measured Data


You can save the measured data when the measured data has been retrieved (or loaded).

1. Click **Save > Save Measured Data to File**.

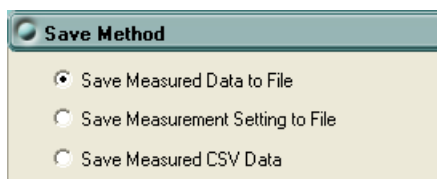

The 'Save Method' dialog box has a title bar with a green icon and the text 'Save Method'. It contains three radio button options: 'Save Measured Data to File' (which is selected), 'Save Measurement Setting to File', and 'Save Measured CSV Data'.

2. After selecting a folder in the **Save Location** box, enter the name of the file you want to save in the **File Name** box.
3. Click **Save** to save the measured data.

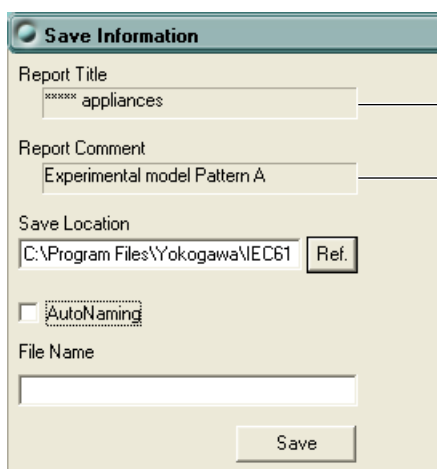

The 'Save Information' dialog box has a title bar with a green icon and the text 'Save Information'. It contains several fields: 'Report Title' with the text 'XXXXXXXX appliances', 'Report Comment' with the text 'Experimental model Pattern A', 'Save Location' with the text 'C:\Program Files\Yokogawa\IEC61' and a 'Ref.' button, an 'AutoNaming' checkbox which is unchecked, and a 'File Name' text box. A 'Save' button is at the bottom right.

Section 10.1 explains how to set report titles and comments.


### **Note**

You cannot save the measured data while the measurement is in progress.

---

## Saving the Setting Information


1. Click **Save > Save Measurement Setting to File**.

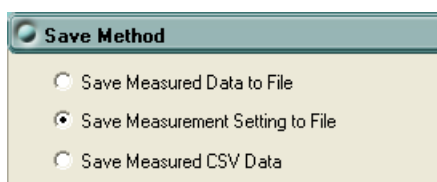

The **Save Method** dialog box contains three radio button options:

- ☐ Save Measured Data to File
- ☒ Save Measurement Setting to File
- ☐ Save Measured CSV Data

2. After selecting a folder in the **Save Location** box, enter the name of the file you want to save in the **File Name** box.
3. Click **Save** to save the setting information.

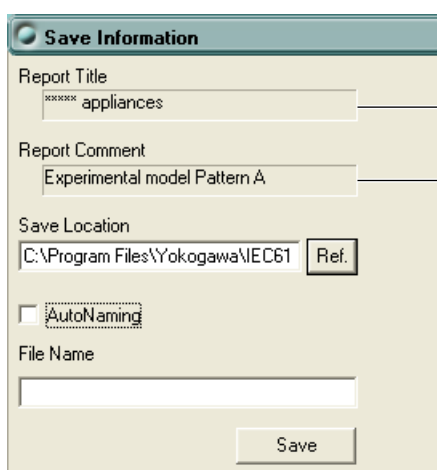

The **Save Information** dialog box contains the following fields and controls:

- Report Title:** Text box containing "appliances".
- Report Comment:** Text box containing "Experimental model Pattern A".
- Save Location:** Text box containing "C:\Program Files\Yokogawa\IEC61" and a **Ref.** button.
- AutoNaming:** A checkbox that is currently unchecked.
- File Name:** An empty text box.
- Save:** A button at the bottom right.

Section 10.1 explains how to set report titles and comments.

### Note

You cannot save the setting information while the measurement is in progress.

### Explanation

#### Saving Measured Data

You can use this software to save the measured voltage fluctuation and flicker data that the PC has acquired from the WT to a file. When the software saves this data, it will also save the WT voltage fluctuation and flicker measurement conditions along with the setting information described below.

##### File Name/Extension

- You can select any file name that the PC will recognize.
- When you choose to save a file, two files will be saved with the same file names but with these different extensions:

Extension: .fdt	Measured data
.ini	Setting information

#### Saving Setting Information

When in online mode, the software can save the following setting information to a file.

- Measurement and judgment conditions (see chapter 7)
- Graph display settings (see sections 9.2 and 9.3)
- Report titles and comments (see section 10.1)

##### File Name/Extension

- You can select any file name that the PC will recognize.
- Extension: .ini


## 11.2 Saving Measured Data as a Report in CSV Format

You can save measured data as a report in CSV format.

### **Note**


You cannot save measured data in CSV format while measurement is taking place.

1. Select **Save Measured CSV Data**.

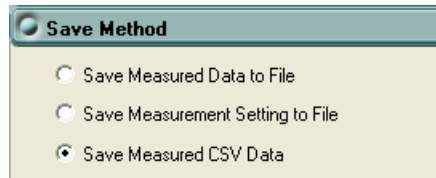

The **Save Method** dialog box contains three radio button options:   
☐ Save Measured Data to File   
☐ Save Measurement Setting to File   
☒ Save Measured CSV Data

2. Specify the **Save Location**, and enter the file name in the **File Name** box.
3. Click **Save**. The measured data is saved to CSV format.

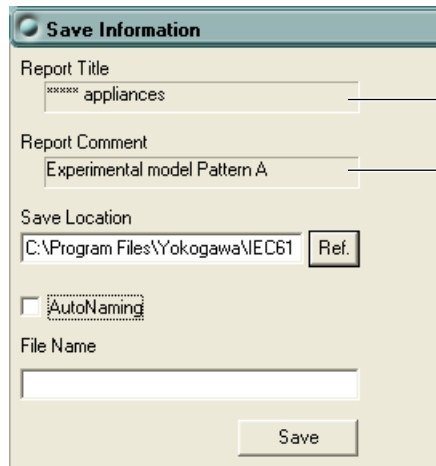

The **Save Information** dialog box contains the following fields and controls:   
 Report Title: Text box containing "XXXXXX appliances"   
 Report Comment: Text box containing "Experimental model Pattern A"   
 Save Location: Text box containing "C:\Program Files\Yokogawa\IEC61" with a "Ref." button   
☐ AutoNaming   
 File Name: Empty text box   
 Save: Button

Section 10.1 explains how to set report titles and comments.

## 11.2 Saving Measured Data as a Report in CSV Format

### Explanation

This section explains how to save measured data as a report in CSV file format. When you save the data in CSV format, you can view it using a PC spreadsheet program (such as Microsoft Excel).

#### File Name/Extension

You can select any file name that the PC will recognize.

- Extension: .csv

If AutoNaming is not used when saving to a CSV file, the file is saved with the following name.

"Text written in the file name box"+ "\_CSV".csv

#### Example of Measured Data Saved to CSV Format and Then Opened Using Microsoft Excel

	A	B	C	D	E	F	G	H	I
1	<< General >>								
2	Title : ***** appliances								
3	PrintDate(MeasureDate) : Mon Feb 23 09:21:48 2015(Wed Jan 09 15:36:48 2008)								
4	Comment : Experimental model Pattern A								
5	Regulation : IEC61000-3-11 Ed1.0 IEC61000-4-15 Ed2.0								
6	Interval : 10Min为00Sec								
7	Model : YOKOGAWA WT3000								
8	Wiring : 3P4W								
9	Voltage Range : 300.00V								
10	Set Voltage : ---								
11	Voltage U1 : 231.52V								
12	Set Frequency : 50Hz								
13	Frequency U1 : 49.999Hz								
14	Element : 1								
15	dmin : 0.10%								
16	Compatibility Condition : Compliance with IEC61000-3-3								
17	Element : Fail								
18	Total Element : Fail								
19									
20	dc (3.30%) : Pass								
21	dmax (4.00%) : Fail								
22	d(t) (500ms) : Fail								
23	Pst (1.00%) : Fail								
24	Plt (0.65) : Fail								
25									
26	No		dc[%]		dmax[%]		d(t)[ms]		pst
27	1		1.33		3.68		30.01		0.68
28	2		1.19		4.66		60		0.97
29	3		1.21		3.58		620.01		0.83
30	4		1.54		3.4		100		1.17
31	5						70		0.87
32	6						510.01		0.91
33	7						40		1.38
34	8		1.9		3.35		530.01		1.35
35	9		1.82		4.13		510.01		1.3
36	10		1.32		3.21		0		0.92
37	11		1.73		2.92		0		0.92
38	12		1.02		3.61		40		0.87
39									
40								Plt	1.06
41									

Measurement conditions

Element judgment/total judgment


Limits

Measured values for each observation period


Observation periods  
↓

# 12.1 Cascading Windows

## Procedure

Click . The windows are cascaded so that you can see the title of each window.

### An Example of Cascaded Windows within the Analysis Window

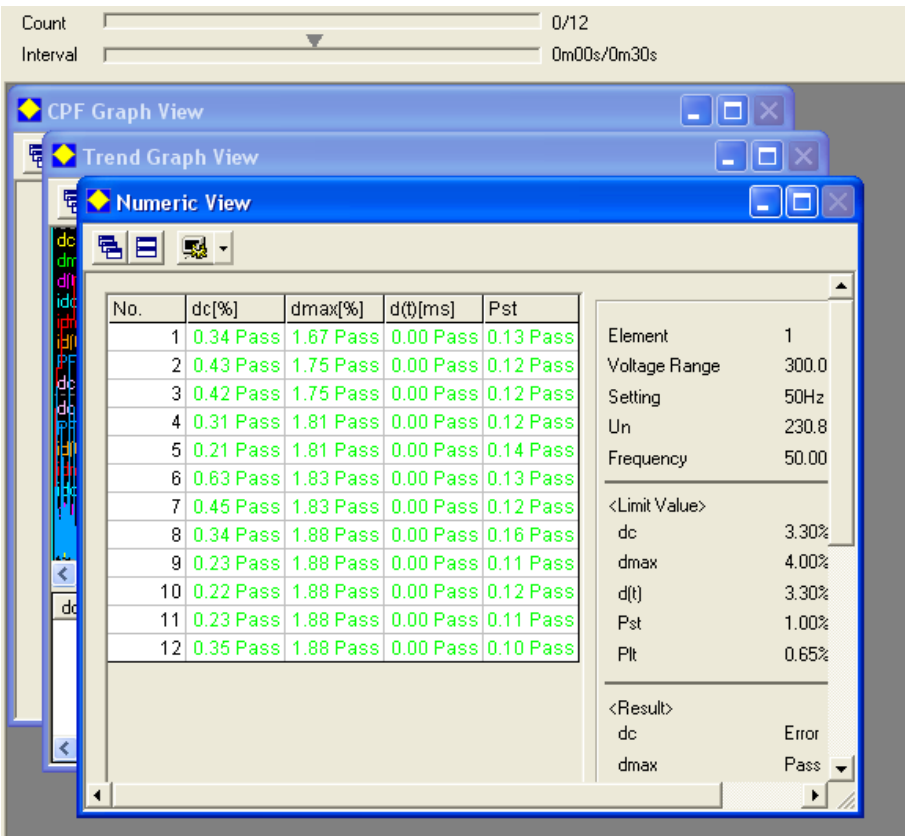


## Explanation

- Windows are cascaded so that the title of all displayed windows can be seen.
- The active graph or list window becomes the front window after the cascade operation.
- The cascade order varies depending on the type of displayed window.




## 12.2 Tiling Windows

### Procedure

Click . The windows are tiled so that they do not overlap with each other.

### An Example of Tiled Windows within the Analysis Window

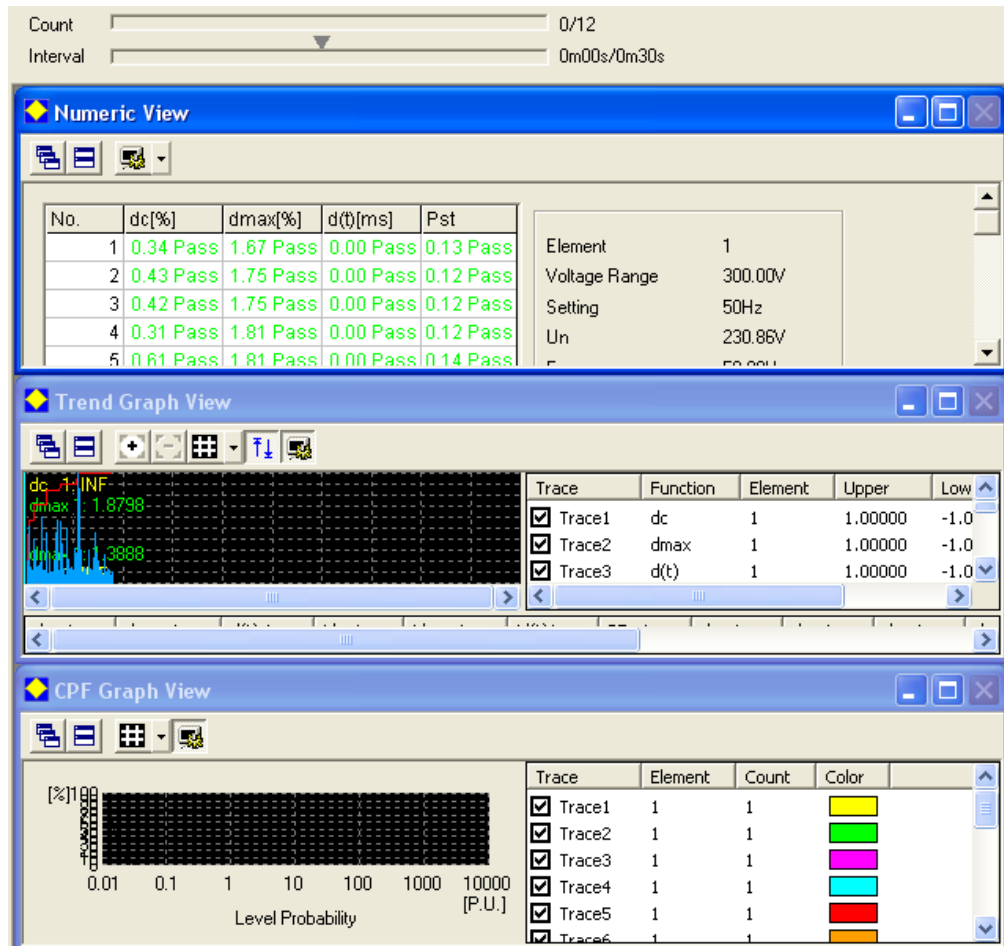


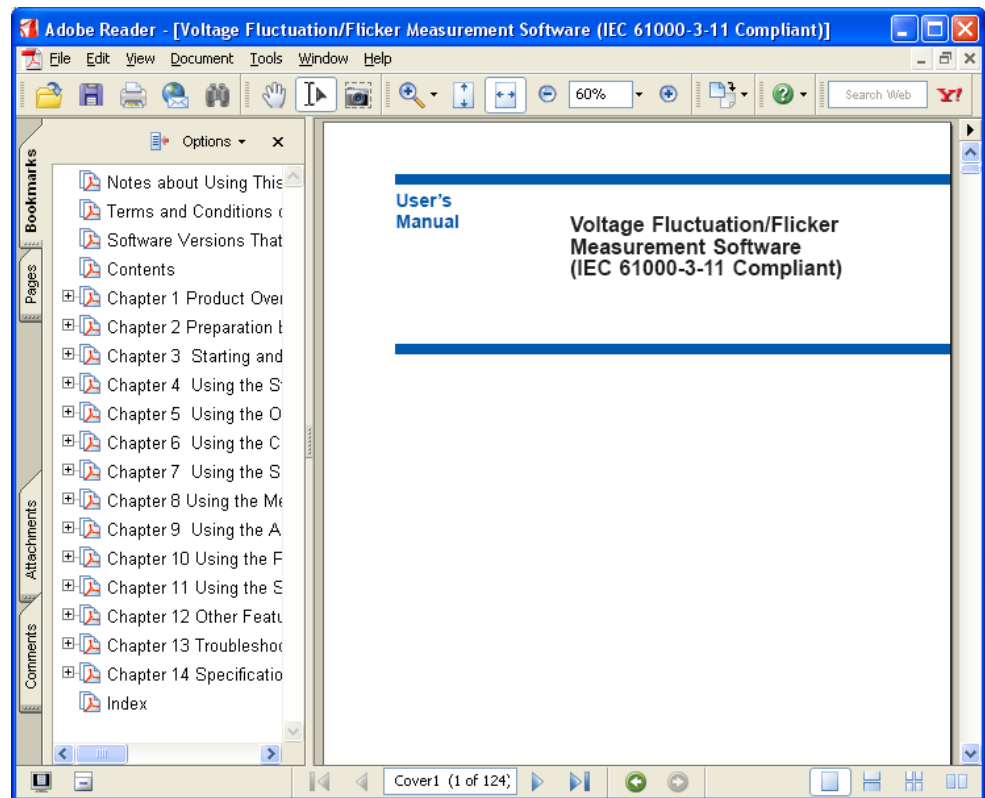
### Explanation

- All the displayed windows are tiled so that the windows do not overlap each other.
- The active graph or list becomes the active window after carrying out the tile operation.
- The arrangement order varies depending on the type of displayed windows.

## 12.3 Using the Help Function


### Procedure


Click , the help button. If Adobe Reader is installed on the PC, it will start up and open the PDF User's Manual for this software.




### Displaying Alteration Notices


If alteration notices are available, you can view them by following the procedure below.

1. Right-click the help  button.
2. Click **Alterations of User's Manual**.

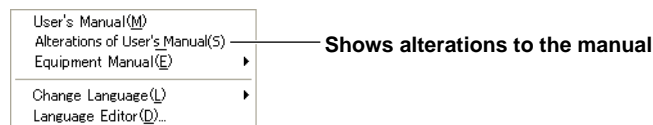

View the WT User’s Manual

- 1. Right-click the help  button.
- 2. Click **Equipment Manual**.
- 3. Click the manual you want to view.

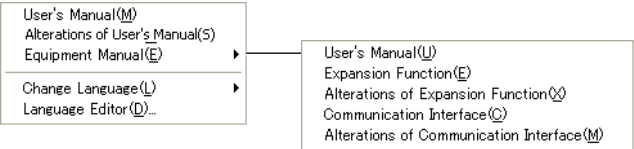

Explanation

Online Help

The user’s manual is displayed as a help document in PDF (Portable Document Format). You can find information about operating procedures of this software and terminology. You can view PDF files using Adobe Reader, a freeware. If there is an alteration notice, you can display it by clicking Help and then clicking **Alteration Notice**. This will open a PDF file of the alteration notice.

Viewing the Most Recent User’s Manual or Alteration Notice

To obtain the most recent PDF files of the user’s manual and alteration notice, click “Manual Download” on the YOKOGAWA’s Web page shown below. Then, download the users manual and alteration notice of this software program.

<http://tmi.yokogawa.com/service-support/downloads/>

Rename the downloaded user’s manual and alteration notice as indicated below, and copy (overwrite) the files in the software installation folder that you specified when you carried out the steps on page 2-8. You will be able to view the most recent operating instructions by selecting the user’s manual or alteration notice from the Help menu.


User’s Manual File Name	Alteration Notice File Name
IM761922-04E.pdf	Alterations-04E.pdf

Note

- You can download Adobe Reader from Adobe System’s Web page.
- The most recent users manual and alteration notice that you can download from YOKOGAWA’s Web page correspond to the most recent version of this software program. Update the software program as necessary. The program for updating the software can be downloaded from YOKOGAWA’s Web page above.

## 12.4 Viewing Version Information


The IEC 61000-3-11 Voltage Fluctuation and Flicker Measurement Software version number appears in the information area.

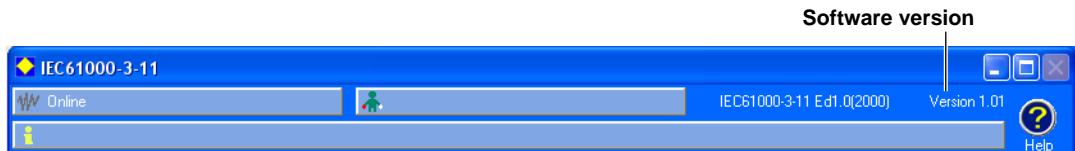


### **Note**

- The software version is different for each operation mode indicated below.
  - IEC 61000-3-2 Harmonic Measurement
  - IEC 61000-3-3 Voltage Fluctuation and Flicker Measurement
  - IEC 61000-3-11 Voltage Fluctuation and Flicker Measurement
  - IEC 61000-3-12 Harmonic Measurement
- If any function is updated, the version of the other function may not change.
- For the most recent version of the software, check the YOKOGAWA's Web page below.  
**<http://tmi.yokogawa.com/products/digital-power-analyzers/>**  
The program for updating the software as well as the most recent user's manual and alteration notice (see section 12.4) can be downloaded from YOKOGAWA's Web page above.

## 12.5 Setting the Displayed Language

1. Right-click the help  button.
2. Click **Change Language**.
3. Select the language you want to use.




### **Note**

Depending on the operating system, some language fonts may not be installed. In such cases, if you change the language, text will not be displayed properly. To display the text properly, you need to install appropriate fonts in the operating system.

### **Customizing the Displayed Language**

To customize the displayed language, edit the language file by following the procedure in section 8.4.

If there is a language file that you create (custom file), the submenu will appear as follows:

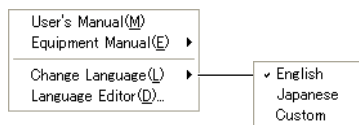



Select **Custom** to load the custom file.

## 12.6 Editing the Displayed Language

You can edit the text that is displayed in the dialog boxes and windows of the software.


### Editing the Displayed Language

1. Right-click the help  button.
2. Click **Language Editor**.



— Edit the displayed language

3. In the Language Editor dialog box, click the cells in the Current column to edit the text to display.

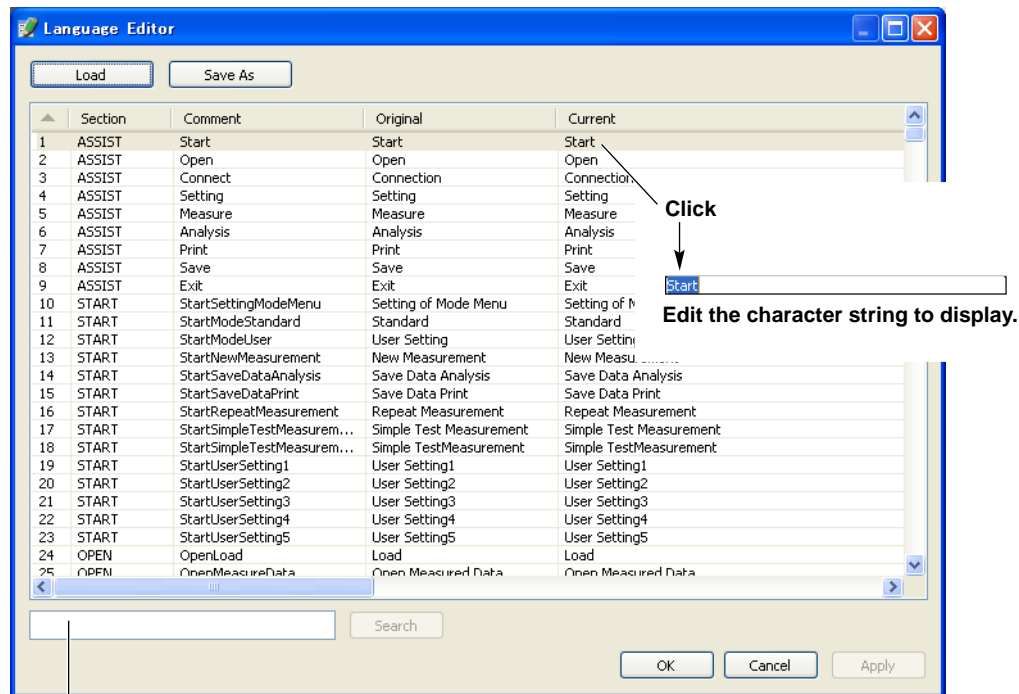

You can search for a character string by entering the string here and clicking Search.

### Saving the Edited Language Information

Click **Save As** to save the edited language information to a file. The file name extension is .lang.

#### Note

The English and Japanese language information files are in the following folder.

- Windows 32-bit version  
C:\ProgramFiles\YOKOGAWA\IEC61000 Analysis Software\Language
- Windows 64-bit version  
C:\ProgramFiles(x86)\YOKOGAWA\IEC61000 Analysis Software\Language

### Loading Saved Language Information

Click **Load** to load a language information file into the Language Editor dialog box.

## 13.1 Troubleshooting

If a message is displayed on the PC display, see section 13.2, “Error Messages.” If servicing is necessary or if the software is not operating correctly after performing the corrective actions, contact your nearest YOKOGAWA dealer.

---

### Problems and Solutions

---

If you cannot connect to the WT3000 or WT3000E via GP-IB:

A GP-IB connection made to the WT may not work properly if the GP-IB card that is used is not made by NI (National Instruments). We recommend that you use a National Instruments GP-IB card (see section 1.2).

Measurement stops suddenly.

Close the memory-resident software running on the PC. For example, if virus checking software frequently checks the communications between this software and the PC, the performance of the PC may decline drastically. If you choose to stop the virus check and use the PC, please do so in a network environment that is well protected against viruses.

---

## 13.2 Error Messages

Message	Corrective Action
Measured data will be initialized. Do you want to execute?	Select OK to initialize the measured data. Otherwise, select Cancel.
Data was lost. Please check your settings and try again.	The communication may be disconnected. Check the cable, noise, etc.
Connection error. Please check your settings and try again.	Check the following items. <ul style="list-style-type: none"> <li>• The WT is turned ON.</li> <li>• The GP-IB or Ethernet cable is connected properly.</li> <li>• For GP-IB, check that a unique GP-IB address is assigned within the system. Check that the GP-IB address specified on the WT matches the address specified on the software. Check that the GP-IB communication driver is installed correctly in the PC.</li> <li>• For Ethernet, check that the IP address, user name, and password specified on the WT match those specified on the software.</li> </ul>
Peak over. Please check your settings and try again.	Check that the voltage or current range is appropriate.
Frequency error. Please check your settings and try again.	Check the frequency and voltage range.
Unrecognized error. Please check your settings and try again.	An unexpected error occurred. Contact your nearest YOKOGAWA dealer.
All the data will be discarded. Do you want to continue?	Select OK to discard the current data. Otherwise, select Cancel.
Write failed.	Check the destination medium. <ul style="list-style-type: none"> <li>• Check that the storage medium is present.</li> <li>• Check that there is enough free space on the storage medium.</li> <li>• Check that the storage medium is formatted.</li> <li>• Check that the storage medium is not write-protected.</li> </ul>
Please input a value from 0.0001 to 99999.9999. Please input a value from 0.01 to 999.99. Please input a value from 1.00 to 99.99. Please input a value from 0.10 to 99.99. Please input value from 0:30 to 15:00. Please input a value from 1 to 99999. Please input a value from 1 to 99. Please input a value from 0.10 to 9.99.	The value you tried to specify is out of range. Set the value within the allowed range.



# Specifications

Item	Specifications
Software	The voltage fluctuation and flicker measurement software measures the voltage fluctuation and flicker of electrical or electronic equipment according to the IEC Standard and indicates/saves the results of judgments made according to the standard. The executable file name is IEC61000.exe.
Applicable instruments	WT3000 (models 760301, 760302, 760303, and 760304) WT3000E (models WT3001E, WT3002E, WT3003E and WT3004E)
Applicable standards	Voltage fluctuation and flicker suppression standards <ul style="list-style-type: none"> <li>• IEC 61000-3-11 Edition 1.1:2000</li> <li>• EN 61000-3-11:2000</li> </ul> Flicker meter function and design specifications <ul style="list-style-type: none"> <li>• IEC 61000-4-15 Edition 1.1:2003, IEC 61000-4-15 Edition 2.0:2010</li> <li>• EN 61000-4-15:1998/A1:2003, EN 61000-4-15:2011</li> </ul>
Functions	<p>Retrieve and load the measured data to be judged</p> <ul style="list-style-type: none"> <li>• Set the WT measurement conditions</li> <li>• Retrieve measured data from the WT connected online (On-Line mode)</li> <li>• Load measured data already saved (Off-Line mode)</li> </ul> <p>Measure mode</p> <ul style="list-style-type: none"> <li>• Normal voltage fluctuation and flicker measurement Calculates all the voltage fluctuation and flicker values of dc, dmax, d(t), Pst, and Plt, compares them to the preset limits, and indicates the overall judgment.</li> <li>• Measurement of dmax caused by manual switching Measures the maximum relative voltage change, dmax, when the EUT switch is manually turned ON and OFF, determines the average over 24 measurements, and compares and judges against the limit.</li> </ul> <p>Set the WT measurement conditions Set the measurement conditions of the voltage fluctuation and flicker measurement that is defined in IEC 61000-3-11 Edition 1.</p> <p>Set the WT judgment conditions Set the judgment conditions of the voltage fluctuation and flicker measurement that is defined in IEC 61000-3-11 Edition 1.</p> <p>Set the title and comment of reports Set the title/comment of reports. Reports are printed and saved to .bmp or .pdf files along with measured data.</p> <p>Start/stop the measurement Measurement can be started in On-Line mode.</p> <p>Numeric data and judgment Display the judgment result indicating whether the measured data of voltage fluctuation and flicker measurement is within the specified limits as well as the measured data.</p> <p>Trend graph view</p> <ul style="list-style-type: none"> <li>• Display the trend graph of the normal voltage fluctuation and flicker measurement (dc, dmax, d(t), idc, idmax, id(t), and IFS).</li> <li>• Display the trend graph of measurement of dmax caused by manual switching (dmax).</li> </ul> <p>CPF graph view Display the CPF graph of the normal voltage fluctuation and flicker measurement.</p> <p>Save and load the setting information and measured data</p> <ul style="list-style-type: none"> <li>• Save and load the setting information Save various types of setting information including measurement conditions, judgment conditions, title and comment of reports. Loading of the setting information is also possible.</li> <li>• Save and load the measured data Save the measured data of the voltage fluctuation and flicker to files. The setting information above is also saved. The voltage fluctuation and flicker measurement data and setting information saved to a file can also be loaded.</li> </ul> <p>Save measured data in CSV format Save measured voltage fluctuation and flicker data reports in CSV format. The saved data can be loaded in a software application on the PC.</p> <p>Printing and saving of reports Reports can be saved to .pdf or .bmp files. Report files can also be printed.</p>
System requirements	See section 1.2.

# Index

A	Page
address.....	6-3
applicable measurement instruments.....	1-1
applicable standard .....	1-1, 1-8
auto ranging.....	9-8

C	Page
cascading .....	12-1
Color .....	8-8, 8-20, 9-10, 9-13
comments .....	10-1
communication address.....	6-2
compatibility condition .....	7-2
connection .....	6-1
connection condition.....	6-2
connection device.....	6-2
connection status.....	3-3
count.....	9-13
CPF .....	1-18
CPF graph view.....	1-4
CSV file, saving to .....	11-5
CSV format .....	11-5
cumulative probability function .....	1-18
cursor.....	9-11

D	Page
dc.....	1-14, 7-10
display during measurement .....	8-9, 8-21
dmax.....	1-14, 7-10, 7-12
dmax, classification .....	7-2, 7-3
dmax, judgment of the average.....	9-3, 9-4
dmin.....	7-10
d(t) .....	1-15, 7-11

E	Page
Element .....	8-8, 8-20, 9-10, 9-13
element judgment.....	8-22, 9-2, 9-3, 9-4
element, selection of.....	9-5
error messages.....	13-2
Ethernet control .....	2-2, 2-5

F	Page
file information .....	5-2
flicker .....	1-14
flicker measurement flowchart.....	8-11
flicker measurement status.....	8-10, 8-23
flicker meter function and design specifications .....	1-8
frequency filter, copying.....	7-5
Function.....	8-8, 9-9
functions, explanation of.....	1-1

G	Page
General Mode.....	7-8, 7-9
GP-IB control .....	2-1, 2-3
graph .....	9-12
grid.....	9-8

H	Page
help.....	12-3

I	Page
icon .....	3-4
IEC 61000-3-3 .....	1-8
IEC 61000-4-15 .....	1-3, 1-8
IFS.....	1-17
information area.....	3-3
information bar.....	3-3
installation.....	2-7
instantaneous flicker sensation .....	1-17

J	Page
judgment by measurement item .....	9-4
judgment conditions.....	7-8
judgment, displaying of.....	8-18
judgment display when the measurement is complete.....	8-22

L	Page
limits .....	1-9, 7-8, 7-10, 7-11, 9-4
line filter, copying .....	7-5
long-term flicker value .....	1-17, 7-11
Lower.....	9-10

M	Page
Manual dmax Mode .....	7-8, 7-9
maximum relative voltage change.....	1-14, 7-10, 7-12
measured data, loading.....	1-2, 5-1
measured data, re-judgment of .....	8-6, 8-18
measured data, saving in CSV format.....	11-5
measured value and judgment for each observation period .....	9-4
measurement conditions .....	7-4, 9-4
measurement count.....	7-10
measurement, initialization of .....	8-10, 8-22
measurement items .....	1-3
measurement mode.....	7-9
measurement of dmax caused by manual switching.....	1-4, 7-9
measurement of dmax caused by manual switching, execution of.....	8-12
measurement of dmax caused by manual switching, flow chart of.....	8-23
measurement, resetting of.....	8-22
measurement target frequency.....	7-9
measure mode, selection .....	7-8
measure object.....	7-5
menu area .....	3-3

N	Page
new connection.....	6-1
normal voltage fluctuation and flicker measurement .....	1-4, 7-9
normal voltage fluctuation and flicker measurement, execution of.....	8-1
numerical judgments, displaying .....	9-1
numeric data and judgment view.....	1-4

O	Page
offline mode .....	1-6
offline, switching to .....	6-7
one observation period .....	7-9
online .....	6-3
online mode.....	1-6
operation, flow chart .....	1-12
overall judgment .....	8-22, 9-2, 9-3, 9-5

## Index

<b>P</b>	Page
password .....	6-3
period during which relative voltage change exceeds the threshold level .....	1-15, 7-11
Plt .....	1-17, 7-11
preparation flow chart .....	1-12
printer setup .....	10-5
printing .....	10-1
print language .....	10-4
print mode .....	10-4
print preview .....	10-2
Pst .....	1-17, 7-11

<b>R</b>	Page
range, copying .....	7-5
rated voltage .....	7-9, 8-10, 8-22
relative steady-state voltage change .....	1-14, 7-10
remeasuring .....	8-16
report, printing .....	10-6
reports .....	10-1

<b>S</b>	Page
scaling settings, copying .....	7-5
setting and display area .....	3-3
setting information, loading .....	5-1
short-term flicker value .....	1-17, 7-11
slider .....	9-11
software, closing .....	4-6
software license, terms and conditions of .....	v
software, starting .....	3-1
software window .....	3-3
specifications .....	14-1
standard, selection .....	3-1
standard test schedule menus .....	4-2
starting/stopping measurement .....	1-4
starting the software .....	3-1
steady-state condition .....	1-14
steady-state range .....	7-10
submenu area .....	3-3
system requirements .....	1-7

<b>T</b>	Page
terminology related to flicker .....	1-14
test flowchart .....	1-12
test initialization .....	8-3, 8-13
test, resetting .....	8-7, 8-19
test schedule menus .....	1-1
test schedule menu, selection .....	4-1
test, starting .....	8-5, 8-14
test, stopping .....	8-6, 8-17
tiling .....	12-2
time marker .....	8-12, 8-21
title .....	10-1
Trace .....	8-8, 8-20, 9-9, 9-13
trace, setting of .....	9-9, 9-13
trend graph .....	8-8, 8-20, 9-6
trend graph, setting of .....	9-8
trend graph view .....	1-4

<b>U</b>	Page
Upper .....	9-10
user name .....	6-3
User Setting .....	4-3
user's manual .....	12-3

<b>V</b>	Page
version information .....	12-5
voltage fluctuation and flicker suppression standards .....	1-8
voltage frequency .....	8-10, 8-22

<b>W</b>	Page
windows, cascading .....	12-1
windows, tiling .....	12-2
wiring .....	1-10
wiring pattern .....	7-2

<b>Z</b>	Page
zoom in/out .....	9-11
Ztest .....	8-3, 8-12