

Model GX10/GX20/GP10/GP20

Paperless Recorder First Step Guide



Contents

| | | | |
|--|-----------|--|-----------|
| Introduction | 1 | Basic Operation | 40 |
| Handling Precautions of the GX/GP | 7 | Turning the Power On and Off | 40 |
| SD Memory Card Handling Precautions | 7 | Setting and Removing SD Memory Cards | 41 |
| Checking the Package Contents | 7 | Viewing the Operation Screen (Trend) | 41 |
| Standard Accessories | 10 | Displaying the Menu Screen | 42 |
| Conventions Used in This Manual | 11 | Setting the Date and Time* | 42 |
| Protection of Environment | 12 | Configuring the Inputs | 43 |
| Functional Overview | 13 | Starting Measurement and Recording | 43 |
| Overview | 13 | Switching between Operation Screens | 43 |
| A Variety of Source Signals | 13 | Saving Data to USB Memory | 44 |
| Expandable Module Construction | 13 | Switching the Quick Settings (GP only) | 44 |
| GX60 Connection and Multichannel Measurement | 13 | Advanced Operation (Various settings and operation) | 45 |
| High-speed Measurement, Dual Interval Measurement (Measurement mode) | 14 | Setting Measurement and Recording Conditions | 45 |
| Loop Control and Program Control Function (/PG Option) | 14 | Setting Alarms | 45 |
| Data Storage | 14 | Alarm DO output | 46 |
| A Variety of Display Functions | 14 | Using the Scaling Function (Measuring a flow meter) | 46 |
| Touch Screen | 15 | Using the Scaling Function (Measuring a temperature) | 47 |
| Freehand Messages | 15 | Registering and Deleting Favorite Screens | 47 |
| Versatile Network Functions and Software | 15 | Setting the Measurement Mode | 48 |
| Future Pen Function ¹² | 16 | Setting the Measurement Mode | 48 |
| Equipment / Quality Prediction ¹² | 16 | Limitations | 48 |
| Other Functions | 16 | Reconfiguring the GX/GP (Module identification) | 49 |
| System Configuration | 17 | Reconfiguring the GX/GP | 49 |
| Component Names | 18 | Initializing the GX/GP | 49 |
| GX20/GX10 | 18 | (Initializing all settings) | 49 |
| GP20/GP10 | 19 | Saving and Loading Setting Parameters | 50 |
| GX60/GX90EX | 19 | Saving Setting Parameters | 50 |
| GX90XA/GX90XD/GX90YD/GX90WD/GX90XP/GX90YA/GX90UT | 20 | Loading Setup Parameters | 50 |
| Operating Procedure | 22 | Web Application | 51 |
| Installation and Wiring | 24 | Starting the Web Application | 51 |
| Installation Location | 24 | Closing the Web Application | 51 |
| Installation Procedure | 25 | Application Software | 52 |
| External Dimensions and Panel Cut Dimensions | 25 | PC System Requirements | 52 |
| Connect an GX60 | 28 | Installation | 52 |
| Installing and Removing I/O Modules | 29 | Starting and Closing Universal Viewer | 53 |
| Wiring | 30 | Starting and Closing Hardware Configurator | 53 |
| | | Setup Menu Map | 54 |

User Registration Request

Thank you for purchasing YOKOGAWA products.

Please register to the following Customer Portal Member Site.

You can use various services such as confirmation of purchased product information, download of related materials, and newsletter.

<https://myportal.yokogawa.com/>

Introduction

Thank you for purchasing the SMARTDAC+ GX/GP Series Paperless Recorder (hereafter referred to as the GX/GP). This manual explains the **basic operation, installation, and wiring** of the GX/GP.

For details on **configuring** and **operating** the GX/GP, see the “Paperless Recorder User’s Manual (IM 04L51B01-01EN)” provided in electronic format.

For details on the settings and operation of the PID control module and program control (/PG option), see the Loop Control Function, Program Control Function (/PG Option) User’s Manual (IM 04L51B01-31EN), provided as an electronic manual.

For details on the installation, wiring, settings of the network module and PROFINET communication, see the PROFINET Communication User’s Manual (IM 04L51B01-22EN), provided as an electronic manual.

This manual supports the following products.

| Model | Product Name |
|-----------|---------------------------------------|
| GX10/GX20 | Paperless Recorder (panel mount type) |
| GP10/GP20 | Paperless recorder (portable type) |
| GX60 | I/O Base Unit (Expandable I/O) |

Although the display of GX20 is used in this guide, GX10/GP10/GP20 can be operated similarly.

This manual denotes devices with their product names or model (e.g. GX60).

To ensure correct use, please read this manual and the following manuals thoroughly before beginning operation. For a detailed description of the product, see the electronic manual.

For specifications, refer to General Specifications.

Paper Manuals

| Manual Title | Manual No. |
|--|------------------|
| Models GX10/GX20/GP10/GP20 | IM 04L51B01-02EN |
| Paperless Recorder First Step Guide | (This manual) |
| Precaution on the use of SMARTDAC+ (Only delivered with each module or GX60) | IM 04L51B01-91EN |

Electronic Manuals

You can download these manuals from the following web page:

<https://www.yokogawa.com/lp/smardtacplus/>

| Manual Title | Manual No. |
|--|-------------------------|
| Model GX10/GX20/GP10/GP20 | IM 04L51B01-02EN |
| Paperless Recorder First Step Guide | |
| Model GX10/GX20/GP10/GP20 | IM 04L51B01-01EN |
| Paperless Recorder User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-17EN |
| Communication Command User’s Manual | |
| SMARTDAC+ STANDARD Universal Viewer | IM 04L61B01-01EN |
| User’s Manual | |
| SMARTDAC+ STANDARD Hardware Configurator | IM 04L61B01-02EN |
| User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-03EN |
| Multi-batch Function (/BT) User’s Manual | |
| Model GX10/GX20/GP10/GP20 | IM 04L51B01-05EN |
| Advanced Security Function (/AS) User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-18EN |
| EtherNet/IP Communication (/E1) User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-19EN |
| WT Communication (/E2) User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-20EN |
| OPC-UA Server (/E3) User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-21EN |
| SLMP Communication (/E4) User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10/GX90NW | IM 04L51B01-22EN |
| PROFINET Communication User’s Manual | |

| Manual Title | Manual No. |
|--|------------------|
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-06EN |
| LOG scale (/LG) User’s Manual | |
| Model GX10/GX20/GP10/GP20/GM10 | IM 04L51B01-31EN |
| Loop Control Function, Program Control Function (/PG Option) User’s Manual | |
| DXA170 DAQStudio User’s Manual | IM 04L41B01-62EN |
| Precaution on the use of SMARTDAC+ | IM 04L51B01-91EN |

General Specifications

| Title | General specifications No. |
|---|----------------------------|
| GX10/GX20 Paperless Recorder (panel mount type) | GS 04L51B01-01EN |
| GP10/GP20 Paperless Recorder (portable type) | GS 04L52B01-01EN |
| GX60 I/O Base Unit (Expandable I/O) / GX90EX Expansion Module | GS 04L53B00-01EN |
| GX90XA/GX90XD/GX90YD/GX90WD/GX90XP/GX90YA I/O modules | GS 04L53B01-01EN |
| GX90UT PID Control Module | GS 04L53B01-31EN |
| GX10/GX20/GP10/GP20 Paperless Recorder Data Acquisition System GM | |
| Loop Control Function, Program Control Function (/PG Option) | |
| GX90NW Network Module | GS 04L53B51-01EN |

- * The last two characters of the manual number and general specification number indicate the language in which the manual is written.

QR Code

The product has a QR Code pasted for efficient plant maintenance work and asset information management. It enables confirming the specifications of purchased products and user’s manuals.

For more details, please refer to the following URL.

<https://www.yokogawa.com/qr-code>

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Notes

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument’s performance and functions.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest Yokogawa dealer.
- Copying or reproducing all or any part of the contents of this manual without the permission of Yokogawa is strictly prohibited.

Authorised Representative in the EEA and the Importer into the EU/EEA Market

The Authorised Representative for this product in the EEA and the importer for this product into the EU/EEA market via Yokogawa sale channel is:

Yokogawa Europe B.V.

Euroweg 2, 3825 HD Amersfoort, The Netherlands

Importer for This Product into the Great Britain Market

In relation to UKCA marking, the importer for this product into the Great Britain market via the YOKOGAWA sales channel is :

Yokogawa United Kingdom Limited

Stuart Road Manor Park Runcorn, WA7 1TR, United Kingdom

Revisions

| | | | |
|----------------|--------------|----------------|--------------|
| December 2012 | 1st Edition | February 2013 | 2nd Edition |
| May 2013 | 3rd Edition | May 2014 | 4th Edition |
| December 2014 | 5th Edition | December 2015 | 6th Edition |
| June 2017 | 7th Edition | November 2017 | 8th Edition |
| June 2018 | 9th Edition | July 2018 | 10th Edition |
| March 2019 | 11th Edition | December 2019 | 12th Edition |
| April 2020 | 13th Edition | July 2020 | 14th Edition |
| March 2021 | 15th Edition | May 2022 | 16th Edition |
| September 2022 | 17th Edition | October 2023 | 18th Edition |
| September 2024 | 19th Edition | September 2025 | 20th Edition |

Trademarks

- SMARTDAC+ is registered trademark or trademark of Yokogawa Electric Corporation.
- Microsoft, MS, Microsoft Edge, and Windows are registered trademarks of Microsoft Corporation in the United States.
- Core2 Duo is a registered trademark of Intel Corporation.
- Intel Core is a trademark of Intel Corporation.
- Adobe and Acrobat are registered trademarks or trademarks of Adobe Systems Incorporated.
- Kerberos is a trademark of Massachusetts Institute of Technology (MIT).
- Google Chrome is a registered trademark of Google LLC.
- The SD logo is a registered trademark of the SD association.
- Company and product names that appear in this manual are registered trademarks or trademarks of their respective holders.
- The company and product names used in this manual are not accompanied by the registered trademark or trademark symbols (® and ™).

Manual guide for various items and functions

| Item, Function | Main manual Document name No. | Related manuals | | |
|--|---|-----------------------------------|---|--|
| | | User's Manual IM 04L51B01-01EN | Communication Command User's Manual IM 04L51B01-17EN | Paperless Recorder First Step Guide IM 04L51B01-02EN |
| | | Standard settings,operation | Communication comand | Installation and Wiring |
| Safety Precautions, Installation and Wiring, Basic operation of the GX/GP | First Step Guide IM 04L51B01-02EN | | ✓ | |
| basic operation and setting of the GX/GP. | User's Manual IM 04L51B01-01EN | | ✓ | |
| Math function (/MT) | User's Manual IM 04L51B01-01EN | | ✓ | |
| Report function (/MT) | User's Manual IM 04L51B01-01EN | | ✓ | |
| Report Template Function (/MT) | User's Manual IM 04L51B01-01EN | | ✓ | |
| Batch Function | User's Manual IM 04L51B01-01EN | | ✓ | |
| Modbus Function | User's Manual IM 04L51B01-01EN | | ✓ | |
| DARWIN compatible communication function | User's Manual IM 04L51B01-01EN | | ✓ | |
| Communication channel function (/MC) | User's Manual IM 04L51B01-01EN | | ✓ | |
| Serial communication function (/C2, /C3) | User's Manual IM 04L51B01-01EN | | ✓ | ✓ |
| Advanced security function (Part 11) | Advanced Security Function (/AS) User's Manual IM 04L51B01-05EN | ✓ | ✓ | |
| EtherNet/IP Communication (/E1) | EtherNet/IP Communication (/E1) User's Manual IM 04L51B01-18EN | ✓ | ✓ | |
| WT Communication (/E2) | WT Communication (/E2) User's Manual IM 04L51B01-19EN | | ✓ | |
| Aerospace heat treatment (/AH) | User's Manual IM 04L51B01-01EN | | ✓ | |
| Multi Batch Function (/BT) | Multi Batch Function (/BT) User's Manual IM 04L51B01-03EN | ✓ | ✓ | |
| OPC-UA Server (/E3) | OPC-UA Server (/E3) User's Manual IM 04L51B01-20EN | ✓ | ✓ | |
| SLMP Communication (/E4) | SLMP Communication (/E4) User's Manual IM 04L51B01-21EN | ✓ | ✓ | |
| PROFINET Communication | PROFINET Communication User's Manual IM 04L51B01-22EN | ✓ | ✓ | ✓ |
| Custom Display (/CG option) | DXA170 DAQStudio IM 04L41B01-62EN | ✓ | ✓ | |
| Log Scale (/LG) | Log Scale (/LG) User's Manual IM 04L51B01-06EN | ✓ | ✓ | |
| Loop Control Function, Program Control Function (/PG) | Loop Control Function, Program Control Function (/PG Option) User's Manual IM 04L51B01-31EN | ✓ | ✓ | ✓ |

Safety Precautions

- This instrument conforms to IEC safety class I (provided with terminal for protective grounding), Overvoltage Category II or I, Pollution Degree 2, and Measurement Category II (CAT II).
- This instrument is an EN 61326-1 (EMC standard) class A instrument (for use in commercial, industrial, or business environments). The influence rate (judgment condition A) in the immunity test environment is within $\pm 10\%$ of the range.
- The general safety precautions described here must be observed during all phases of operation. If the SMARTDAC+ is used in a manner not described in this manual, the SMARTDAC+ safety features may be impaired. Yokogawa Electric Corporation assumes no liability for the customer's failure to comply with these requirements.
- The SMARTDAC+ is designed for indoor use.
- Safety and EMC Standards
CSA:
CSA C22.2 No. 61010-1, CSA-C22.2 No. 61010-2-030, CAN/CSA-C22.2 No.61010-2-201, Overvoltage Category II or I^{*1}, Pollution Degree 2^{*2}, Measurement Category^{*3}
UL:
UL 61010-1, UL Std. No. 61010-2-030, UL 61010-2-201 (CSA NRTL/C), Overvoltage Category II or I^{*1}, Pollution Degree 2^{*2}, Measurement Category^{*3}
CE, UKCA/EMC directive:
EN 61326-1 Class A Table 2 (For use in industrial locations) compliant
EN 61000-3-2 compliant
EN IEC 61000-3-2 compliant
EN 61000-3-3 compliant
EN 55011 Class A Group 1 compliant
CE, UKCA/Low voltage directive:
EN 61010-1, EN IEC 61010-2-030, EN IEC 61010-2-201 compliant
Overvoltage Category II or I^{*1}, Pollution Degree 2^{*2}, Measurement Category^{*3}
CE, UKCA/EU RoHS directive: EN IEC 63000
WEEE Directive: Compliant
EMC Regulatory Arrangement in Australia and New Zealand (RCM): EN 55011 Class A Group 1 compliant
KC marking: KS C9811, KS C9610-6-2 compliant

*1 Overvoltage Category:

Describes a number which defines a transient overvoltage condition. Implies the regulation for impulse withstand voltage.

"II" applies to electrical equipment which is supplied from the fixed installation like a distribution board.

II: Applied to standard power supply (100-240 VAC)

I: Applied to low voltage power supply option (24 VDC/AC, 12 VDC, 12 to 24 VDC))

*2 Pollution Degree 2:

Describes the degree to which a solid, liquid, or gas which deteriorates dielectric strength or surface resistivity is adhering.

"2" applies to normal indoor atmosphere.

Normally, only non-conductive pollution occurs.

*3 Measurement Category:

The GX/GP's Measurement Category depends on the specification of each modules.

Measurement Category II (CAT II) are for the analog input modules (GX90XA) and PID control module (GX90UT).

Measurement category II (CAT II) applies to measuring circuits connected to low voltage installation, and electrical instruments supplied with power from fixed equipment such as electric switchboards.

About This Manual

- Please pass this manual to the end user. We also ask you to store this manual in a safe place.
- This guide is intended for the following personnel: Engineers responsible for installation, wiring, and maintenance of the equipment. Personnel responsible for normal daily operation of the equipment.
- Read this manual thoroughly and have a clear understanding of the product before operation.
- This manual explains the functions of the product. It does not guarantee that the product will suit a particular purpose of the user.
- This manual is part of this product. Keep this manual on safe place for future reference.

Precautions Related to the Protection, Safety, and Alteration of the Product

The following safety symbols are used on the product and in this manual.



"Handle with care." To avoid injury and damage to the instrument, the operator must refer to the explanation in the manual.



Protective ground terminal



Functional ground terminal
(do not use this terminal as a protective ground terminal.)



Alternating current



Direct current



ON (power)



OFF (power)

- For the protection and safe use of the product and the system in which this product is incorporated, be sure to follow the instructions and precautions on safety that are stated in this manual whenever you handle the product. Take special note that if you handle the product in a manner that violates these instructions, the protection functionality of the product may be damaged or impaired. In such cases, Yokogawa does not guarantee the quality, performance, function, and safety of product.
- When installing protection and/or safety circuits such as lightning protection devices and equipment for the product and control system or designing or installing separate protection and/or safety circuits for fool-proof design and fail-safe design of the processes and lines that use the product and the control system, the user should implement these using additional devices and equipment.
- If you are replacing parts or consumable items of the product, make sure to use parts specified by Yokogawa.
- This product is not designed or manufactured to be used in critical applications that directly affect or threaten human lives. Such applications include nuclear power equipment, devices using radioactivity, railway facilities, aviation equipment, air navigation facilities, aviation facilities, and medical equipment. If so used, it is the user's responsibility to include in the system additional equipment and devices that ensure personnel safety.
- Do not modify this product.



- **Use the Correct Power Supply**
Ensure that the source voltage matches the voltage of the power supply before turning ON the power. In the case of portable type and the GX60 (power inlet type), ensure that it is within the maximum rated voltage range of the provided power cord before connecting the power cord.
- **Use the Correct Power Cord and Plug (Portable Type, GX60 (power inlet type))**
To prevent electric shock or fire, be sure to use the power cord supplied by Yokogawa. The main power plug must be plugged into an outlet with a protective earth terminal. Do not disable this protection by using an extension cord without protective earth grounding.
The power cord is designed for use with this instrument. Do not use the power cord with other instruments.
- **Connect the Protective Grounding Terminal**
Make sure to connect the protective grounding to prevent electric shock before turning ON the power.
The power cord that comes with the portable type and the GX60 (power inlet type) are three prong type power cord. Connect the power cord to a properly grounded three-prong outlet.



- **Do Not Impair the Protective Grounding**
Never cut off the internal or external protective grounding wire or disconnect the wiring of the protective grounding terminal. Doing so invalidates the protective functions of the instrument and poses a potential shock hazard.
- **Do Not Operate with Defective Protective Grounding**
Do not operate the instrument if the protective grounding might be defective. Also, make sure to check them before operation.
- **Do Not Operate in an Explosive Atmosphere**
Do not operate the instrument in the presence of flammable gas, vapors, or combustible dust. Operation in such an environment constitutes a safety hazard. Prolonged use in a highly dense corrosive gas (H₂S, SO_x, etc.) will cause a malfunction.
- **Do Not Remove Covers**
The cover should be removed by Yokogawa's qualified personnel only. Opening the cover is dangerous, because some areas inside the instrument have high voltages.
- **Ground the Instrument before Making External Connections**
Connect the protective grounding before connecting to the item under measurement or control unit.
- **Damage to the Protection**
Operating the instrument in a manner not described in this manual may damage the instrument's protection.
- **Wiring**
To prevent shock, attach the included terminal cover after wiring. Make sure to use appropriate wires and crimp-on lugs.
If hazardous external voltage (30 V AC or 60 V DC or more) is applied to the I/O terminals, provide adequate protection to prevent users or service engineers from suddenly touching the terminals or tools or the like from coming in contact with the terminals.

This instrument is a Class A product. Operation of this instrument in a residential area may cause radio interference, in which case the user is required to take appropriate measures to correct the interference.

■ Exemption from Responsibility

- Yokogawa makes no warranties regarding the product except those stated in the WARRANTY that is provided separately.
- Yokogawa assumes no liability to any party for any loss or damage, direct or indirect, caused by the user or any unpredictable defect of the product.

■ Software Handling Precautions

- Yokogawa makes no warranties, either expressed or implied, with respect to the software's merchantability or suitability for any particular purpose, except as specified in the terms of the separately provided warranty.
- All reverse-engineering operations, such as reverse compilation or the reverse assembly of the product are strictly prohibited.
- No part of the product's software may be transferred, converted, or sublet for use by any third party, without prior written consent from Yokogawa.

About the Usage of Open Source Software

关于开放源代码软件的使用

This products uses open source software.

For details on using open source software, see Regarding the Downloading and Installing

for the Software, Manuals and Labels (IM 04L61B01-11EN).

Handling Precautions of the GX/GP

- Use care when cleaning this instrument, especially its plastic parts. Use a soft dry cloth. Do not use organic solvents, such as benzene or thinner, or other cleansers. They may cause discoloring and deformation.
- Keep electrically charged objects away from the signal terminals. Failure to do so may damage the GX/GP.
- Do not apply volatile chemicals to the display, panel keys, etc. Do not allow rubber and vinyl products to remain in contact with the GX/GP for long periods of time. Doing so may damage the GX/GP.
- When not in use, make sure to turn off the power switch.
- If there are any symptoms of trouble such as strange odors or smoke coming from the GX/GP, immediately turn off the power switch and the power supply source. Then, contact your nearest Yokogawa dealer.
- The electromagnetic relay module (GX90XA-10-T1) makes the relay operation sound.


SD Memory Card Handling Precautions

- SD memory cards are delicate and should be handled with caution.
- Yokogawa provides no warranty for damage to, or loss of data recorded on the SD memory card, regardless of the cause of such damage or loss. Please always make backup copies of your data.
- Do not store or use the SD memory card in places with static electricity, near electrically charged objects, or where electrical noise is present. Doing so can result in electric shock or damage.
- Do not disassemble or modify the SD memory card. Doing so can result in damage.
- Do not physically shock, bend, or pinch the SD memory card. Doing so can lead to malfunction.
- During reading/writing of data, do not turn OFF the power, apply vibration or shock, or pull out the card. Data can become corrupt or permanently lost.
- Only use Yokogawa SD memory cards. Operation cannot be guaranteed with other brands of card.
- When inserting the SD memory card into the instrument, make sure you orient the card correctly (face up or down) and that you insert it securely. If not inserted correctly, the card will not be recognized by the instrument.
- Never touch the SD memory card with wet hands. Doing so can lead to electric shock or malfunction.
- Never use the SD memory card if it is dusty or dirty. Doing so can lead to electric shock or malfunction.
- The SD memory card comes formatted.
SD cards must be formatted according to the standard established by the SD Association (<https://www.sdcard.org/home>). If you want format the SD memory card, use the instrument's Format function. If using a PC to perform the formatting, use the SD card formatter software available from the above SD Association.
- You can use SD/SDHC cards (up to 32 GB) on the GX/GP.

SD Memory Card Specifications and Characteristics

| | |
|---|--|
| Electrical specifications | Operating voltage: 2.7 V to 3.6 V (memory operation) |
| Operating temperature / humidity conditions | –25 to 85°C / 20 to 85% RH, no condensation |
| Storage temperature / humidity conditions | –40 to 85°C / 5 to 95% RH, no condensation |

Unit: mm

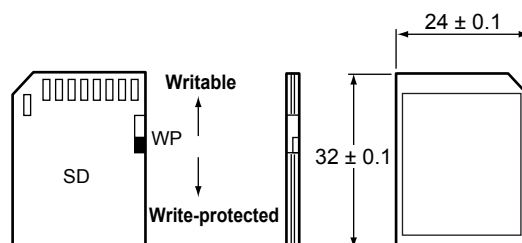

Checking the Package Contents

After receiving the product and opening the package, check the items described below. If the wrong items have been delivered, if items are missing, or if there is a problem with the appearance of the items, contact your nearest Yokogawa dealer.

Check that the product that you received is what you ordered by referring to the model name and suffix code given on the name plate on the GX/GP.

NO. (Instrument Number)

When contacting the dealer from which you purchased the instrument, please give them the instrument number.

MODEL and SUFFIX Codes

GX10/GX20¹³

| Model | Suffix Code | Optional Code | Description |
|----------|-------------|---------------|---|
| GX10 | | | Paperless recorder (Panel mount type, Small display) |
| GX20 | | | Paperless recorder (Panel mount type, Large display) |
| Type | -1 | | Standard (max. no. of measurement ch : 100) |
| | -2 | | Large Memory (max. no. of measurement ch : 500) ¹² |
| Language | E | | English, degF, DST (summer/winter time) ¹⁰ |
| Options | | | /AH Aerospace heat treatment |
| | | | /AS Advanced security function |
| | | | /BC Black cover |
| | | | /BT Multi-batch function |
| | | | /C2 RS-232 ¹ |
| | | | /C3 RS-422/485 ¹ |
| | | | /CG Custom display function |
| | | | /D5 VGA output ² |
| | | | /E1 EtherNet/IP communication (PLC communication protocol) ¹⁹ |
| | | | /E2 WT communication ¹⁴ |
| | | | /E3 OPC-UA server |
| | | | /E4 SLMP communication (Mitsubishi PLC) ²⁰ |
| | | | /FL Fail output, 1 point |
| | | | /LG LOG scale |
| | | | /MT Mathematical function (with report function) ^{15 18} |
| | | | /MC Communication channel function ^{21 23} |
| | | | /P1 24 VDC/AC power supply ⁴ |
| | | | /PG Program control function ²² |
| | | | /UH USB Interface (host 2 ports) |
| | | | /UC[]0 Analog (universal) input module preinstalled (clamp terminal) ³ |
| | | | /US[]0 Analog (universal) input module preinstalled (M3 screw terminal) ³ |
| | | | /CR[][] Digital output module, digital input module preinstalled ⁵ |

GP10/GP20¹³

| Model | Suffix Code | Optional Code | Description |
|--------------|-------------|---------------|---|
| GP10 | | | Paperless recorder (Portable type, Small display) |
| GP20 | | | Paperless recorder (Portable type, Large display) |
| Type | -1 | | Standard (max. no. of measurement ch : 100) |
| | -2 | | Large Memory (max. no. of measurement ch : 500) ¹² |
| Language | E | | English, degF, DST (summer/winter time) ¹⁰ |
| Power supply | 1 | | 100 VAC, 240 VAC ¹⁶ |
| | 2 | | 12V DC ¹⁷ |
| Power cord | D | | Power cord UL/CSA standard |
| | F | | Power cord VDE standard |
| | R | | Power cord AS standard |
| | Q | | Power cord BS standard |
| | H | | Power cord GB standard |
| | N | | Power cord NBR standard |
| | W | | Screw terminal, power cord not included |
| Options | | | /AH Aerospace heat treatment |
| | | | /AS Advanced security function |
| | | | /BT Multi-batch function |
| | | | /C2 RS-232 ¹ |
| | | | /C3 RS-422/485 ¹ |
| | | | /CG Custom display function |
| | | | /D5 VGA output ² |
| | | | /E1 EtherNet/IP communication (PLC communication protocol) ¹⁹ |
| | | | /E2 WT communication ¹⁴ |
| | | | /E3 OPC-UA server |
| | | | /E4 SLMP communication (Mitsubishi PLC) ²⁰ |
| | | | /FL Fail output, 1 point |
| | | | /LG LOG scale |
| | | | /MT Mathematical function (with report function) ^{15 18} |
| | | | /MC Communication channel function ^{21 23} |
| | | | /PG Program control function ²² |
| | | | /UH USB interface (host 2 ports) |
| | | | /UC[]0 Analog (universal) input module preinstalled (clamp terminal) ³ |
| | | | /US[]0 Analog (universal) input module preinstalled (M3 screw terminal) ³ |
| | | | /CR[][] Digital output module, digital input module preinstalled ⁵ |

Models in Which I/O Modules Are Preinstalled

| Model | Suffix Code | Optional Code | Description |
|--|---------------|---------------|---|
| GX10 | -□E/[][] | | Paperless recorder (panel mount type) |
| GX20 | | | |
| GP10 | -□E1[][][] | | Paperless recorder (portable type) |
| GP20 | | | |
| Options (analog Input) ^{3 11} | | | /UC10 With analog input module, 10ch (Clamp terminal) |
| | | | /UC20 With analog input module, 20ch (Clamp terminal) ⁷ |
| | | | /UC30 With analog input module, 30ch (Clamp terminal) ⁸ |
| | | | /UC40 With analog input module, 40ch (Clamp terminal) ⁵ |
| | | | /UC50 With analog input module, 50ch (Clamp terminal) ⁵ |
| | | | /US10 With 10ch analog input module (M3 screw terminal) |
| | | | /US20 With 20ch analog input module (M3 screw terminal) ⁷ |
| | | | /US30 With 30ch analog input module (M3 screw terminal) ⁸ |
| | | | /US40 With 40ch analog input module (M3 screw terminal) ⁵ |
| | | | /US50 With 50ch analog input module (M3 screw terminal) ⁵ |
| Options (digital I/O) ⁴ | | | /CR01 With digital I/O module (output: 0, input: 16) ^{8, 9, 15} |
| | | | /CR10 With digital I/O module (output: 6, input: 0) ⁸ |
| | | | /CR11 With digital I/O module (output: 6, input: 16) ^{7, 8, 9, 15} |
| | | | /CR20 With digital I/O module (output: 12, input: 0) ⁶ |
| | | | /CR21 With digital I/O module (output: 12, input: 16) ^{6, 9, 15} |
| | | | /CR40 With digital I/O module (output: 24, input: 0) ⁶ |
| | | | /CR41 With digital I/O module (output: 24, input: 16) ^{6, 9, 15} |

- 1 /C2 and /C3 cannot be specified together.
- 2 /D5 can be specified only for the GX20/GP20.
- 3 Only one option can be specified.
- 4 Only one option can be specified.
- 5 /UC40, /UC50, /US40, and /US50 cannot be specified for the GX10/GP10.
- 6 /CR20, /CR21, /CR40, and /CR41 cannot be specified for the GX10/GP10.
- 7 If /UC20 or /US20 is specified for the GX10/GP10, /CR11 cannot be specified.
- 8 If /UC30 or /US30 is specified for the GX10/GP10, /CR01, /CR10, and /CR11 cannot be specified.
- 9 A digital input module has M3 screw terminals.
- 10 The Display language is selectable from English, German, French, Italian, Russian, Korean, Chinese (Simplified), Chinese (Traditional), Japanese. To confirm the current available languages, please visit the following website. URL: www.yokogawa.com/ns/language/
- 11 Solid state relay type (Type Suffix Code: -U2).
- 12 Can be specified only for the GX20/GP20.
- 13 To connect an I/O base unit, you will need one I/O expansion module for the GX/GP.
- 14 /MC option must be specified together when the WT communication is selected.
- 15 Optional code /MT (MATH) required if using the GX90XD's or GX90WD's pulse input.
- 16 Selectable only when the power cord suffix code is D or F or R or Q or H or N.
- 17 Selectable only for the GP10 when the power cord suffix code is W.
- 18 The /MT option (computation) is required to perform pulse integration on GX90XP pulse input modules.
- 19 If you want to write from a PLC to the GX/GP via EtherNet/IP communication, a communication channel (/MC) must be specified together.
- 20 If you want to read PLC data to communication channel via SLMP communication, a communication channel (/MC) must be specified together.
- 21 If you want to load data from other devices into the GX/GP using Modbus client, a communication channel (/MC) is required.
- 22 This is applicable only when a GX90UT PID Control Module is installed.
- 23 Communication channel (/MC) required if using the profile function.

I/O Base Unit (Expandable I/O) ¹

| Model | Suffix Code | Description |
|--------------|-------------|--|
| GX60 | | I/O base unit |
| Type | -EX | I/O Expansion |
| Area | N | General |
| Power supply | 1 | 100 VAC, 240 VAC |
| Power cord | D | Power cord UL/CSA standard |
| | F | Power cord VDE standard |
| | R | Power cord AS standard |
| | Q | Power cord BS standard |
| | H | Power cord GB standard |
| | N | Power cord NBR standard |
| | W | Screw terminal, power cord not included ² |

- 1 Include GX90EX (Expansion module), Stopper (antiskid rubber)
- 2 Intended use for panel or rack mounting only.

I/O Expansion Module (Expansion Module)

| Model | Suffix Code | Description |
|--------|-------------|----------------------|
| GX90EX | | I/O Expansion Module |
| Port | -02 | 2 ports |
| Type | -TP1 | Twisted pair cable |
| - | N | Always N |
| Area | -N | General |

Network Module

| Model | Suffix Code | Description |
|-----------------|-------------|-----------------|
| GX90NW | | Network Module |
| Number of ports | -02 | 2 ports |
| Type | -PN | PROFINET |
| - | N | Always N |
| Terminal type | -R | RJ-45 connector |
| Area | N | General |

I/O Modules

GX90XA

| Model | Suffix Code | Description |
|---------------|-------------|--|
| GX90XA | | Analog Input Module |
| Channels | -04 | 4 channels (Type -H0 only) |
| | -06 | 6 channels (Type -R1 only) |
| | -10 | 10 channels (Type -C1, -L1, -U2, -T1, -V1) |
| Type | -C1 | Current, Scanner type (isolated between channels) |
| | -L1 | DCV/TC/DI (400 VAC, 1 min), Scanner type (isolated between channels) |
| | -U2 | Universal, Solid state relay scanner type (3-wire RTD b-terminal common) |
| | -T1 | DCV/TC/DI, Electromagnetic relay scanner type (isolated between channels) |
| | -H0 | High-speed universal, individual A/D type (isolated between channels) |
| | -R1 | 4-wire RTD/resistance, scanner type (isolated between channels) |
| | -V1 | DCV/TC/DI, high withstand voltage scanner type (isolated between channels) |
| - | N | Always N |
| Terminal type | -3 | Screw terminal (M3) |
| | -C | Clamp terminal |
| Area | N | General |

GX90XD

| Model | Suffix Code | Description |
|---------------|-------------|--|
| GX90XD | | Digital Input Module ¹ |
| Channels | -16 | 16 channels |
| Type | -11 | Open collector/Non-voltage, contact (shared common), Rated 5 VDC |
| - | N | Always N |
| Terminal type | -3 | Screw terminal (M3) |
| | -C | Clamp terminal |
| Area | N | General |

- 1 Optional code /MT (MATH) required if using the pulse input.

GX90YD

| Model | Suffix Code | Description |
|---------------|-------------|-----------------------|
| GX90YD | | Digital Output Module |
| Channels | -06 | 6 channels |
| Type | -11 | Relay, SPDT(NO-C-NC) |
| - | N | Always N |
| Terminal type | -3 | Screw terminal (M3) |
| Area | N | General |

GX90WD

| Model | Suffix Code | Description |
|---------------|-------------|--|
| GX90WD | | Digital Input/Output Module ¹ |
| Channels | -0806 | Input 8 channels, Output 6 channels |
| Type | -01 | Open collector/non-voltage contact (shared common), rated 5 VDC; Relay, SPDT (NO-C-NC) |
| - | N | Always N |
| Terminal type | -3 | Screw terminal (M3) |
| Area | N | General |

- 1 Optional code /MT (MATH) required if using the pulse input.

GX90XP

| Model | Suffix Code | Description |
|---------------|-------------|---|
| GX90XP | | Pulse Input Module ¹ |
| Channels | -10 | 10 channels |
| Type | -11 | DC voltage/Open collector/Non-voltage, contact (shared common), Rated 5 VDC |
| - | N | Always N |
| Terminal type | -3 | Screw terminal (M3) |
| | -C | Clamp terminal |
| Area | N | General |

¹ The /MT option (computation) is required to perform pulse integration.

GX90YA

| Model | Suffix Code | Description |
|---------------|-------------|--|
| GX90YA | | Analog Output Module |
| Channels | -04 | 4 channels |
| Type | -C1 | Current output (isolated between channels) |
| - | N | Always N |
| Terminal type | -3 | Screw terminal (M3) |
| | -C | Clamp terminal |
| Area | N | General |

GX90UT


| Model | Suffix Code | Description |
|-----------------|-------------|--------------------------|
| GX90UT | | PID Control Module |
| Number of loops | -02 | 2 loops |
| Function | -11 | DI 8 points, DO 8 points |
| - | N | Always N |
| Terminal type | -3 | Screw terminal (M3) |
| Area | N | General |

■ Customized Product

For customized product, the product is identified by the option code of /S# (where '#' is a number). Contact your supplier in case your instrument has option /S#, and you are not in the possession of IM [Model code]-S# (where [Model code] means, for example, GX90XA).

Standard Accessories

The instrument is shipped with the following accessories. Make sure that all accessories are present and undamaged.

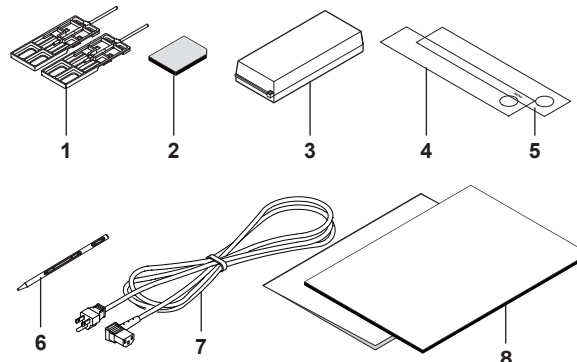

| No. | Name | Part Number/Model | Qty. | Notes |
|-----|------------------|-------------------|------|---|
| 1 | Mounting bracket | B8740DY | 2 | GX10/GX20 only |
| 2 | SD memory card | 773001 | 1 | 1GB |
| 3 | Dummy cover | B8740CZ | | For empty slots |
| 4 | Tag plate | B8740FE | 1 | GX20 |
| | | B8740ME | 1 | GP20 |
| | | B8741FE | 1 | GX10 |
| | | B8741ME | 1 | GP10 |
| 5 | Sheet | B8740FF | 1 | GX20 |
| | | B8740MF | 1 | GP20 |
| | | B8741FF | 1 | GX10 |
| | | B8741MF | 1 | GP10 |
| 6 | Stylus | B8740BZ | 1 | |
| 7 | Power cord | A1006WD | 1 | D: Power cord UL, CSA st'd ¹ |
| | | A1009WD | 1 | F: Power cord VDE st'd ¹ |
| | | A1024WD | 1 | R: Power cord AS st'd ¹ |
| | | A1054WD | 1 | Q: Power cord BS st'd ¹ |
| | | A1064WD | 1 | H: Power cord GB st'd ¹ |
| | | A1088WD | 1 | N: Power cord NBR st'd ¹ |
| 8 | Manual | IM 04L51B01-02EN | 1 | First Step Guide (This manual) |
| | | IM 04L61B01-11EN | 1 | Regarding the Downloading and Installing for the Software, Manuals and Labels/About the Usage of Open Source Software |

¹ Except GP10 power supply suffix code: 2

Optional Accessories (Sold separately)

| Name | Part Number/Model | Minimum Qty | Notes |
|--|-------------------|-------------|------------------------|
| Mounting bracket | B8740DY | 2 | GX10/GX20 only |
| SD memory card | 773001 | 1 | 1GB |
| Stylus | B8740BZ | 1 | |
| Shunt resistor (for M3 screw terminal) | 415940 | 1 | 250 $\Omega \pm 0.1\%$ |
| | 415941 | 1 | 100 $\Omega \pm 0.1\%$ |
| | 415942 | 1 | 10 $\Omega \pm 0.1\%$ |
| Shunt resistor (for clamp terminal) | 438920 | 1 | 250 $\Omega \pm 0.1\%$ |
| | 438921 | 1 | 100 $\Omega \pm 0.1\%$ |
| | 438922 | 1 | 10 $\Omega \pm 0.1\%$ |
| Dummy cover | B8740CZ | 1 | For module slot |

GX/GP Style Number, Release Number, and Firmware Version Number

Style number: The GX/GP hardware ID number. This number is written on the name plate (H column).

Release number: The GX/GP firmware ID number. This number is written on the name plate (S column). This number matches with the integer part of the firmware version number.

Example: If the firmware version number is 1.01, the release number is 1.

Firmware version number:

This number appears on the system information screen of the GX/GP. To view the number, see section 2.3, "Displaying Various Types of Information" in the User's Manual, IM 04L51B01-01EN.

Module Notation

When necessary, the following notations are used to distinguish the GX90XA analog input modules by type.

| Type Suffix Code | Notation |
|------------------|---------------------------------------|
| -U2 | Universal |
| -C1 | Current (mA) |
| -L1 | Low withstand voltage relay |
| -T1 | Electromagnetic relay |
| -H0 | High-speed universal or High speed AI |
| -R1 | 4-wire RTD/resistance |
| -V1 | High withstand voltage |

Conventions Used in This Manual

- This manual covers information regarding GX/GPs whose display language is English.
- For details on the language setting, see the Paperless Recorder User's Manual, IM04L51B01-01EN.

Unit

K: Denotes 1024. Example: 768K (file size)

k: Denotes 1000.

The notes and cautions in this manual are indicated using the following symbols.



Improper handling or use can lead to injury to the user or damage to the instrument. This symbol appears on the instrument to indicate that the user must refer to the user's manual for special instructions. The same symbol appears in the corresponding place in the user's manual to identify those instructions. In the manual, the symbol is used in conjunction with the word "WARNING" or "CAUTION."

WARNING

Calls attention to actions or conditions that could cause serious or fatal injury to the user, and precautions that can be taken to prevent such occurrences.

CAUTION

Calls attentions to actions or conditions that could cause light injury to the user or damage to the instrument or user's data, and precautions that can be taken to prevent such occurrences.

Note

Calls attention to information that is important for proper operation of the instrument.

Protection of Environment

Control of Pollution Caused by the Product

This is an explanation for the product based on “Control of pollution caused by Electronic Information Products” in the People’s Republic of China.

产品中有毒有害物质或元素的名称及含量

| 部件名称 | | 有毒有害物质或元素 | | | | | |
|------------|----------------------------|-----------|-------|-------|-----------|-----------|-------------|
| | | 铅(Pb) | 汞(Hg) | 镉(Cd) | 六价铬(Cr6+) | 多溴联苯(PBB) | 多溴二苯醚(PBDB) |
| 印制电路板 | | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| 内部接线材料 | | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| 外壳/ 机箱 | 塑料 | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| | 金属 | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| I/O 模块外壳 | 塑料 | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| 电源 | | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| 正面边框 | | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| 标准附件/ 可选附件 | 显示器 (LCD) | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| | 安装支架 | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| | 电源线(GP10/GP20/GX60 (的插口型)) | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| | SD 存储卡 | N/A | N/A | N/A | ✓ | ✓ | ✓ |
| | 分流电阻 | N/A | N/A | N/A | ✓ | ✓ | ✓ |

✓: 表示该部件的所有均质材料中的有毒有害物质或元素的含量均低于GB/T 26572 标准所规定的限量要求。

N/A: 表示该部件中至少有一种均质材料中的有毒有害物质或元素的含量超过GB/T 26572 标准所规定的限量要求。

本产品的部分部件包含RoHS指令中的限用物质, 但是其使用方法不受该指令限制。

Some parts of this product include the restricted substances of RoHS Directive, but their applications are under the exemption of the directive.



该标志为环境保护使用期限, 根据SJ/T11364, 适用于在中国(台湾、香港、澳门除外)销售的电子电气产品。只要遵守该产品的安全及使用注意事项, 从产品生产之日起至该标志所示年限内, 不会因为产品中的有害物质外泄或突变而导致环境污染或对人身财产产生重大影响。

注释) 该标志所示年限为“环境保护使用期限”, 并非产品的保质期。另外, 关于更换部件的推荐更换周期, 请参阅使用说明书。

Waste Electrical and Electronic Equipment (WEEE), Directive



This is an explanation of how to dispose of this product based on Waste Electrical and Electronic Equipment (WEEE), Directive and Regulation. Only valid in the EEA for EU WEEE Directive and in the UK for UK WEEE Regulation.

- Marking

This product complies with the WEEE marking requirement. This marking indicates that you must not discard this electrical/electronic product in domestic household waste.

When disposing of products in the EEA or UK, contact your local Yokogawa office in the EEA or UK respectively.

How to Dispose the Batteries



This is an explanation about the EU Battery Directive/Regulation and UK Battery Regulation.

Only valid in the EEA for EU Battery Directive/Regulation and in the UK for UK Batter Regulation.

Batteries are included in this product. Batteries incorporated into this product cannot be removed by yourself. Dispose them together with this product. When you dispose this product in the EEA or UK, contact your local Yokogawa office in the EEA or UK respectively. Do not dispose them as domestic household waste.


Battery type: Lithium battery

Notice: The symbol (see above) means they shall be sorted out and collected as ordained in the EU Battery Directive/Regulation and UK Battery Regulation.

Functional Overview

Overview

The GX/GP is a paperless recorder that can display measured data in real time on its touch screen and save the data in an SD memory card.

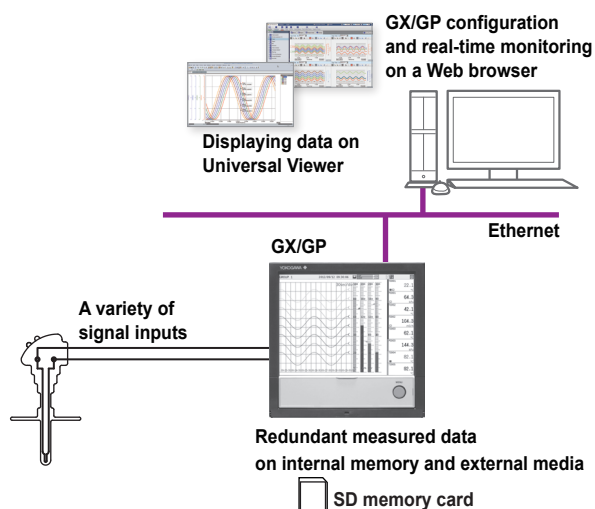

A Variety of Source Signals

The GX/GP can connect to DC voltage, TC, RTD, ON/OFF, DC current (mA) and pulse inputs and measure temperature, flow rate, and other parameters. The GX/GP acquires data by sampling input signals at the set scan interval. The shortest scan interval is 1 ms (High-speed AI module). Up to four alarm conditions can be specified on each measurement channel.

Expandable Module Construction


The I/O section is modular, so you can configure your system according to the input types and number of measurement points.

Modules

| Model | Name | Channels |
|--------|-----------------------------|---------------------------|
| GX90XA | Analog input module | 4/6/10 |
| GX90XD | Digital input module | 16 |
| GX90YD | Digital output module | 6 |
| GX90WD | Digital Input/Output Module | Input : 8 , Output : 6 |
| GX90XP | Pulse Input Module | 10 |
| GX90YA | Analog output module | 4 |
| GX90UT | PID Control Module | 26 |

- Up to 10 modules can be installed in the GX20/GP20.
- Up to 3 modules can be installed in the GX10/GP10.
- Different modules can coexist.

* Up to nine modules for the GX20/GP20 and two modules for the GX10/GP10 when an GX60 is connected.

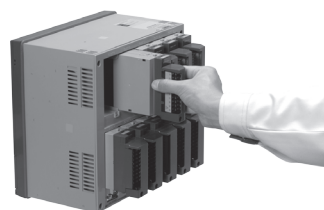


Detachable module terminal block

Maintenance is easy!



GX60 Connection and Multichannel Measurement

An GX60 I/O can be connected to the GX20/GP20 to measure up to 450 channels. On the standard type, you can connect the GX60 to allocate input sections at different locations.

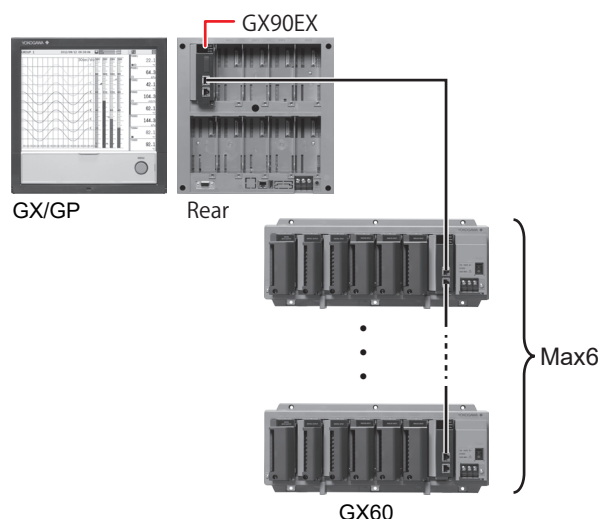

GX/GP configuration

| Item | GX/GP | |
|--|-----------------|-------------------|
| | Standard Type | Large Memory Type |
| Maximum number of connectable GX60 | 6 | 6 |
| Maximum number of I/O modules (main unit + GX60) | 10 ¹ | 45 ² |
| Maximum number of I/O channels | 100 | 500 |

1 2 on the rear of the GX10/GP10, 9 on the rear of the GX20/GP20.

2 9 on the rear of the GX20/GP20.

High-speed Measurement, Dual Interval Measurement (Measurement mode)

The GX/GP has measurement modes to allow high-speed measurement and simultaneous measurement of slow and fast signals.

In high-speed measurement, a high-speed AI module can be installed to achieve measurement at the shortest interval of 1 ms.

In dual interval measurement, measurement can be performed by two measurement groups with different scan intervals.


Various measurements can be performed by changing the measurement mode according to the measurement target and measurement conditions.

Loop Control and Program Control Function (/PG Option)

By installing a PID Control Module (GX90UT), you can perform PID control of up to 20 loops (up to 6 loops for the GX10/GP10). In addition to control loop monitoring and the control group screen for convenient operation, adjustment using the tuning screen is available. Adding the /PG option to the GX/GP main unit allows 99 patterns and 99 segments of program patterns to be stored in the main unit. Further, 32 time events can be set.


Data Storage

There are two ways to store data. One way is to record measured data at all times (display data and event data). The other way is to record only when events, such as alarms, occur (event data). Measured data is saved to the internal memory at the specified interval. Data in the internal memory can be saved to the SD memory card automatically or manually. Measured data can be transferred automatically to an FTP server over an Ethernet connection.

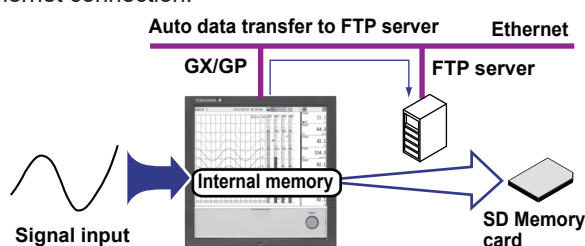


A Variety of Display Functions

Measured data can be displayed in groups as trend waveforms, values, and bar graphs. There is also an overview display that you can monitor all channels on a single screen.

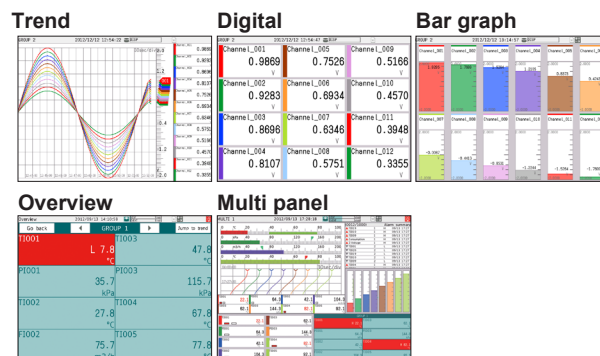

Custom Display (Option, /CG)

You can control and monitor on a custom display consisting of digital, trend, bar graph, and other components and images can that are laid out freely. Custom displays are created using DAQStudio (DXA170), a software application sold separately. Displays that you create are loaded into the GX/GP from DAQStudio or from an external storage medium.




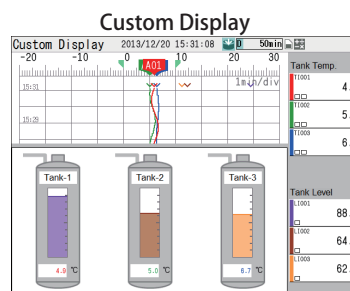


Touch Screen

The GX/GP touch screen enables intuitive operation. You can tap the icons of setup and operation items as well as scroll and zoom in on and out of waveforms by directly touching the screen. In addition, when you are working on-site, you can operate the GX/GP with your gloves on.




Touch Operations

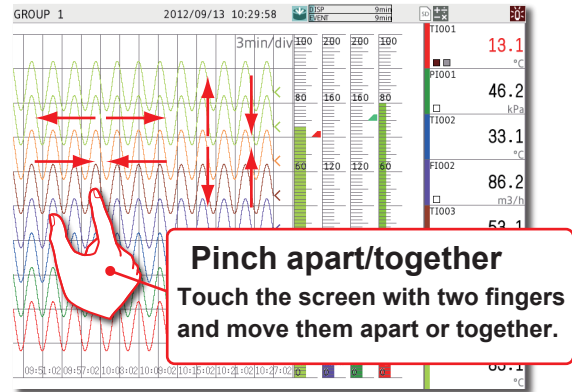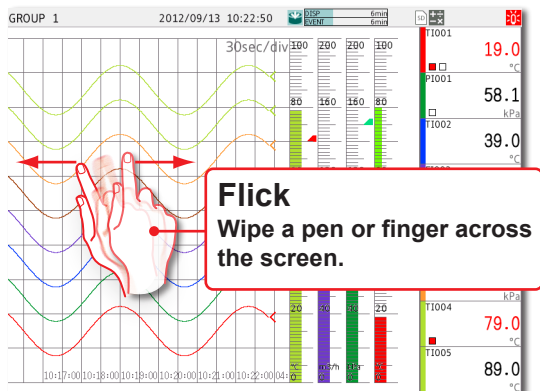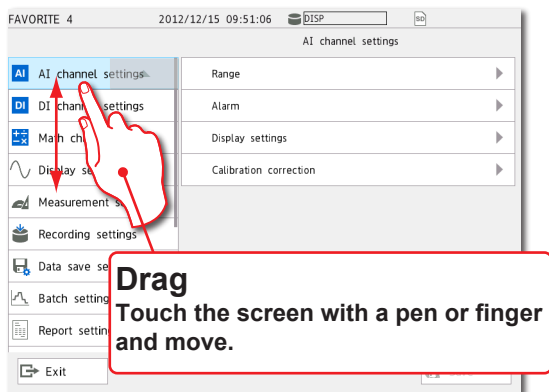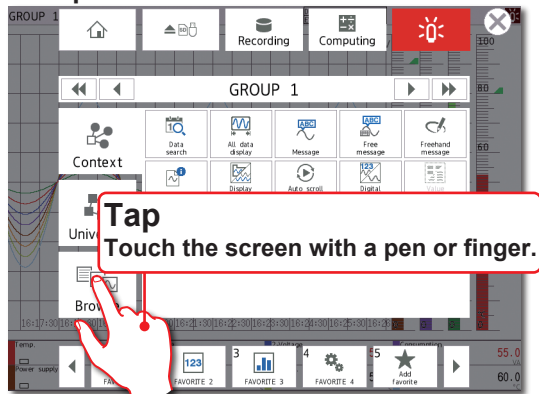

Freehand Messages


You can use the touch pen or your finger to write text and draw marks freely in the waveform area. The messages that you write can easily be displayed from information displays such as the message summary and memory summary.

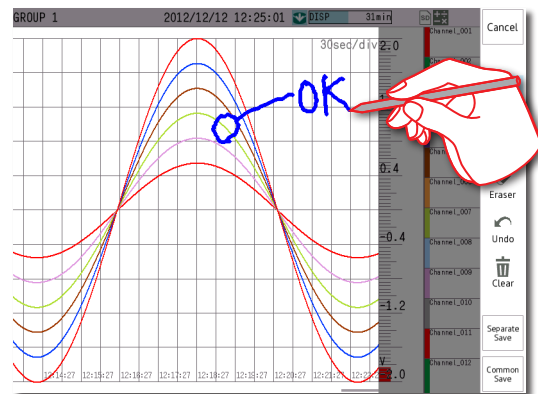

Versatile Network Functions and Software

The Ethernet interface enables you to monitor the GX/GP from a Web browser. E-mails can be sent through this interface when alarms and other events occur.

In addition, you can use the Modbus protocol to read data from other devices on the network and display it. As for the software, Universal Viewer can be used to view measured data and convert the data into other data formats.

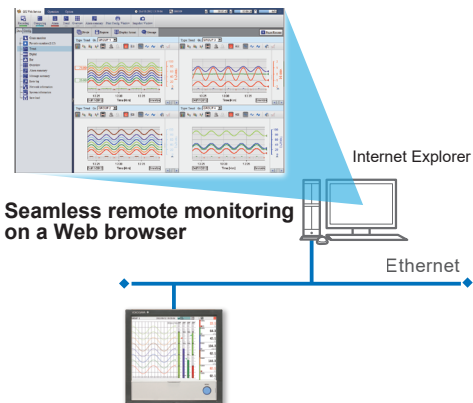


Future Pen Function^{1 2}

By setting existing channels as the target channels (up to 10) of the Future Pen, the function learns from those channels' past data and predicts their future waveforms. The future pen then draws the predicted future waveforms in the predicted future waveform area of the trend screen. If alarm conditions (upper and lower limit values) are set on future pen target channels, the unit can apply those conditions to the predicted future waveform and generate Future Alarms.

You can check future alarms in the Future Alarm Summary screen. When a future alarm occurs, you can use it to run an event action function or send a Future Alarm Email.

- 1 Not available when in high speed measurement mode or with dual interval.
- 2 Not available when the Advanced Security Function (option /AS) and Multi-batch function (option /BT2) are enabled.

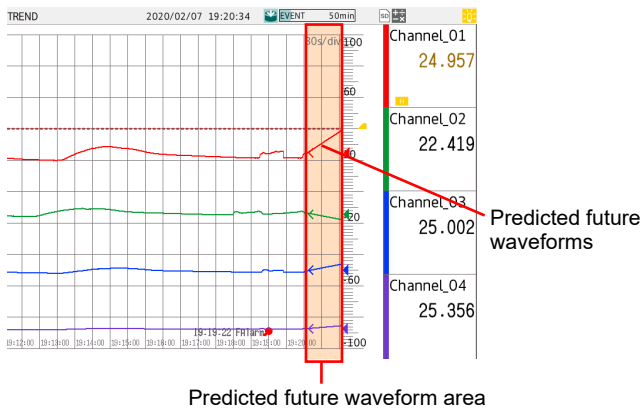

Note) Future waveforms predicted by the Future Pen function are for reference only. Performance, accuracy, and other properties are not guaranteed.

Equipment / Quality Prediction^{1 2}

- Health Monitor Function

This function judges quality based on a predictive detection model. You can check health scores that indicate degrees of normality and abnormality. Create predictive detection models with the Equipment/Quality Predictive Detection Tool (sold separately, in the cloud or offline) based on historical measurement data.

- Profile Function

This function alerts you to deviations from the profile trend (upper and lower range of measured values). You can also check deviations from a reference waveform on screen. Create profile trends with the Equipment/Quality Predictive Detection Tool (sold separately, in the cloud or offline) based on historical measurement data.

- 1 Not available when in high speed measurement mode or with dual interval.
- 2 Not available when the Multi-batch Function (option /BT) are enabled.


Note) Judgments from equipment/quality prediction are for reference only. Performance, accuracy, and other properties are not guaranteed.

Other Functions

| | |
|---|---|
| Math function (/MT option) | Expressions can be assigned to math channels to perform various computations. Logic math can output calculated results as 0 or 1 to DOs or internal switches. Computation is performed regardless of the math start/stop condition. You can perform elapsed time calculation. |
| FAIL output (/FL option) | This function transmits alarms when the GX/GP fails. |
| Security function | You can allow only registered users to use the GX/GP. In addition, certain operations can be prohibited. |
| Remote control | This function executes specified operations by combining input modules and the event action function. |
| Advanced security function (/AS option) | A security function that complies with US FDA 21CFR Part11. Electronic signatures can be added to measured data. |
| EtherNet/IP communication (/E1 option) | This function is equipped with a server function that enables communication with EtherNet/IP devices. |
| WT communication (/E2 option) | This function acquires measured and calculated data from a power meter and displays and records it along with the measured values of the GX/GP. |
| LOG scale (/LG option) | This function measures logarithmic voltage that has been converted from a physical value, scales the voltage, and displays the resultant data. |
| Aerospace heat treatment (/AH option) | Supports aerospace heat treatment measurements and NADCAP AMS2750E compliant recording and reporting. Manage user-defined schedules for periodical execution. |
| Multi batch (/BT option) | Start and stop recording separately for each batch and create data files for each batch. |
| OPC-UA server (/E3 option) | Equipped with an OPC-UA server function. GX/GP measurement data can be retrieved directly from a host system, such as SCADA and MES. |
| SLMP communication (/E4 option) | Equipped with a client function for the MC protocol. Connection to Mitsubishi Electric PLCs can be established easily. |
| Network Module | PROFINET communication is available by using the network module (GX90NW-02-PN). |

System Configuration


You can configure a GX/GP system as shown below.

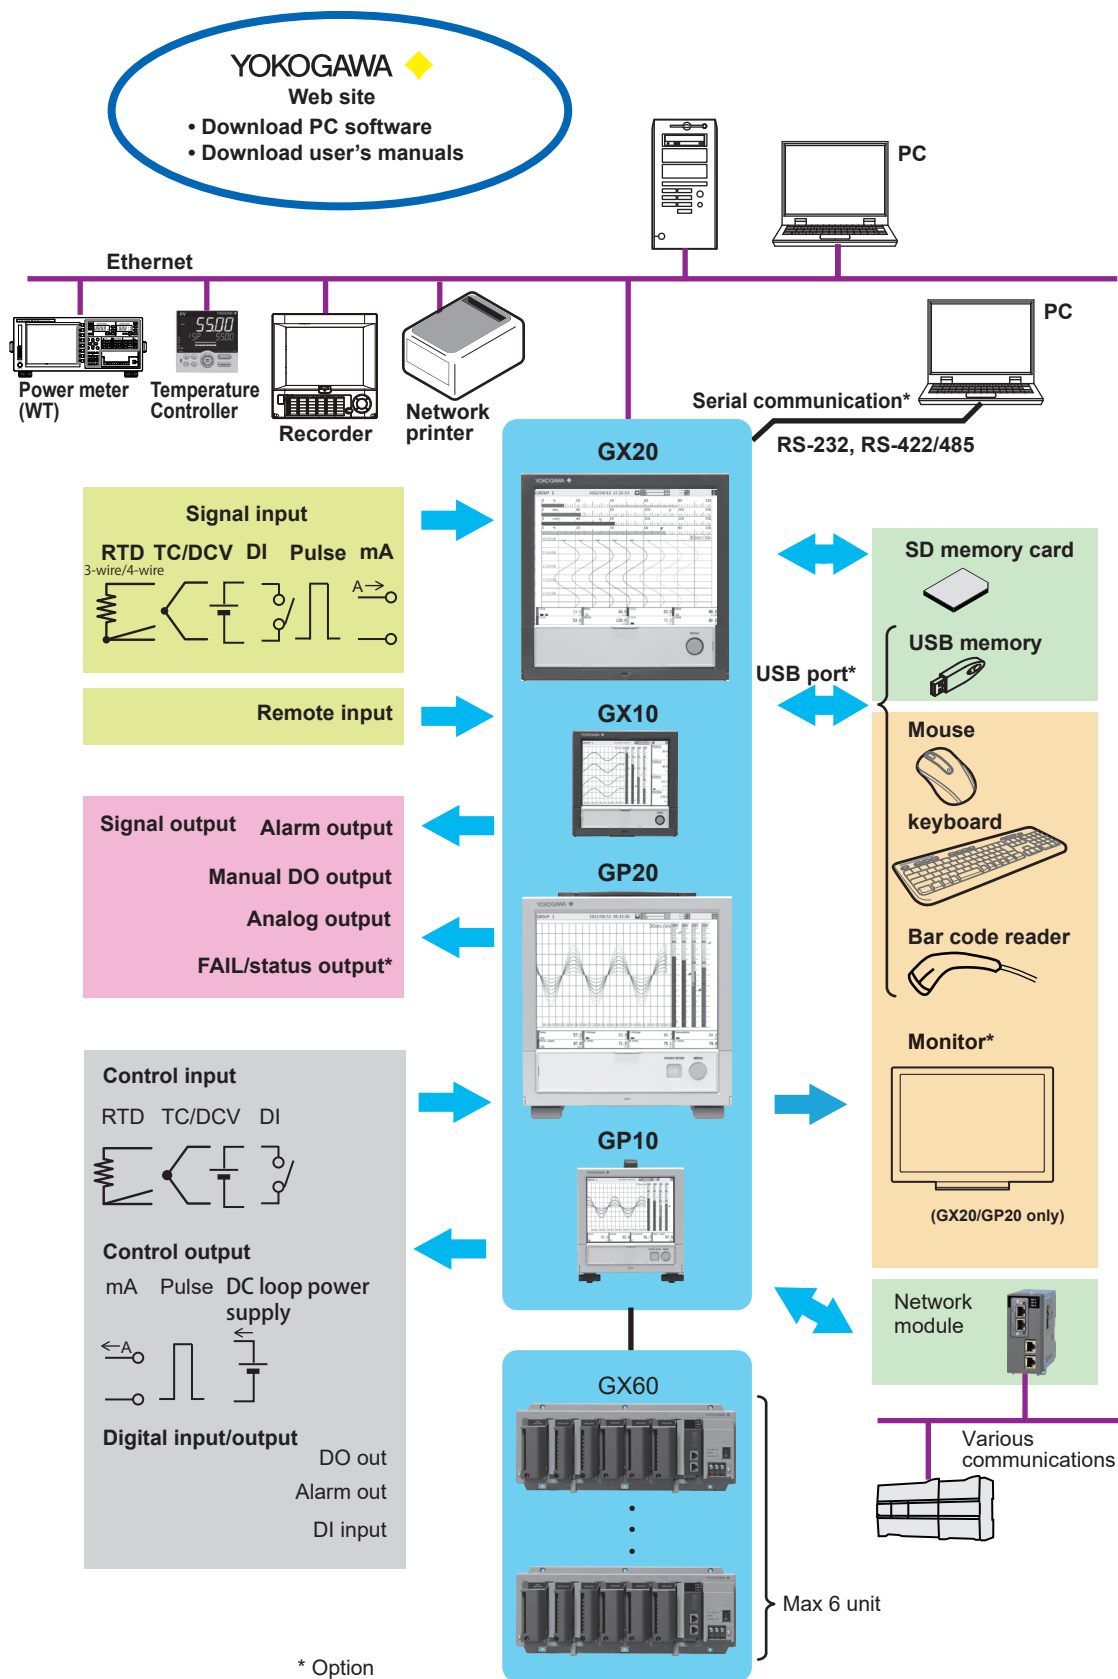

Component Names

GX20/GX10

GX20 front panel

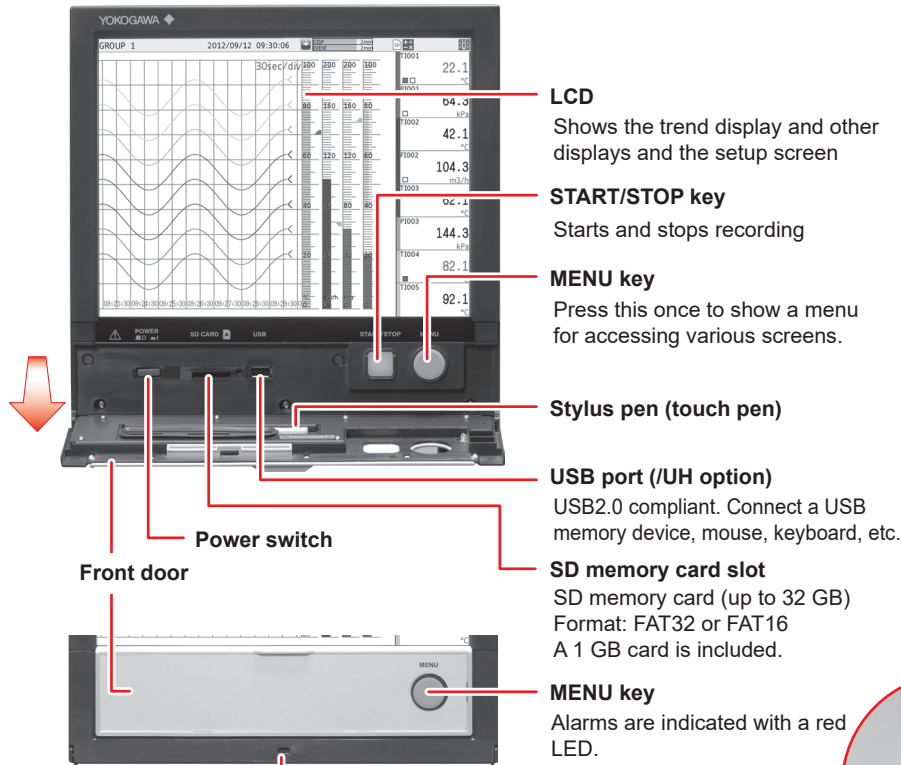


GX10 front panel



GX10 rear panel



GX20 rear panel

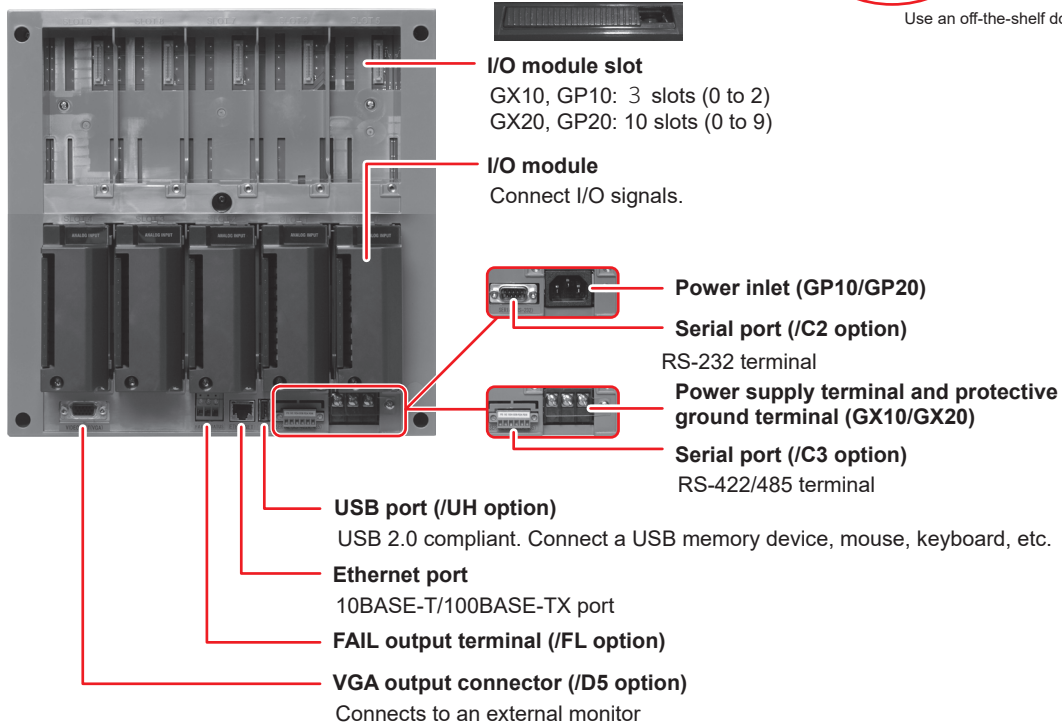

Front door lock mechanism



A front door is locked/unlocked by a slide at the bottom.

Lock →




Use an off-the-shelf door lock key.

GP20/GP10

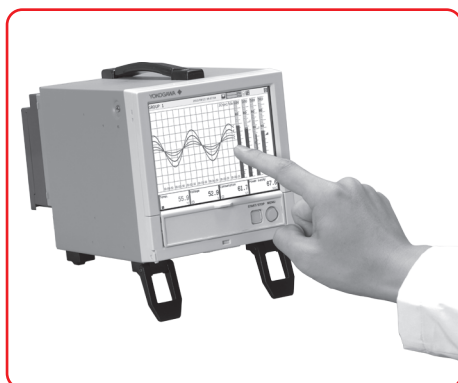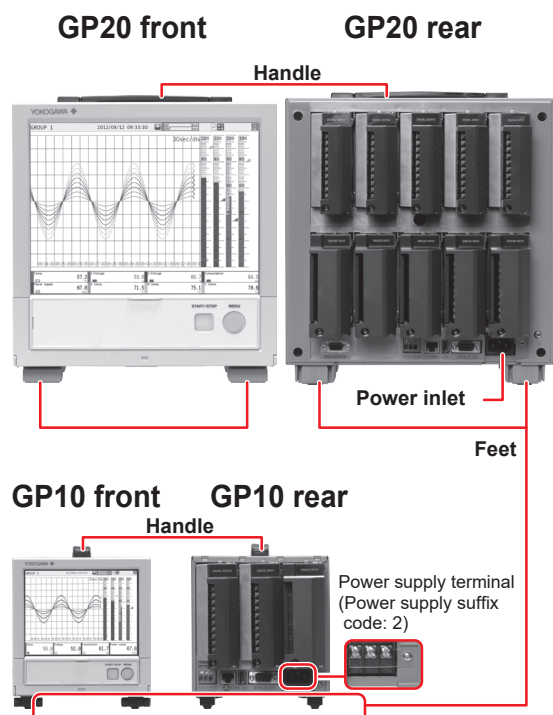


GX60/GX90EX

GX60 I/O Base Unit (Expandable I/O)

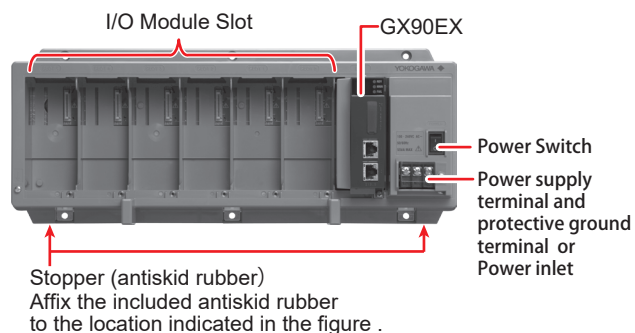

GX90EX Expansion Module

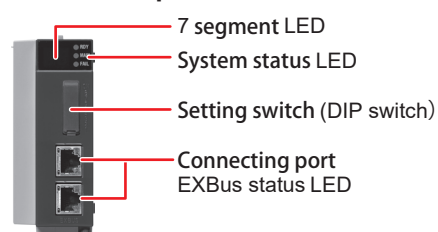

GX90XA/GX90XD/GX90YD/GX90WD/ GX90XP/GX90YA/GX90UT

GX90XA Analog Input Module

M3 screw terminal




Clamp terminal




Terminal block release levers

GX90XD Digital Input Module

M3 screw terminal

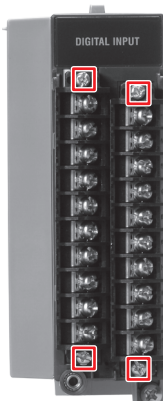

Clamp terminal

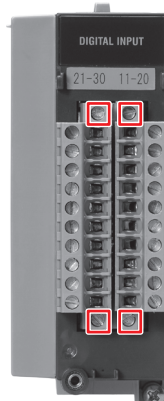

Terminal block attachment screws

GX90YD Digital Output Module

M3 screw terminal



Terminal block attachment screws

GX90WD Digital Input/Output Module


M3 screw terminal




Terminal block release levers

GX90XP Pulse Input Module

M3 screw terminal

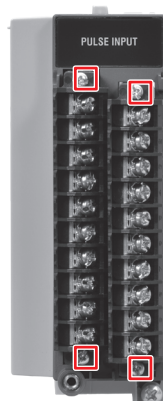

Clamp terminal

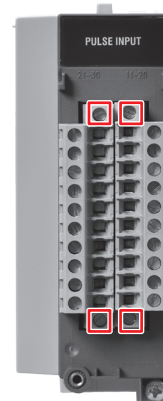

Terminal block attachment screws

GX90YA Analog Output Module

M3 screw terminal



Clamp terminal



Terminal block attachment screws

GX90UT PID Control Module

M3 screw terminal



Terminal block release levers



WARNING

To prevent electric shock when you attach or remove terminal covers or terminal blocks, be sure that the power supply is turned off.

Removing and Attaching a Terminal Cover


Removing the Terminal Cover

Loosen the screw at the bottom section of the terminal cover, and remove the cover.

Attaching the Terminal Cover

1. Insert the two hooks at the top section on the inside of the terminal cover into A, and push the bottom section of the terminal cover.
2. Fasten the screw at the bottom section of the terminal cover to fix the cover in place.

Recommended tightening torque: 0.6 N·m

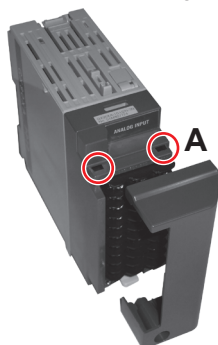

The shape of the cover varies depending on the module, but the procedure is the same.

Removing and Attaching a Terminal Block


Removing the GX90XA Terminal Block

Push down on the lever at the bottom section of the module, and pull the terminal block out.

Attaching the GX90XA Terminal Block


Insert the terminal block into the module, and push the lever firmly against the module (at the position indicated by the arrow in the figure).

Side view of module

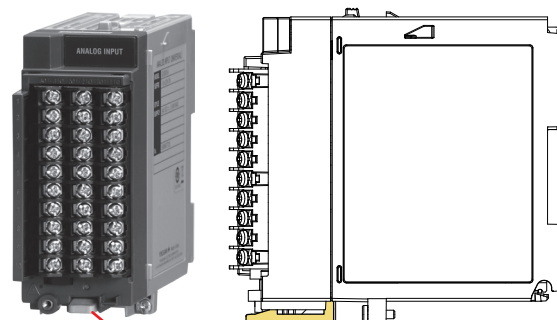

Terminal block release lever

For modules other than the GX90XA, you can use the attachment screw to remove and attach them.

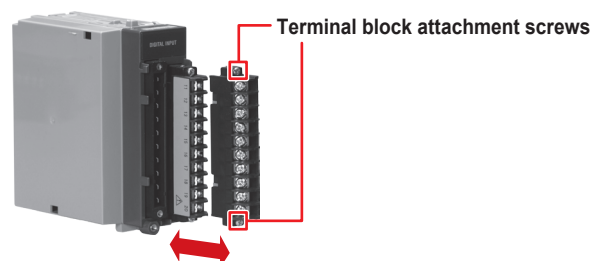


Recommended torque for tightening the terminal block attachment screws: 0.1 N·m

When you are using the GX/GP for the first time, following the procedure below to quickly start measuring and recording.

Operating Procedure

Product user's manuals can be downloaded or viewed at the following URL;
<https://www.yokogawa.com/lp/smartdacplus/>

▶ Manuals for reference

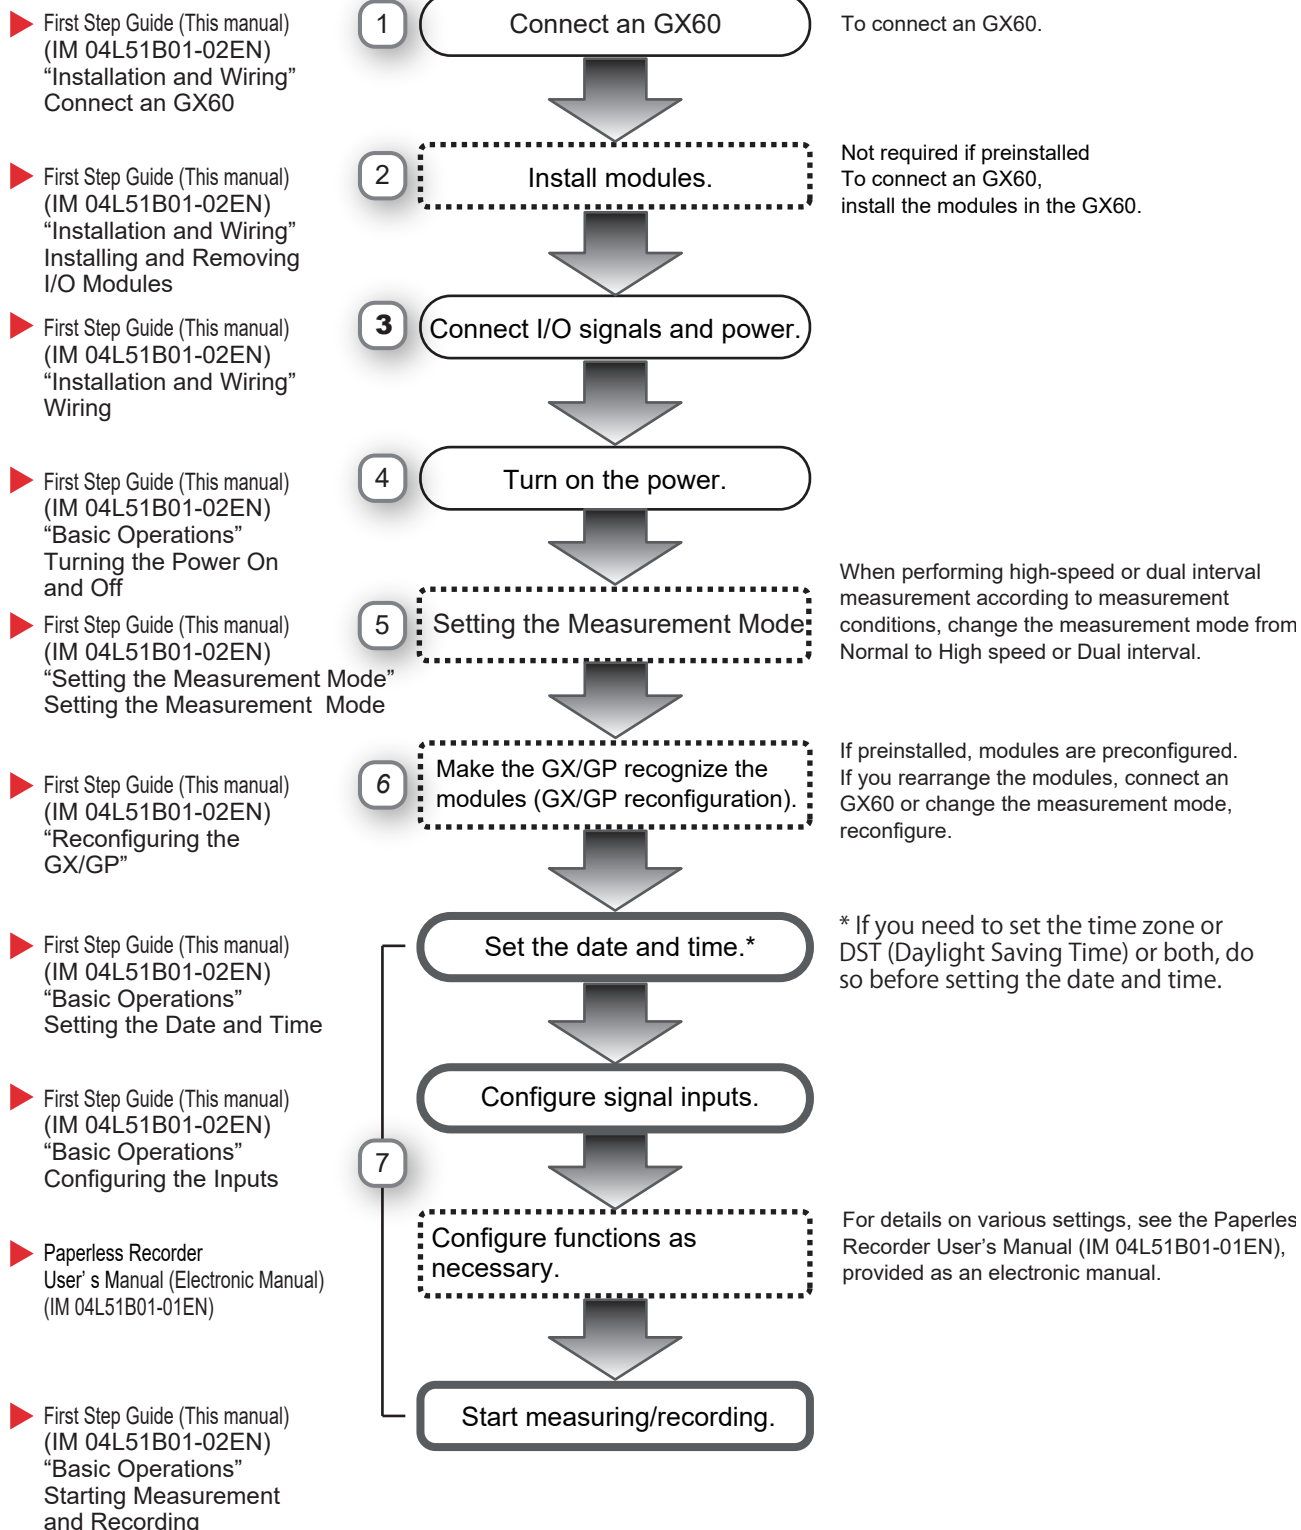

1 Install an expansion module (GX90EX) into the GX/GP.

GX90EX
GX10/GP10 : Slot 2
GX20/GP20 : Slot 9

2 GX60 address setting

Setting switch (DIP switch)
GX90EX

3 Connect the LAN cable between GX/GP and GX60.

1 Modules not installed

Ex GX/GP

Dummy covers are attached to empty slots (with screws).

* Recommended tightening torque: 0.6 N·m

2 Insert until a click is heard and fasten with screws.*

3 Modules installed (10 modules)

3

Ex GX/GP

Power inlet on the GP10/GP20/GX60 (Power inlet type)

4

GX60

Power switch

WARNING

To prevent electric shock when wiring, make sure that the power supply is turned off.

5 Set the measurement mode

6 Reconfiguration (Initialize)

Initialize Calibration

7 Set the date and time*.

Configure input and functions.

Common menu tab

Browse tab

Start measuring/recording.

or

Recording stopped → **Recording in progress**

Alternates

Lit in blue
Running

(No alarm)

Lit in red
Alarm activated

Off: Power off

To open, push the front door down and pull it toward you.

Installation and Wiring

Installation Location

Install the GX/GP indoors in an environment that meets the following conditions:

- If hazardous external voltage (30V AC or 60V DC or more) is applied to the output terminals of the GP10/GP20/GX60, be sure to install it in a location where people cannot touch the terminals carelessly or in a panel.
- The GX10/GX20 is designed to be installed in an instrumentation panel.
- This product is designed as open equipment under the CSA/UL/EN/IEC 61010-2-201 standards when using GX90UT PID control module. In order to comply with these standards, install it as follows:
 - The GX10/GX20 is designed to be installed in an instrumentation panel.
Install it in a location where people cannot touch the terminals carelessly.
 - To make the GP10/GP20 comply with the relevant standard, support the parts of the device other than the front-panel control area with an instrumentation panel or the like, and install it in a location where people cannot touch the terminals carelessly or in a panel.
- Install the GX60/GM unit in a panel with a door.
- The instrumentation panel or panel used for support must comply with CSA/UL/EN IEC 61010-2-201 or must be at least IP1X (degrees of protection) and at least IK09.



WARNING

To make panel door lock for GX10/GX20 or install the GP/GX60 systems in a panel with a door or in a location where operator or any third person can not operate the power switch carelessly. When the power switch of GX/GP systems under operation be turned on or off carelessly, it may result the system down or injury. Careless operations can be avoided by applying the slide lock.



WARNING

On the GX90XA-10-V1, the insulation specification is 1000V DC basic insulation when the common mode voltage exceeds 600V. When using the system in a common mode voltage environment that exceeds 600V, install it as follows:

- The GX/GP system and all devices without insulation equivalent to 1000V supplementary insulation connected to the GX/GP system must be installed in a panel with a door.
- The GX/GP front-panel control area is also applicable. Install so that it cannot be touched from outside the panel.

- Do not access the inside of the panel when the measurement target is turned on.
- The panel used for support must comply with CSA/UL/EN/IEC 61010-2-201 or must be at least IP1X (degrees of protection) and at least IK09.

- Well-ventilated location
To prevent overheating, install the GX/GP in a well-ventilated location. For the panel cut dimensions when arranging multiple GXs, see the next page. When other instruments are installed next to the GX, follow the panel cut dimensions to provide adequate space around the GX. In the case of the portable type, we recommend that you provide at least 50 mm of space from the left, right, and top panels.
- Minimal mechanical vibrations
Install the GX/GP in a location that has minimal mechanical vibrations. Installing the GX/GP in a location that is subject to large levels of mechanical vibration will not only put added stress on its components, it may also impede ordinary measurement.
- Level Location
Install the GX/GP in a level location so that it is not slanted to the left or the right (however, the GX/GP can be inclined up to 30 degrees backward for panel mounting).
- Ambient temperature range between 0 to 50°C
- Ambient humidity between 20 to 80%RH (However, less than moisture content of 40°C 80% RH at 40°C or more), No condensation should be present.
- Altitude 2000 m or less

Note

Condensation may form when moving the GX/GP from a low temperature or humidity environment to a high temperature or humidity environment, or when there is a sudden change in temperature. Temperature or humidity changes may also result in thermocouple measurement errors. In these kinds of circumstances, wait for at least an hour before using the GX/GP, to acclimate it to the surrounding environment.

The GP20 may tip over if it is tilted more than 10 degrees, front and back.

Do Not Install the Instrument in the Following Places

- Outdoors
- In direct sunlight or near heat sources
Install the GX/GP in a place that is near room temperature (23°C) and that is not subject to large temperature fluctuations. Placing the GX/GP in direct sunlight or near heat sources can cause adverse effects on the internal circuitry.
- Where an excessive amount of soot, steam, moisture, dust, or corrosive gases are present
Soot, steam, moisture, dust, and corrosive gases will adversely affect the GX/GP. Avoid installing the GX/GP in such locations.

- Near strong magnetic field sources
Do not bring magnets or instruments that produce electromagnetic fields close to the GX/GP. Operating the GX/GP near strong magnetic fields can cause measurement errors.
- Where the display is difficult to see
The GX/GP uses an LCD screen, so it is difficult to view the display from an extreme angle. Install the GX/GP so that the user can view the display directly from the front.

Installation Procedure



- Using more than the appropriate torque to tighten the screws can deform the case or damage the brackets.
- Be sure not to insert foreign objects or tools into the case through the mounting bracket holes.
- When you attach the rubber packing, be sure that no portion of it gets wedged between the GX and the panel. If the rubber packing is not attached properly, you will not be able to achieve sufficient dust proofing or waterproofing.

Installation Procedure for the GX10/GX20

Use a steel panel that is 2 mm to 26 mm thick.

- 1 Insert the GX through the front of the panel.
 - 2 Mount the GX to the panel using the included mounting brackets as described below.
- Use two mounting brackets to support the top and bottom or the left and right sides of the case (remove the stickers that are covering the holes before you attach the brackets).
 - The recommended tightening torque for the mounting screws is 0.7 to 0.9 N•m.
 - Follow the procedure below to mount the GX to the panel.
 - First, attach the two mounting brackets and temporarily tighten the mounting screws.
 - Next, fix the GX in place by tightening the mounting screws with the appropriate torque. When the GX is approximately perpendicular to the panel, press the mounting brackets so that they are in contact with the case, and fully tighten the mounting screws.

Note

To achieve sufficient dust proofing and waterproofing, mount the GX in the middle of the panel cut out.


Installation Procedure for the GX60

Use a steel panel that is at least 2 mm thick.



- 1 Make 6 holes in the panel for the six M4 screws.
- 2 Fix the unit in place by fastening M4 screws to the six mounting screw holes. The recommended tightening torque for the screws is 0.7 to 0.9N•m.

External Dimensions and Panel Cut Dimensions

GX20 External Dimensions

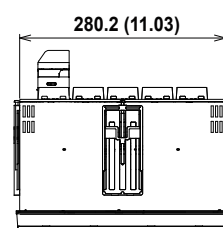


Unit: mm (approx. inch)
Unless otherwise specified,
tolerance is $\pm 3\%$ (however,
tolerance is ± 0.3 mm when
below 10 mm).

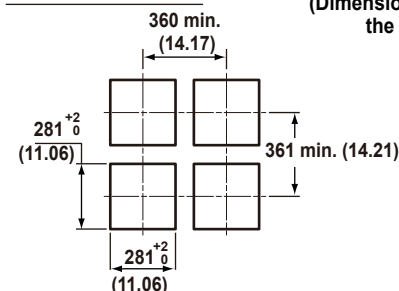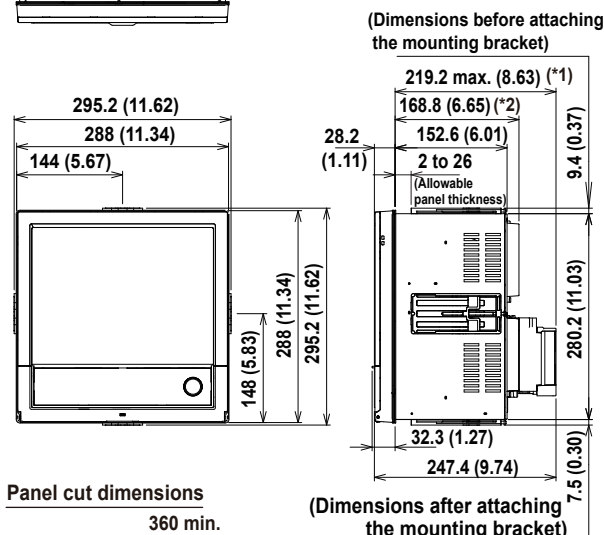


*1: With modules
*2: Without modules

GX10 External Dimensions

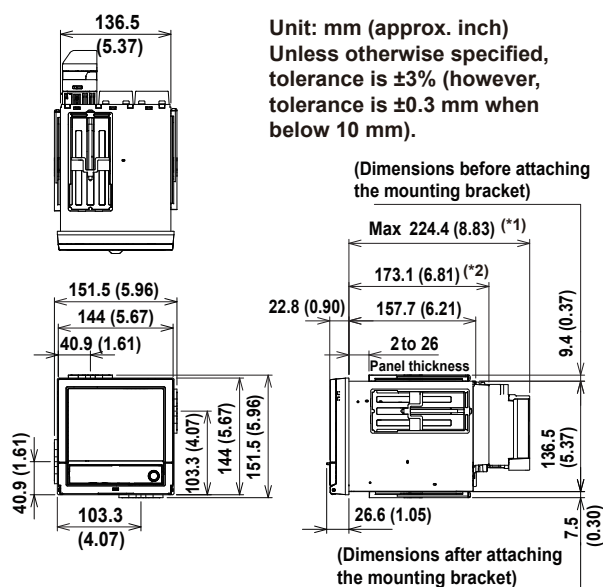


Panel cut dimensions


Single-unit mounting

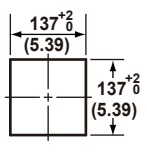

Side-by-side mounting (horizontally)

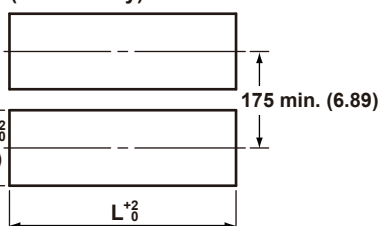


Side-by side mounting (vertically; max. 3 units)

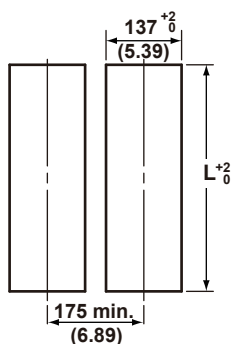


| Units | L^{+2}_{-0} |
|-------|----------------------|
| 2 | 282 (11.10) |
| 3 | 426 (16.77) |
| 4 | 570 (22.44) |
| 5 | 714 (28.11) |
| 6 | 858 (33.78) |
| 7 | 1002 (39.45) |
| 8 | 1146 (45.12) |
| 9 | 1290 (50.79) |
| 10 | 1434 (56.46) |
| n | $(144 \times n) - 6$ |

GP20 External Dimensions

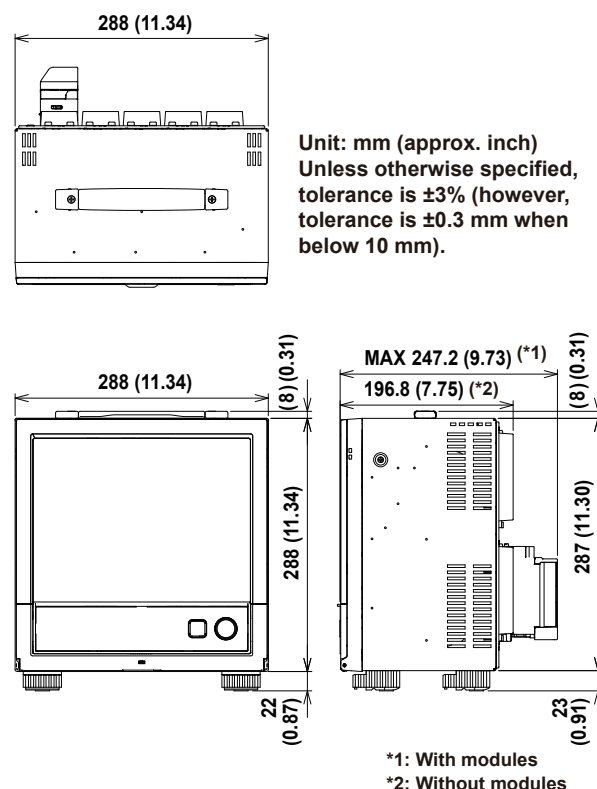


GP10 External Dimensions

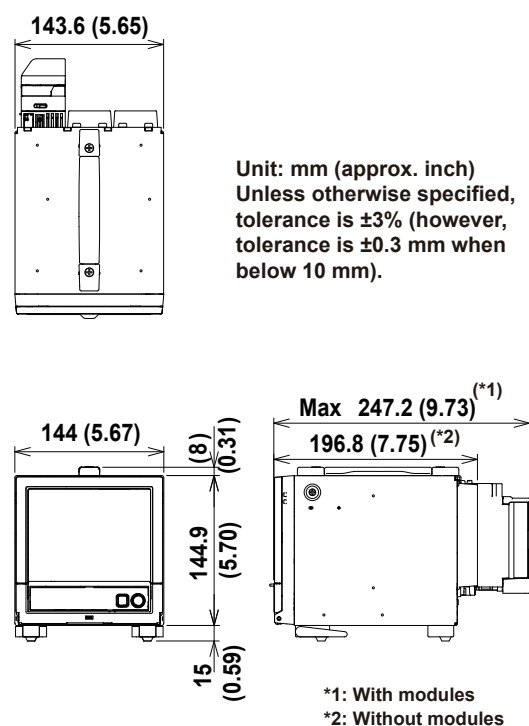


When using the stand, the GP10 will face 12 degrees upward.

GX60 Dimensions


Power supply terminal type

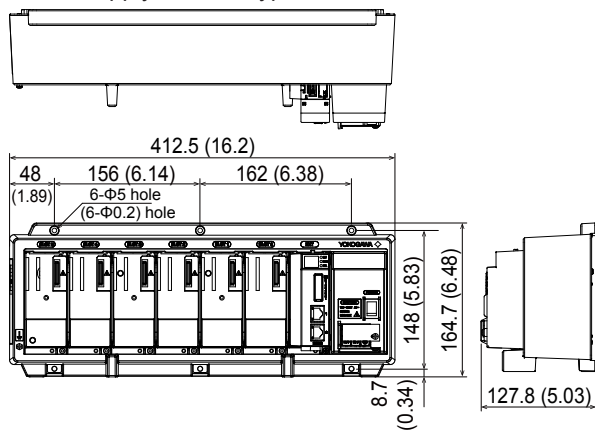

Power inlet type

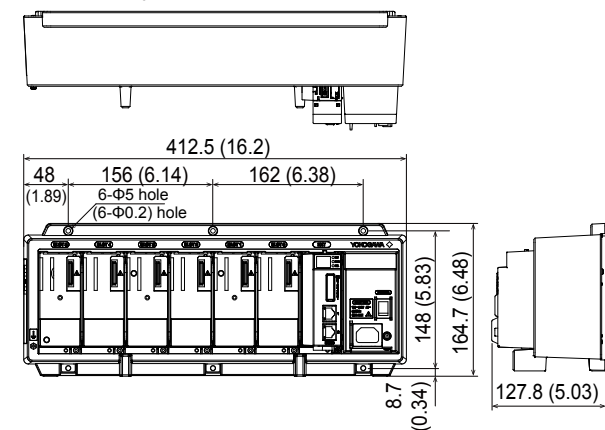


With modules

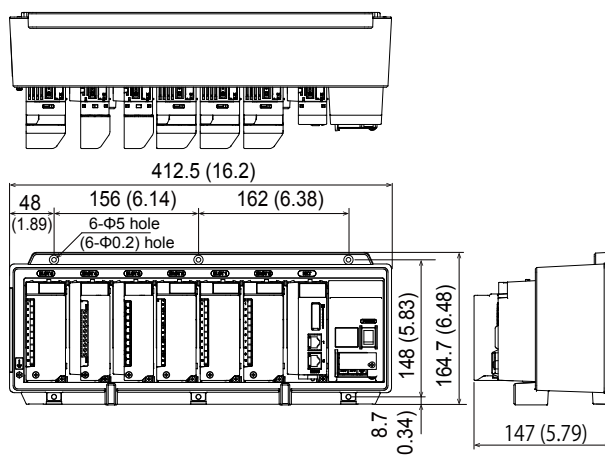

Unit: mm (approx. inch)

Unless otherwise specified, tolerance is $\pm 3\%$ (however, tolerance is ± 0.3 mm when below 10 mm).

Mounting hole dimensions

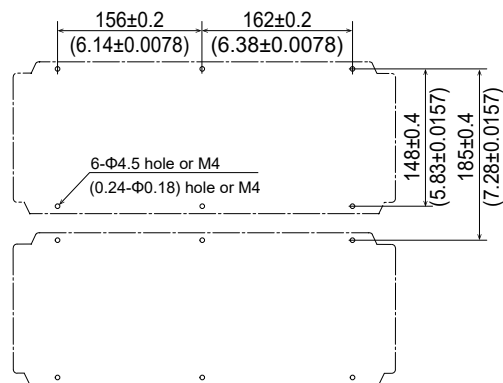


Connect an GX60

Installing an Expansion Module into the GX/GP


When installing an expansion module into the GX/GP or setting dipswitches, turn off the GX/GP and the GX60.

- 1 Install an expansion module into slot 9 or 2 of the GX/GP.
- 2 Set dipswitch 8 of the expansion module to "ON" (master).
Set the unit number to 0.
(Default: 0)



Setting the Unit Number of the GX60

The factory default unit number of the expansion module is 0. Use dipswitches 1 to 4 to set the unit number (1 to 6).




Unit number and dipswitch setting

| Unit number | Dipswitch | | | |
|----------------|-----------|-----|-----|-----|
| | 1 | 2 | 3 | 4 |
| 6 | OFF | ON | ON | OFF |
| 5 | ON | OFF | ON | OFF |
| 4 | OFF | OFF | ON | OFF |
| 3 | ON | ON | OFF | OFF |
| 2 | OFF | ON | OFF | OFF |
| 1 | ON | OFF | OFF | OFF |
| 0 ¹ | OFF | OFF | OFF | OFF |

- 1 The factory default setting. Unit number "0" is reserved for the expansion module that is installed into the GX/GP.

Fixing the Data Rate to 10 Mbps

To fix the data rate to 10 Mbps, set dipswitch 7 to "ON".



7-segment LED for
10 Mbps fixed mode




Dot indication

Connect an GX60


Connect the expansion module installed in the GX/GP to the expansion modules of each expansion unit using Ethernet STP (shielded) cables.

Only cascaded connection is supported.

Maximum communication distance is 100 m. Distance extension through HUB connection or LAN repeaters is not possible.

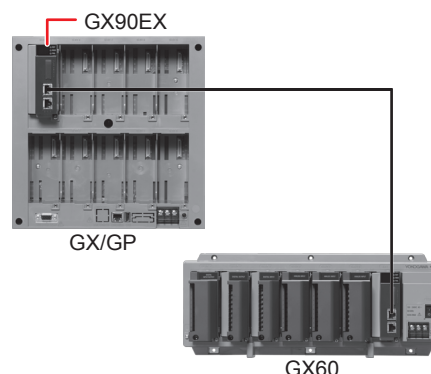

Functions of Expansion Module Components

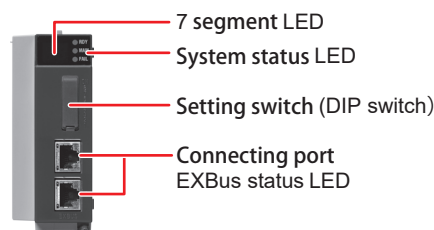

7 segment LED

Displays the unit number and operation errors of the GX/GP and GX60

- Unit number indication
Displays the unit number (00 to 06).
- Operation error indication
Displays error codes. Ex (where x is a one digit number or an alphabet letter) will blink. For details on error codes, see "Expansion Module Error Codes" in section 5.2.1, "Messages" of the User's Manual (IM 04L51B01-01EN).

- * If an "Fx" indication is displayed, servicing is necessary. Contact your nearest YOKOGAWA dealer for repairs.

System Status Display LED

Three LEDs indicate the operating status of the expansion module.

| Status display LED | Color | Description |
|--------------------|-------|---|
| RDY | Green | Illuminates during normal operation. Turns off when during a failure. |
| MAIN | Green | Illuminates during master I/O expansion operation. |
| FAIL | RED | Illuminates during an error. |

Setting Switches (Dipswitches)

Use the dipswitches to set the unit number of the GX60, 10 Mbps fixed mode, and operation mode.

Dipswitch settings

| Dipswitch | Description |
|-----------|--|
| 8 | Switches between master I/O expansion and slave I/O expansion mode |
| 7 | 10 Mbps/100Mbps |
| 6 | Always OFF (cannot be changed) |
| 5 | Always OFF (cannot be changed) |
| 4 | For unit number |
| 3 | |
| 2 | |
| 1 | |


Port

The port is used to connect the GX60 to the GP/GX. Only cascaded connection is supported.

Installing and Removing I/O Modules

Installing a Module

- As shown below, insert the module into the GX/GP slot and the GX60 slot.
- Push the module in until you hear a click. Then, fasten the screw at the bottom section of the module.*

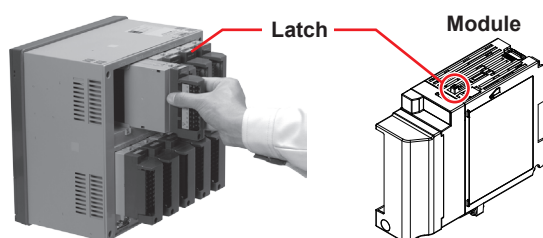

Ex. GX/GP

* Recommended torque for tightening the screws: 0.6 N•m

Removing a Module

- Loosen the screw at the bottom section of the module.
- While pressing down on the latch at the top of the module, pull the module out.

Limit to the Number of GX/GP Main Unit Modules

- When GX90XA-04-H0 and GX90YA are included

| GX10 | GP10 | GX20-1 | GP20-1 | GX20-2 | GP20-2 |
|----------|-----------|--------|--------|--------|--------|
| No limit | No limit* | 9 | 9 | 9 | 9 |

* Up to two modules for 12 V DC models (power supply suffix code: 2)

- When GX90UT is included

| GX10 | GP10 | GX20-1 | GP20-1 | GX20-2 | GP20-2 |
|----------|-----------|--------|--------|--------|--------|
| No limit | No limit* | 8 | 8 | 8 | 8 |

* Up to two modules for 12 V DC models (power supply suffix code: 2)

Limit on Modules

- Up to 10 modules consisting of GX90YD, GX90WD, and GX90UT can be installed into the system.
- One GX90WD module can be installed in a GX. One module can be installed in a GX60 (expandable I/O) and each GM sub unit.
- One GX90YA module can be installed in a GX10. Two modules can be installed in each of the GX20, GX60 (expandable I/O) and GM sub unit.
- Up to 10 GX90YA modules can be installed in a GX10/GX20-1 system and up to 12 in a GX20-2 system.
- If the measurement mode is High speed, only GX90XA-04-H0 (high-speed AI), GX90XD (DI), GX90WD (DIO), and GX90NW are detected. DI and DIO are fixed to remote mode. Measurement and recording are not possible.
- If the measurement mode is Dual interval, GX90UT is not detected.

When the GX90NW Network Module (protocol: PROFINET) is Mounted

- You can mount either the GX90UT or GX90YA. (GX10, GP10)
- When including the GX90UT, you can mount up to 7 modules including the GX90NW. (GX20, GP20)
- When including the GX90XA-10-T1, you can mount up to 8 modules including the GX90NW. (GX20, GP20)
- The GX90NW cannot be used at the same time as the expansion module (GX90EX).
- The GX90NW cannot be used for the GX60, GM sub unit.
- The GX90NW cannot be used for the GP10 12 VDC power supply model (power supply voltage suffix code: 2).


Notes on Module Installation

- When the reference junction compensation of this product is used with the thermocouple input of a GX90XA-10-U2, GX90XA-10-L1, GX90XA-10-T1, GX90XA-10-V1, or GX90XA-04-H0, if the following module is installed to the right (slot with the smaller number) of the GX90XA module as seen from the GX rear panel, the reference junction compensation accuracy of that module may deviate from the guaranteed range (except when GX90XA-04-H0 is installed to adjacent slots).
GX90XA-10-C1, GX90XA-04-H0, GX90WD, GX90YA, GX90UT
- On the GX20, when the reference junction compensation of this product is used with the thermocouple input of a GX90XA-10-U2, GX90XA-10-L1, GX90XA-10-T1, GX90XA-10-V1, or GX90XA-04-H0, if the following module is installed above, below, to the right, or to the left (slot with the smaller number) of the GX90XA module as seen from the GX rear panel, the reference junction compensation accuracy of that module may deviate from the guaranteed range.
GX90YA, GX90UT

Channel Names

A channel name consists of a unit number, slot number, and channel number.

GX/GP: (Fixed) Channel name
GX60: 1 to 6

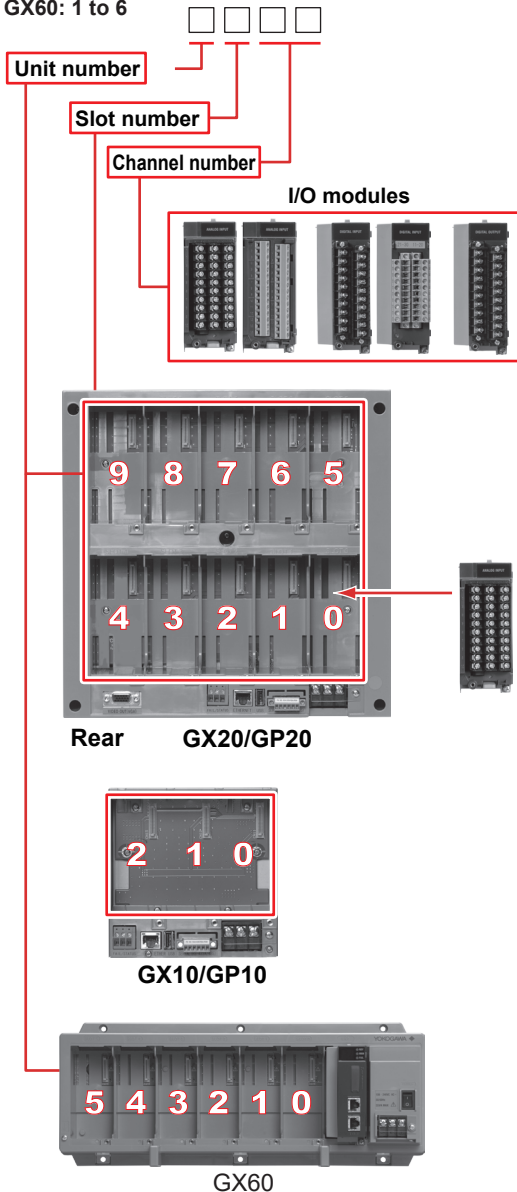

Wiring



WARNING

- To prevent electric shock while wiring, make sure that the power supply is turned off.
- If a voltage of more than 30V AC or 60V DC is to be applied to the output terminals, use ring-tongue crimp-on lugs with insulation sleeves on all terminals to prevent the signal cables from slipping out when the screws become loose. Furthermore, use double-insulated cables (dielectric strength of 3000V AC or more) for signal cables through which a voltage of 30V AC or 60V DC or more is to be applied to the output terminals. For all other signal cables, use basic insulated cables (dielectric strength of 1500V AC). To prevent electric shock, attach the terminal cover after wiring and make sure not to touch the terminals.
- For signal cables through which a voltage of 30V AC or 60V DC or more is applied to the input terminals, use double-insulated cables that have sufficient withstand voltage performance for the measurement target and that are suitable for the rating. To prevent electric shock, attach the terminal cover after wiring and make sure not to touch the terminals.
- When the output terminals of the GX90WD are connected to a voltage exceeding 150V AC, the connection is limited to a circuit (secondary power source) derived from the mains circuit (primary power source) of up to 300V AC. Since the insulation specification between output channels is basic insulation, connect so that the potential difference between adjacent channels does not exceed 30V AC or 60V DC. If the potential difference from adjacent channel exceeds 30V AC or 60V DC, insert an unconnected channel between the two channels.
- Applying a strong tension to the input and output signal cables connected to the GX/GP may damage the cables or the GX/GP terminals. To avoid applying tension directly to the terminals, fix all cables to the rear of the mounting panel.
- To prevent fire, use signal cables for GX/GP with a temperature rating of 70°C or more.
- The operating environment of this product is pollution degree 2. Do not allow conductive wiring scraps, chips, or the like to enter inside the product. It cause electric shock, fire, failure, or malfunction.
- To avoid damage to the GX/GP, do not apply voltages that exceed the following values to the input terminals.

GX90XA

- Allowable input voltage: ± 10 V DC for TC/DC voltage (1 V range or less)/

RTD/DI (Contact), DC mA
 ± 60 V DC for DC voltage (2 V to 50 V range), DI (voltage) input (except High-speed AI)
 ± 120 V DC for DC voltage (2 to 100 V range) input, DI (voltage) (High-speed AI)

- Common mode voltage: ± 60 V DC (under measurement category II conditions)

High-speed AI only

± 300 V AC rms (under measurement category II conditions)

High withstand voltage only

± 600 V AC rms / ± 600 V DC (under measurement category II conditions)
 ± 1000 V DC (under measurement category II and basic insulation conditions*)

* When the module is used under basic insulation conditions, external supplementary insulation is required for safe use. When using the system in a common mode voltage environment that exceeds 600V, install it as follows to add supplementary insulation:

- To prevent electric shock, install the GX/GP system and all devices connected to the GX/GP system without insulation equivalent to 1000V supplementary insulation in a panel with a door.
- The GX/GP front-panel control area is also applicable. Install so that it cannot be touched from outside the panel.
- To prevent electric shock, do not allow cables other than protective ground and main power supply to be directly connected to the outside of the panel.
- To prevent fire, insert overcurrent protection devices such as fuses between the measurement target and the H and L input terminals of the high voltage input module. For the overcurrent protection device, select a device that supports the common mode voltage to be used. Replacing it regularly is recommended to accommodate degradation due to aging.
- For other connections, connect to the outside of the panel after adding insulation equivalent to 1000V supplementary insulation to prevent electric shock.
- To prevent electric shock, make sure that the panel is connected to protective ground. Connect the panel to protective ground according to the local grounding standard.

GX90XD, GX90WD

- Allowable input voltage: +10V DC
GX90XP

- Allowable input voltage: ± 10 V DC
GX90UT

- Allowable input voltage: ± 10 V DC for TC/DC voltage (1V range or less)/RTD/DI (Contact), DC mA
 ± 60 V DC for DC voltage (2V range or more), DI (voltage)

- Common mode voltage: ± 60 VDC (under measurement category II conditions)

Precautions to Be Taken While Wiring

Take the following precautions when wiring the input/output signal cables.

- With a screw terminal, we recommend that you use a crimp-on lug with an insulation sleeve (M4 for power supply wiring, M3 for signal wiring).



Crimp-on lug with an insulation sleeve

Recommended signal wiring crimp-on lug N1.25-MS3 (JST Mfg. Co., Ltd.)

- When not using crimp-on lug with an insulation sleeve, use a signal wire with a finished outside diameter of $\phi 5$ mm or less.
- With a clamp terminal, we recommend the following wire.

| | |
|---|---|
| GX90XA | |
| Cross-sectional area | 0.05 mm ² to 1.5 mm ² (AWG30 to 16) |
| Stripped wire length | 5 to 6 mm |
| GX90XD, GX90XP, GX90YA | |
| Cross-sectional area | 0.2 mm ² to 1.5 mm ² (AWG24 to 16) |
| Stripped wire length | 9 to 10 mm |
| RS-422/485 (/C3 option) | |
| Cross-sectional area | 0.2 mm ² to 1.5 mm ² (AWG24 to 16) |
| Stripped wire length | 6 to 7 mm |
| FAIL output/status output (/FL option) | |
| Cross-sectional area | 0.33 mm ² to 2.0 mm ² (AWG22 to 14) |
| Stripped wire length | 10 to 11 mm |
- Do not allow static electricity to be applied to the terminals.
 - When wiring the terminals, remove static electricity so that static electricity is not applied.
 - If static electricity or similar high-voltage transient noise is applied to the signal line, the system may break.
- Take measures to prevent noise from entering the measurement circuit.
 - Move the measurement circuit away from the power cable (power circuit) and ground circuit.
 - Ideally, the object being measured should not generate noise. However, if this is unavoidable, isolate the measurement circuit from the object. Also, ground the object being measured.
 - Shielded wires should be used to minimize the noise caused by electrostatic induction. Connect the shield to the ground terminal of the GX/GP as necessary (make sure you are not grounding at two points).
 - To minimize noise caused by electromagnetic induction, twist the measurement circuit wires at short, equal intervals.
 - Make sure to earth ground the protective ground terminal through minimum resistance.

Installation and Wiring

- When wiring input/output signal cables, observe the minimum bend radius of the cables. For the minimum bend radius, use the specifications indicated by the input signal cable manufacture or six times the conductor diameter of the input/output signal cable, whichever is larger.
- When using internal reference junction compensation on the thermocouple input, take measures to stabilize the temperature at the input terminal.
 - Always use the terminal cover.
 - Do not use thick wires which may cause large heat dissipation (we recommend a cross sectional area of 0.5 mm² or less).
 - Make sure that the ambient temperature remains reasonably stable. Large temperature fluctuations can occur if a nearby fan turns on or off.
- Connecting the input wires in parallel with other devices can cause signal degradation, affecting all connected devices. If you need to make a parallel connection, then
 - Turn the burnout detection function off.
 - Ground the instruments to the same point.
 - Do not turn ON or OFF another instrument during operation. This can have adverse effects on the other instruments.
 - RTDs cannot be wired in parallel.

Wiring Procedure


A terminal cover is screwed in place on the I/O terminal block. A label indicating the terminal arrangement is affixed to the cover.

- Turn off the GX/GP/GX60, and remove the terminal cover.
- Connect the signal cables to the terminals.


| | | |
|---|------------------------|------------------------------------|
| Recommended tightening the screws | Screw terminal (M3) | 0.5 to 0.6 N•m |
| | Clamp terminal | GX90XA: 0.4 N•m |
| | | GX90XD: 0.5 N•m GX90XP: 0.5 N•m |

- Attach the terminal cover and fasten it with screws. The appropriate tightening torque for the screws is 0.6 N•m.

Inside dimension of M3 screw terminal block



Wiring Clamped Terminals

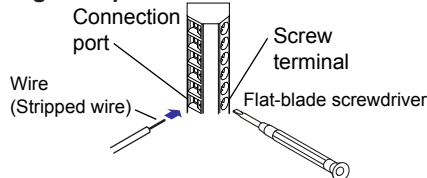

First, loosen the screw at the front using a flat-blade screwdriver. Insert the input signal wire into the slit on the left side of the terminal block, and fasten the screw at the front.

Note

With a clamp terminal, if you use a single wire whose diameter is 0.3 mm or less, you may not be able to clamp the wire securely to the terminal. Take measures to securely clamp the wire such as by folding the conductor section that will be connected to the clamp terminal in half.




- When tightening the screw, make sure that the screwdriver remains in line with the screw. Tilting the screwdriver can strip the head or threads of the screw, or cause the screw to insert at an angle.
- Using a precision screwdriver, turn the screw with light downward pressure. Pushing the screw forcefully can damage the terminals.

Wiring to a GX90XA Analog Input Module


Universal/Low withstand voltage relay/
Electromagnetic relay/Current (mA)/High withstand
voltage type

Terminal Diagram

M3 screw terminal

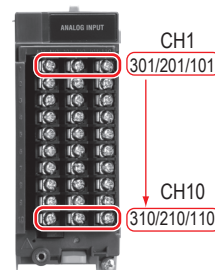

Clamp terminal

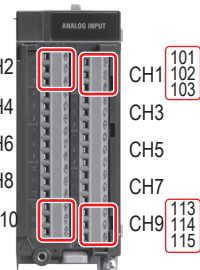

Wiring Diagram

| DC voltage input/DI (level) | DI (contact) |
|--|---------------|
| | |
| TC input | RTD input |
| | |
| DC current input (with an external shunt resistor) | current input |
| | |

| Type | Input type | Wiring |
|------|--|---------------|
| -U2 | DC voltage, thermocouple (TC), resistance temperature detector (RTD), DI (voltage, contact), and DC current (by adding an external shunt resistor) | 1, 2, 3, 4, 5 |
| -C1 | DC current (mA) | 6 |
| -L1 | DC voltage, thermocouple (TC), DI (voltage, contact), and DC current (by adding an external shunt resistor) | 1, 2, 3, 5 |
| -T1 | | |
| -V1 | | |

Terminal Arrangement

M3 screw terminal

| CH No. | Term. No. | Symbol | Term. No. | Symbol | Term. No. | Symbol |
|--------|-----------|----------------|-----------|--------|-----------|--------|
| CH1 | 301 | b ¹ | 201 | -/B | 101 | +/A |
| CH2 | 302 | b ¹ | 202 | -/B | 102 | +/A |
| CH3 | 303 | b ¹ | 203 | -/B | 103 | +/A |
| CH4 | 304 | b ¹ | 204 | -/B | 104 | +/A |
| CH5 | 305 | b ¹ | 205 | -/B | 105 | +/A |
| CH6 | 306 | b ¹ | 206 | -/B | 106 | +/A |
| CH7 | 307 | b ¹ | 207 | -/B | 107 | +/A |
| CH8 | 308 | b ¹ | 208 | -/B | 108 | +/A |
| CH9 | 309 | b ¹ | 209 | -/B | 109 | +/A |
| CH10 | 310 | b ¹ | 210 | -/B | 110 | +/A |



Clamp terminal

| CH No. | Term.No. | Symbol | CH No. | Term.No. | Symbol |
|--------|----------|----------------|--------|----------|----------------|
| CH2 | 201 | +/A | CH1 | 101 | +/A |
| | 202 | -/B | | 102 | -/B |
| | 203 | b ¹ | | 103 | b ¹ |
| CH4 | 204 | +/A | CH3 | 104 | +/A |
| | 205 | -/B | | 105 | -/B |
| | 206 | b ¹ | | 106 | b ¹ |
| CH6 | 207 | +/A | CH5 | 107 | +/A |
| | 208 | -/B | | 108 | -/B |
| | 209 | b ¹ | | 109 | b ¹ |
| CH8 | 210 | +/A | CH7 | 110 | +/A |
| | 211 | -/B | | 111 | -/B |
| | 212 | b ¹ | | 112 | b ¹ |
| CH10 | 213 | +/A | CH9 | 113 | +/A |
| | 214 | -/B | | 114 | -/B |
| | 215 | b ¹ | | 115 | b ¹ |

- 1 There are no symbol indications for the electromagnetic relay, current (mA), low withstand voltage relay or high withstand voltage type.
- The RTD b terminal is connected internally.

High-speed universal

Terminal Diagram

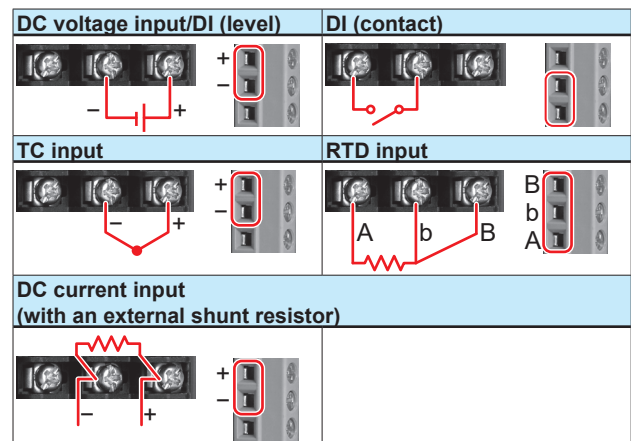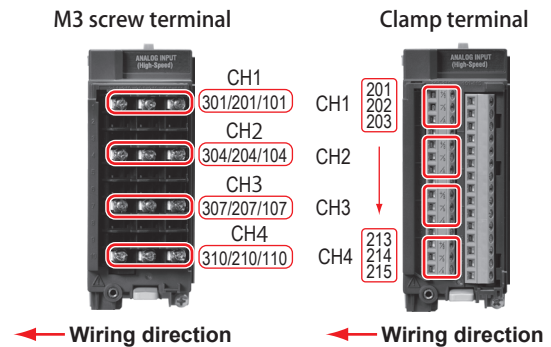

- * Be careful because the DI wiring is different between level and contact.

Terminal Arrangement

M3 screw terminal

| CH No. | Term. No. | Symbol | Term. No. | Symbol | Term. No. | Symbol |
|--------|-----------|--------|-----------|--------|-----------|--------|
| CH1 | 301 | /A | 201 | -/b | 101 | +/B |
| CH2 | 304 | /A | 204 | -/b | 104 | +/B |
| CH3 | 307 | /A | 207 | -/b | 107 | +/B |
| CH4 | 310 | /A | 210 | -/b | 110 | +/B |


Clamp terminal

| CH No. | Term.No. | Symbol | Term.No. | Symbol |
|--------|----------|----------|----------|----------|
| CH1 | 201 | +/B | 101 | Not Used |
| | 202 | -/b | 102 | Not Used |
| | 203 | /A | 103 | Not Used |
| CH2 | 204 | Not Used | 104 | Not Used |
| | 205 | +/B | 105 | Not Used |
| | 206 | -/b | 106 | Not Used |
| | 207 | /A | 107 | Not Used |
| CH3 | 208 | Not Used | 108 | Not Used |
| | 209 | +/B | 109 | Not Used |
| | 210 | -/b | 110 | Not Used |
| | 211 | /A | 111 | Not Used |
| CH4 | 212 | Not Used | 112 | Not Used |
| | 213 | +/B | 113 | Not Used |
| | 214 | -/b | 114 | Not Used |
| | 215 | /A | 115 | Not Used |


* Empty terminals may not be used.

4-wire RTD/resistance

Terminal Diagram

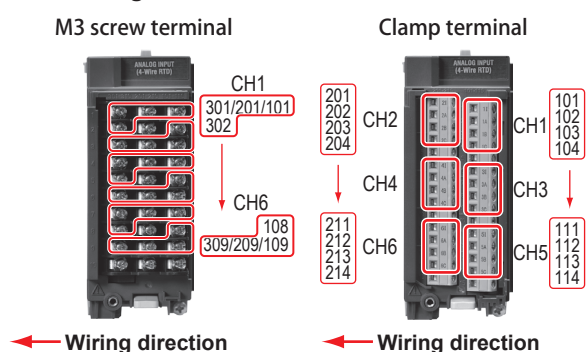

Wiring

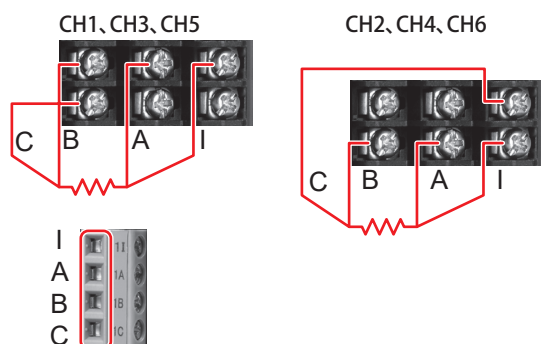

Terminal Arrangement

M3 screw terminal

| CH No. | Term. No. | Symbol | Term. No. | Symbol | Term. No. | Symbol |
|--------|-----------|----------|-----------|----------|-----------|----------|
| CH1 | 301 | B | 201 | A | 101 | I |
| | 302 | C | 202 | Not Used | 102 | C |
| CH2 | 303 | B | 203 | A | 103 | I |
| | 304 | B | 204 | A | 104 | I |
| CH3 | 305 | C | 205 | Not Used | 105 | C |
| | | | | | | |
| CH4 | 306 | B | 206 | A | 106 | I |
| | 307 | B | 207 | A | 107 | I |
| CH5 | 308 | C | 208 | Not Used | 108 | C |
| | | | | | | |
| CH6 | 309 | B | 209 | A | 109 | I |
| | 310 | Not Used | 210 | Not Used | 110 | Not Used |


Clamp terminal

| CH No. | Term.No. | Symbol | CH No. | Term.No. | Symbol |
|--------|----------|----------|--------|----------|----------|
| CH2 | 201 | I | CH1 | 101 | I |
| | 202 | A | | 102 | A |
| | 203 | B | | 103 | B |
| | 204 | C | | 104 | C |
| CH4 | 205 | Not Used | CH3 | 105 | Not Used |
| | 206 | I | | 106 | I |
| | 207 | A | | 107 | A |
| | 208 | B | | 108 | B |
| CH6 | 209 | C | CH5 | 109 | C |
| | 210 | Not Used | | 110 | Not Used |
| | 211 | I | | 111 | I |
| | 212 | A | | 112 | A |
| | 213 | B | | 113 | B |
| | 214 | C | | 114 | C |
| | 215 | Not Used | | 115 | Not Used |

* Empty terminals may not be used


Wiring to a GX90XD Digital Input Module

Terminal Diagram

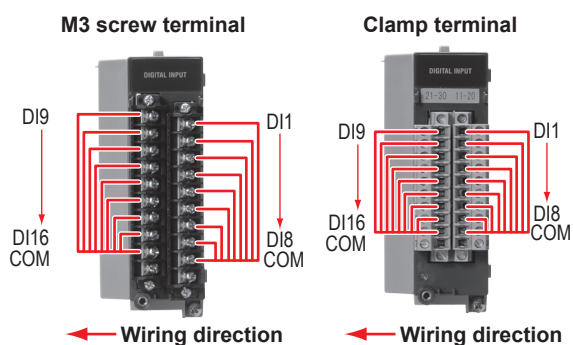

Terminal Arrangement

| Term. No. | Symbol | Term. No. | Symbol |
|-----------|--------|-----------|--------|
| 21 | DI9 | 11 | DI1 |
| 22 | DI10 | 12 | DI2 |
| 23 | DI11 | 13 | DI3 |
| 24 | DI12 | 14 | DI4 |
| 25 | DI13 | 15 | DI5 |
| 26 | DI14 | 16 | DI6 |
| 27 | DI15 | 17 | DI7 |
| 28 | DI16 | 18 | DI8 |
| 29 | COM2 | 19 | COM1 |
| 30 | - | 20 | - |

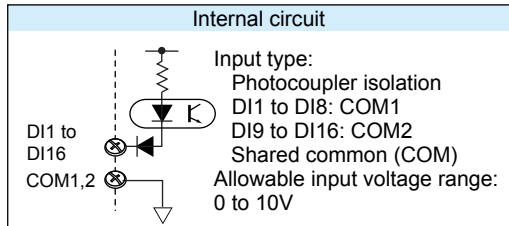


Note: Do not apply voltage outside the allowable input voltage range across input terminals. Doing so can cause a malfunction.

Wiring to a GX90YD Digital Output Module

Terminal Diagram

M3 screw terminal

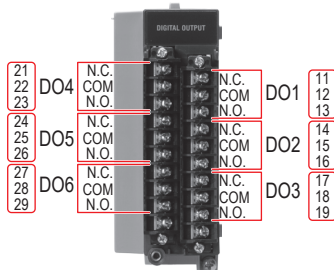

← Wiring direction


Terminal Arrangement

| DO No. | Term. No. | Symbol | DO No. | Term. No. | Symbol |
|--------|-----------|--------|--------|-----------|--------|
| DO4 | 21 | NC | DO1 | 11 | NC |
| | 22 | COM | | 12 | COM |
| | 23 | NO | | 13 | NO |
| DO5 | 24 | NC | DO2 | 14 | NC |
| | 25 | COM | | 15 | COM |
| | 26 | NO | | 16 | NO |
| DO6 | 27 | NC | DO3 | 17 | NC |
| | 28 | COM | | 18 | COM |
| | 29 | NO | | 19 | NO |
| | 30 | - | | 20 | - |

Wiring to a GX90WD Digital Input /Output Module

Terminal Diagram


M3 screw terminal

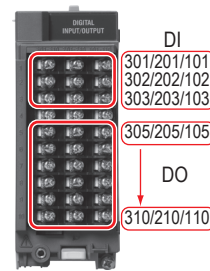

← Wiring direction

Terminal Arrangement

| CH No. | Term. No. | Symbol | Term. No. | Symbol | Term. No. | Symbol |
|------------|-----------|--------|-----------|--------|-----------|--------|
| DI1 to DI8 | 301 | DI3 | 201 | DI2 | 101 | DI1 |
| | 302 | DI6 | 202 | DI5 | 102 | DI4 |
| | 303 | DICOM | 203 | DI8 | 103 | DI7 |
| | - | 304 | - | 204 | - | 104 |
| DO1 | 305 | DO1NO | 205 | DO1COM | 105 | DO1NC |
| DO2 | 306 | DO2NO | 206 | DO2COM | 106 | DO2NC |
| DO3 | 307 | DO3NO | 207 | DO3COM | 107 | DO3NC |
| DO4 | 308 | DO4NO | 208 | DO4COM | 108 | DO4NC |
| DO5 | 309 | DO5NO | 209 | DO5COM | 109 | DO5NC |
| DO6 | 310 | DO6NO | 210 | DO6COM | 110 | DO6NC |

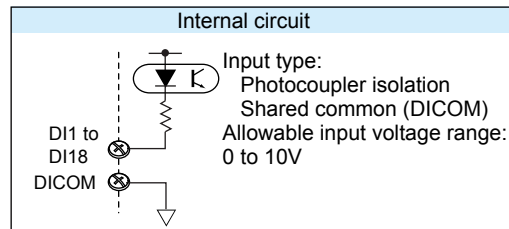


Note: Do not apply voltage outside the allowable input voltage range across input terminals. Doing so can cause a malfunction.

Installation and Wiring

Wiring to a GX90XP Pulse Input Module


Terminal Diagram

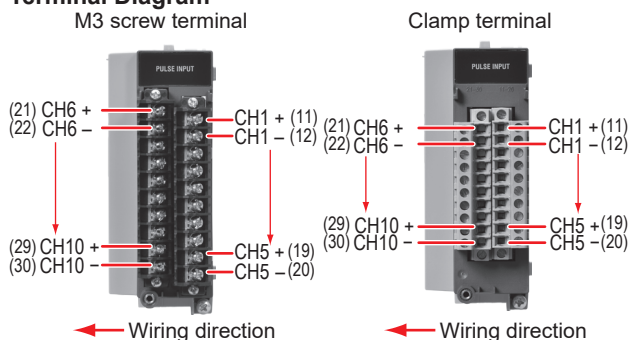

Terminal Arrangement

| Term. No. | Symbol | Term. No. | Symbol |
|-----------|--------|-----------|--------|
| 21 | CH6 + | 11 | CH1 + |
| 22 | CH6 - | 12 | CH1 - |
| 23 | CH7 + | 13 | CH2 + |
| 24 | CH7 - | 14 | CH2 - |
| 25 | CH8 + | 15 | CH3 + |
| 26 | CH8 - | 16 | CH3 - |
| 27 | CH9 + | 17 | CH4 + |
| 28 | CH9 - | 18 | CH4 - |
| 29 | CH10 + | 19 | CH5 + |
| 30 | CH10 - | 20 | CH5 - |


Negative terminal (common) potential shared

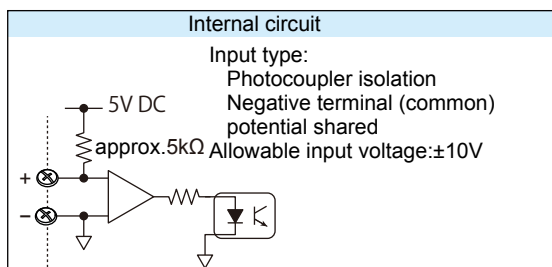

Note: Do not apply voltage outside the allowable input voltage range across input terminals. Doing so can cause a malfunction.

Wiring to a GX90YA Analog Output Module

Terminal Diagram

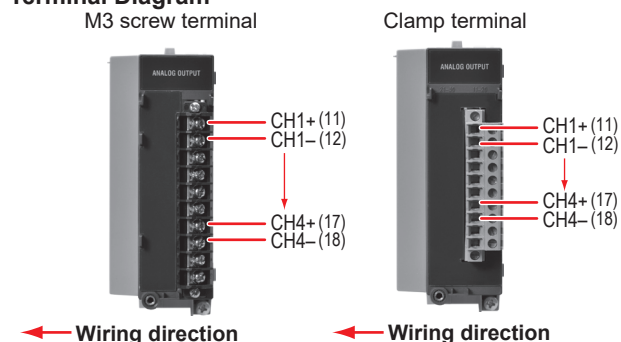


Terminal Arrangement

| Term. No. | Symbol |
|-----------|----------|
| 11 | CH1 + |
| 12 | CH1 - |
| 13 | CH2 + |
| 14 | CH2 - |
| 15 | CH3 + |
| 16 | CH3 - |
| 17 | CH4 + |
| 18 | CH4 - |
| 19 | Not Used |
| 20 | Not Used |


Wiring to a GX90UT PID Control Module

Terminal Diagram

M3 screw terminal

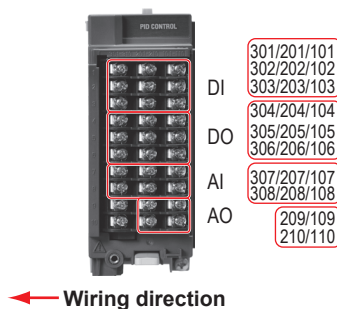


Analog Input

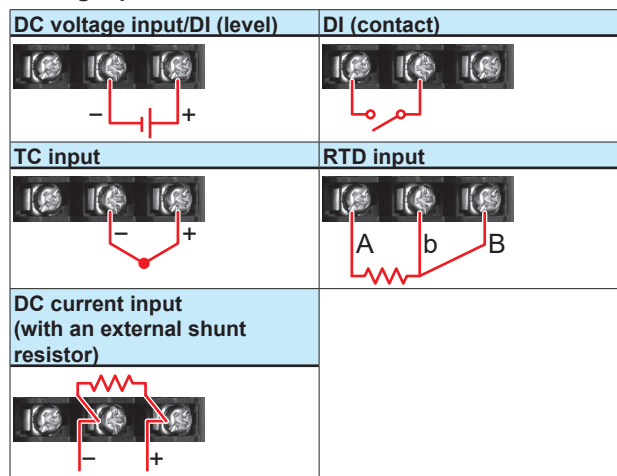

* Be careful because the DI wiring is different between level and contact.


Analog Output

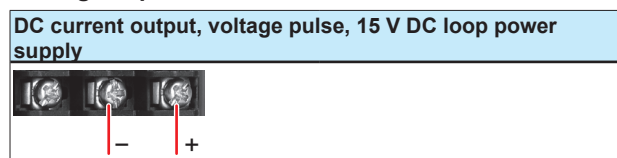

Terminal Diagram


| Term. No. | Symbol | Term. No. | Symbol | Term. No. | Symbol |
|-----------|----------|-----------|----------|-----------|----------|
| 301 | DI3 | 201 | DI2 | 101 | DI1 |
| 302 | DI6 | 202 | DI5 | 102 | DI4 |
| 303 | DICOM | 203 | DI8 | 103 | DI7 |
| 304 | DO3 | 204 | DO2 | 104 | DO1 |
| 305 | DO6 | 205 | DO5 | 105 | DO4 |
| 306 | DO-COM | 206 | DO8 | 106 | DO7 |
| 307 | AI1(/A) | 207 | AI1(-/b) | 107 | AI1(+/B) |
| 308 | AI2(/A) | 208 | AI2(-/b) | 108 | AI2(+/B) |
| 309 | Not Used | 209 | AO1(-) | 109 | AO1(+) |
| 310 | Not Used | 210 | AO12(-) | 110 | AO2(+) |

* Empty terminals may not be used

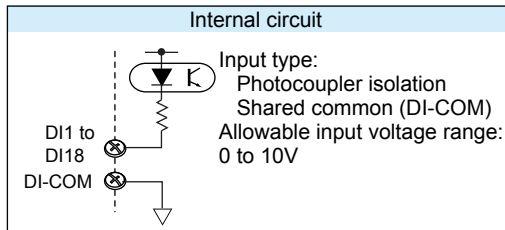


Note: Do not apply voltage outside the allowable input voltage range across input terminals. Doing so can cause a malfunction.

Connecting to the FAIL Output/Status Output (/FL option)

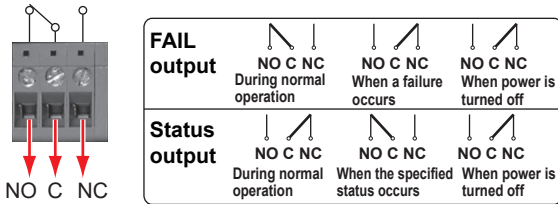

Recommended torque for tightening the screws: 0.5N•m


Connecting to the Serial Communication Interface (/C2 option)

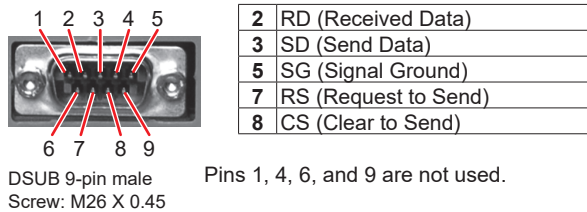

Pins 1, 4, 6, and 9 are not used.


Connecting to the RS-422/485 Connector (/C3 option)

Four-wire system

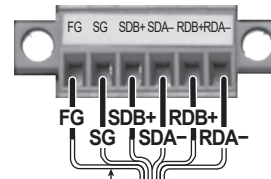

Electric potential of the shield ← Shield

Two-wire system

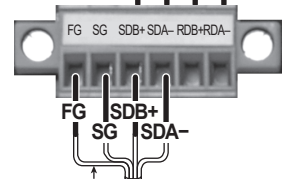


Electric potential of the shield ← Shield

| | |
|------------------------|--------------------------|
| FG (Frame Ground) | Case ground of the GX/GP |
| SG (Signal Ground) | Signal ground |
| SDB+ (Send Data B+) | Send data B (+) |
| SDA- (Send Data A-) | Send data A (-) |
| RDB+ (Receive Data B+) | Receive data B (+) |
| RDA- (Receive Data A-) | Receive data A (-) |

Recommended torque for tightening the screws: 0.2N•m

Connecting to the VGA Connector (/D5 option)

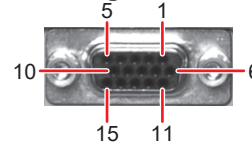

D-Sub 15-pin (Female)

| Pin No. | Signal Name | Specifications |
|---------|------------------------|--------------------------------------|
| 1 | Red | 0.7 Vp-p |
| 2 | Green | 0.7 Vp-p |
| 3 | Blue | 0.7 Vp-p |
| 4 | — | |
| 5 | — | |
| 6 | GND | |
| 7 | GND | |
| 8 | GND | |
| 9 | — | |
| 10 | GND | |
| 11 | — | |
| 12 | — | |
| 13 | Horizontal sync signal | Approx. 39.1 kHz, TTL negative logic |
| 14 | Vertical sync signal | Approx. 60 Hz, TTL negative logic |
| 15 | — | |



- Only connect the GX/GP to a monitor after turning both the GX/GP and the monitor off.
- Do not short the VIDEO OUT connector or apply external voltage to it. Doing so may damage the GX/GP.

Installation and Wiring

Connecting to a Monitor

1. Turn off the GX/GP and the monitor.
2. Connect the GX/GP and the monitor using an RGB cable.
3. Turn on the GX/GP and the monitor. The GX/GP screen appears on the monitor.

Note

- When the GX/GP is turned on, the VIDEO OUT connector constantly transmits VGA signals.
- The monitor display may flicker if you place the GX/GP or some other device close to it.
- Depending on the type of monitor, parts of the GX/GP display may be cut off.


Connecting to the USB Port (/UH option)

A USB2.0 compliant port (see "Component Names")

Connecting to the Ethernet Port

Checking the Connection and Communication Status

You can use the indicators that are located above the Ethernet port to check the connection status of the Ethernet interface.

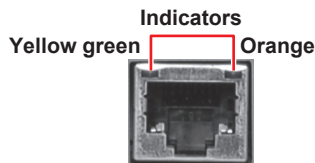

| Indicator | Connection Status of the Ethernet Interface |
|-------------------------|---|
| Lit (yellow-green) | The Ethernet link is established. |
| Off (yellow-green) | The Ethernet link is not established. |
| Blinking (yellow-green) | Receiving data |
| Lit (orange) | Connected at 100 Mbps |
| Off (orange) | Connected at 10 Mbps |

Wiring the Power Supply

Use a power supply that meets the following conditions:

| Item | Condition (Not /P1) | Condition (/P1) |
|--|---|----------------------------|
| Rated supply voltage | 100 to 240 VAC | 24 VDC/AC |
| Allowable power | GX/GP: 90 to 132 VAC, 180 to 264 VAC | 21.6 V to 26.4 VDC/AC |
| supply voltage range | GX60: 90 to 132 VAC, 180 to 240 VAC | |
| Rated power supply frequency | 50/60 Hz | 50/60 Hz (for AC) |
| Permitted power supply frequency range | 50/60 Hz ± 2% | 50/60 Hz ± 2% (for AC) |
| Maximum power consumption | GX10/GP10: 48 VA GX20/GP20: 90 VA GX60: 40VA | GX10: 24 VA GX20: 48 VA |
| Maximum power consumption | GX10/GP10: 60 VA GX20/GP20: 110 VA GX60: 55VA | GX10: 42 VA GX20: 76 VA |
| 240 VAC (/P1: 24 VAC) | | |

Note

Do not use a supply voltage of 132 to 180 VAC, as this may have adverse effects on the measurement accuracy.

GP10 Power Supply Suffix Code: 2

| Item | Condition |
|---------------------------|----------------|
| Rated supply voltage | 12 VDC |
| Allowable power | 10 V to 20 VDC |
| supply voltage range | |
| Maximum power consumption | 26 VA |

Precautions to Be Taken When Wiring the Power Supply (GX10/GX20/GX60)

Make sure to follow the warnings below when wiring the power supply. Failure to do so may cause electric shock or damage to the instrument.



WARNING

- To prevent electric shock, ensure that the power supply is turned off.
- To prevent fire, use 600 V PVC insulated wires (AWG20 to AWG16; JISC3307) or wires or cables with equivalent or better performance.
- Make sure to earth ground the protective ground terminal through minimum resistance before you turn on the power.
- Use crimp-on lugs (designed for 4 mm screws) with insulation sleeves to connect both the power cord and the protective ground.
- To prevent electric shock, be sure to close the transparent cover for the power supply wires.
- For safety, provide a double-pole switch in an easily operable location near the GX/GP to disconnect the GX/GP from the main power supply. Put an indication on this switch as the breaker on the power supply line for the GX/GP/GM system and indications of ON and OFF.

Switch specifications

Steady-state current rating 1 A or higher (100 to 240 VAC),

3 A or higher (24 VDC/AC, 12 VDC, 12 to 24 VDC)


Inrush current rating 60 A or higher (100 to 240 VAC),
70 A or higher (24 VDC/AC, 12 VDC, 12 to 24 VDC)

Must comply with IEC60947-1 and IEC60947-3.

- Do not add a switch or fuse to the ground line.

Wiring Procedure (GX10/GX20/GX60)

1. Turn off the GX power supply, and then remove the transparent power supply terminal cover.
2. Connect the power cord and the protective ground cord to the power supply terminal. Use ring-tongue crimp-on lugs (for M4 screws) with insulation sleeves. The appropriate tightening torque for the screws is 1.4 to 1.5 N·m.

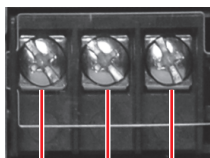

L(+) N(-)  Protective ground

3. Attach the transparent power supply terminal cover, and fasten it with screws.

Precautions to Be Taken When Connecting the Power Supply (GP10/GP20/GX60)

Make sure to follow the warnings below when connecting the power supply. Failure to do so may cause electric shock or damage to the instrument.

**WARNING**

- Before connecting the power cord, ensure that the source voltage matches the rated supply voltage of the instrument and that it is within the maximum rated voltage range of the provided power cord.
- Connect the power cord after checking that the power switch of the instrument is turned OFF.
- To prevent electric shock and fire, be sure to use a power cord purchased from Yokogawa Electric Corporation.
- Make sure to connect protective earth grounding to prevent electric shock. Insert the power cord into a grounded three-prong outlet.
- Do not use an extension cord without protective earth ground. If you do, the instrument will not be grounded.

Connection Procedure

1. Check that the GP's power switch is off.
2. Connect the supplied power cord plug to the power inlet on the rear panel of the GP or front panel of the GX60.



3. Ensure that the source voltage is within the maximum rated voltage range of the provided power cord. Then, connect the other end of the cord to the outlet. Use a grounded three-prong outlet.

Precautions to Be Taken When Connecting the Power Supply (GP10 Power supply Suffix Code: 2)


Make sure to follow the warnings below when connecting the power supply. Failure to do so may cause damage to the instrument.

**WARNING**

- Wire the power cable to the power supply terminal, making sure that the polarity is correct.
- Connect the power cables after checking that the power switch of the instrument is turned OFF.
- Using other wires may cause abnormal heating or fire.

Wiring Procedure (GP10 Power supply Suffix Code: 2)

1. Turn off the GP power supply, and then remove the transparent power supply terminal cover.
2. Wire the power cable to the power supply terminal, making sure that the polarity is correct. Use ring-tongue crimp-on lugs (for M4 screws) with insulation sleeves. The appropriate tightening torque for the screws is 1.4 to 1.5 N·m. Use 600 V PVC insulated wires (AWG20 to AWG16; JISC3307) or wires or cables with equivalent or better performance.

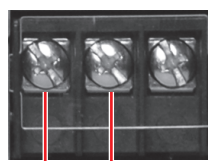

(+) (-)

3. Attach the transparent power supply terminal cover, and fasten it with screws.

Basic Operation

Turning the Power On and Off



WARNING

To make panel door lock for GX10/GX20 or install the GP/GX60 systems in a panel with a door or in a location where operator or any third person can not operate the power switch carelessly. When the power switch of GX/GP systems under operation (control in progress) be turned on or off carelessly, it may result the system down or injury. Be careful to operate the power switch on or off. Careless operations can be avoided by applying the slide lock.

Turning the Power On



CAUTION


Check the following points before turning on the power switch.

- The power cord or wires are connected properly to the GX/GP and GX60.
- The GX/GP is connected to the correct power supply.

If the input wiring is connected in parallel with another instrument, do not turn on or off the GX/GP/GX60 or other instrument during operation. If you do, measured values may be affected.

GX/GP

- 1 Open the front door.
- 2 Turn on the power switch.
A self-test takes place for a few seconds, and then the operation screen appears.

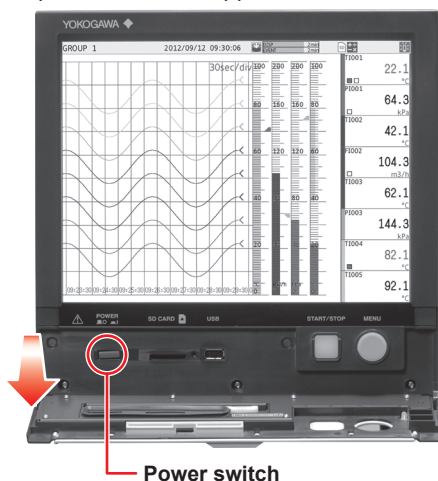

- 3 Close the front door.

GX60

Turn on the power switch.



- CAUTION**
- If nothing appears on the display even when you turn on the power switch, turn off the power switch, and check the wiring and supply voltage. If, after checking these items, the GX/GP still fails to start when you turn on the power switch, it may be malfunctioning. Contact your nearest Yokogawa dealer for repairs.
 - If an error message appears on the screen, take measures according to the information in chapter 5, “Troubleshooting” in the GX/GP User’s Manual.
 - After you turn on the power switch, allow the GX/GP to warm up for at least 30 minutes before starting a measurement.

Turning the Power Off



- CAUTION**
- Check the following points before turning off the power switch.
- The external storage medium is not being accessed (the yellow-green LED is not blinking).

GX/GP

- 1 Open the front door.
- 2 Turn off the power switch.
- 3 Close the front door.

GX60

Turn off the power switch.

Setting and Removing SD Memory Cards


Setting a SD Memory Card

- 1 Open the front door.
- 2 Insert an SD memory card into the card slot.



Removing the SD Memory Card


- 1 Press MENU.
- 2 Tap the media eject icon.

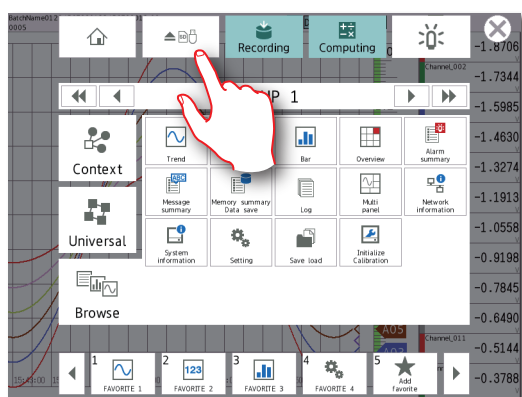


- 3 On the screen for selecting the type of media, tap SD.
- 4 Remove the SD memory card.

Operation complete

Viewing the Operation Screen (Trend)

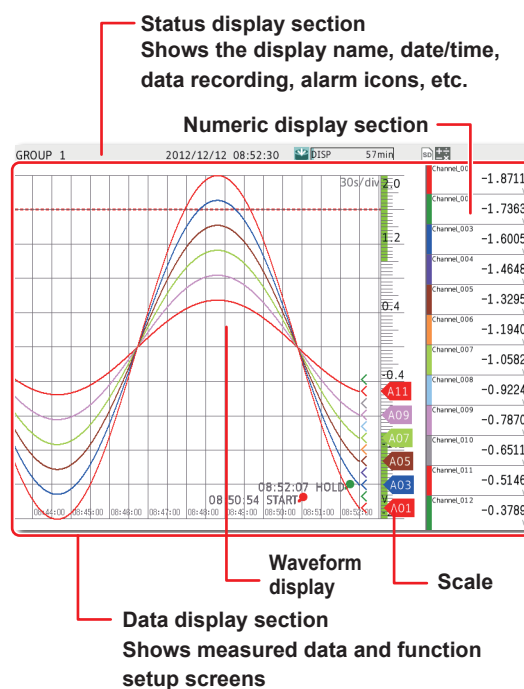

Status Display Section

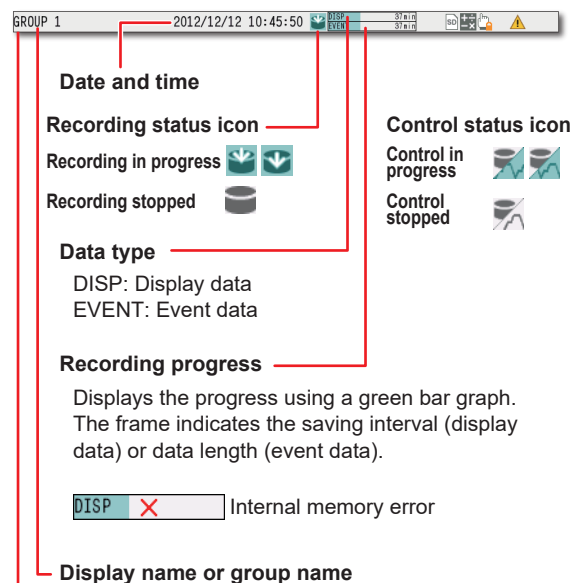

When using the batch function

BatchName01234567890123456789012-000001 2012/12/12 10:14:07
GROUP 1


When using the login function

User Name012345678901 2012/12/12 10:17:54
GROUP 1

When using the login and batch functions

BatchName01234567890123456789012-000002 2012/12/12 10:18:44
User Name012345678901 GROUP 1

Basic Operation



SD memory card icon

- Remaining memory space 50% or more
- Remaining memory space 50% or less
- Remaining memory space 10% or less
- External medium error

Math icon (/MT option)

- Gray icon: Computation started
- Yellow icon: Computation data dropout occurred

Status icon

- The condition assigned to instrument information output is occurring.
- Operation lock is enabled.
- E-mail transmission is enabled.

Alarm icon

- Displayed when any alarm is activated.

Lit in red Alarm activated.


Blinking in red Alarm indication set to hold. Alarms are currently activated, and some alarms have not been acknowledged.

Blinking in gray Alarm indication set to hold. All alarms have been cleared after alarms have occurred, but some alarms have not been acknowledged.

Displaying the Menu Screen

To change the display between various setup screens and operation screens, display the menu screen.

- 1 Press **MENU**.
The menu screen appears.

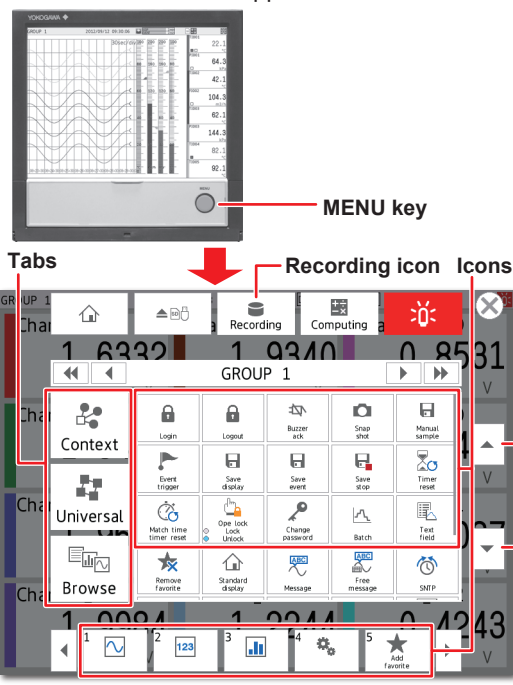

Scrolls the menu in the tab
(These appear when the number of icons exceeds the maximum number that can be displayed.)

Setting the Date and Time*


* If you need to set the time zone or DST (Daylight Saving Time) or both, do so before setting the date and time.

Path **MENU key > Browse tab > Setting > Setting menu > System settings > Time basic settings**

Set the date using the calendar and the time.

Path **MENU key > Universal tab > Date/Time settings**

- 1 Tap the Date tab.
- 2 Set the month and day with the switch icons.

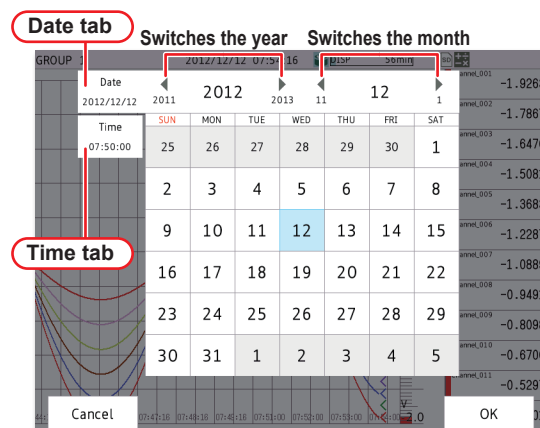


- 3 Tap the Time tab.
- 4 Enter the time using the keyboard, and tap **OK**.
The time is set.

Operation complete

Configuring the Inputs

For channel 1 (0001) of slot 0, set thermocouple type T, 0 to 200°C.

Path MENU key > **Browse** tab > **Setting** > Setting menu > **AI channel settings** > **Range**

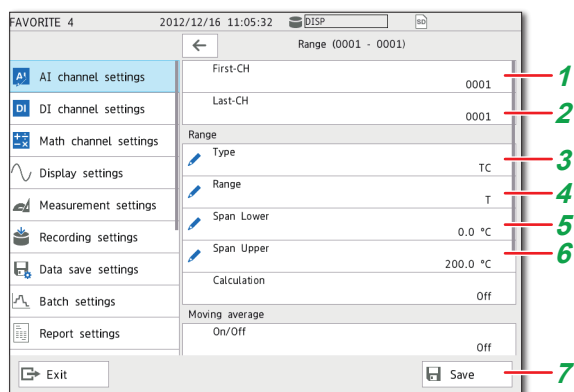


- 1 Tap **First-CH** > 0001.
- 2 Check that Last-CH is 0001.
- 3 Tap **Type** > TC.
- 4 Tap **Range** > T.
- 5 Tap **Span Lower**, and enter 0.0.
- 6 Tap **Span Upper**, and enter 200.0.
- 7 Tap **Save**.

Operation complete

Starting Measurement and Recording

- 1 Press **MENU**.
The menu screen appears.

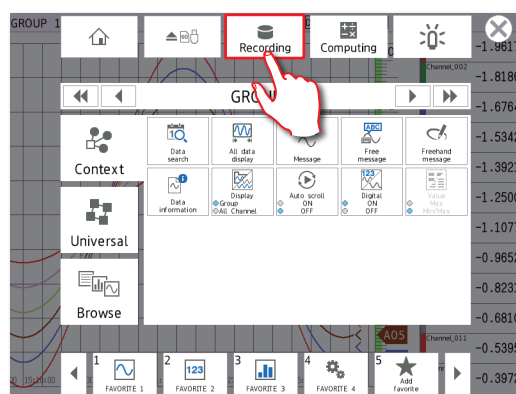

- 2 Tap the **Recording** icon.
The record start screen appears.
- 3 Tap **Record**.
Recording starts. The recording status icon in the status display section changes to recording in progress.


Operation complete

You can also start recording with the **START/STOP** key.

You can stop recording in the same way that you start recording.

Switching between Operation Screens

- 1 Press **MENU**.
The menu screen appears.

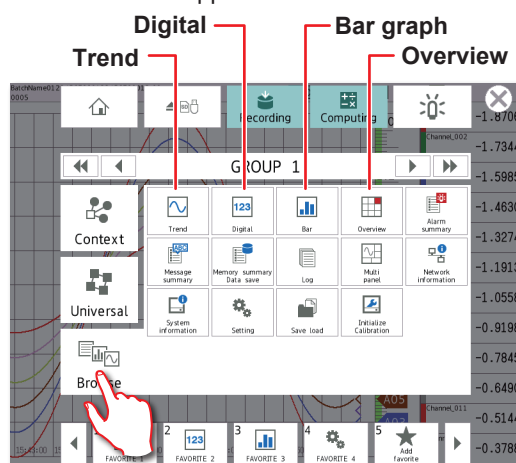


- 2 Tap the **Browse** tab.
- 3 Tap the icon of the display that you want to change to.

Operation complete

Saving Data to USB Memory

- 1 Set the USB memory.
The Media operation screen appears.
- 2 Tap the **Memory save Data save** icon.
The Memory summary / Save screen appears.
- 3 Press **MENU**.
The menu screen appears.
- 4 Tap the **Context** tab.
Each data save icon appears.

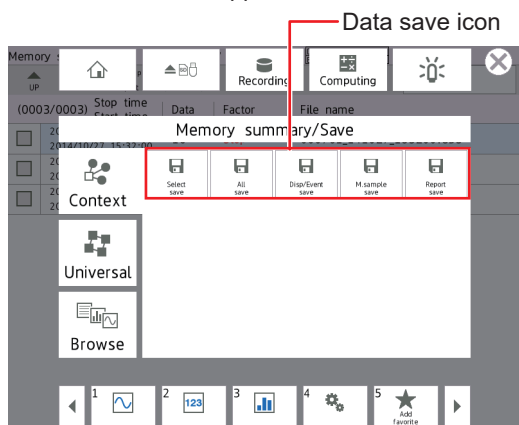


- 5 Tap data save icon to save.
The data save screen appears.
- 6 Select the **USB**, and tap **OK**.
The data is save to USB memory.

Operation complete

Switching the Quick Settings (GP only)

A minimal setup menu for data collection is displayed.

Path MENU key > Browse tab > Setting >

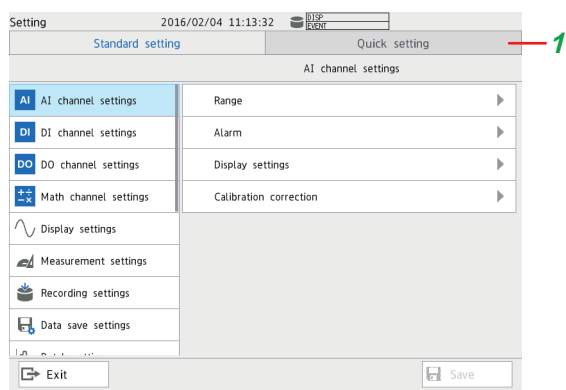

- 1 Tap the **Quick setting** tab.
Setting menu of the quick setting is displayed.

Operation complete

This section explains how to change various settings.
Before you change settings, stop recording and computation.


Advanced Operation (Various settings and operation)

Setting Measurement and Recording Conditions

Configuring the type of data to record to display data, the scan interval to 2 s, and the trend interval to 1 min.

Setting the Type of Data to Record

Path MENU key > Browse tab > Setting > Setting menu > Recording Settings > Basic settings

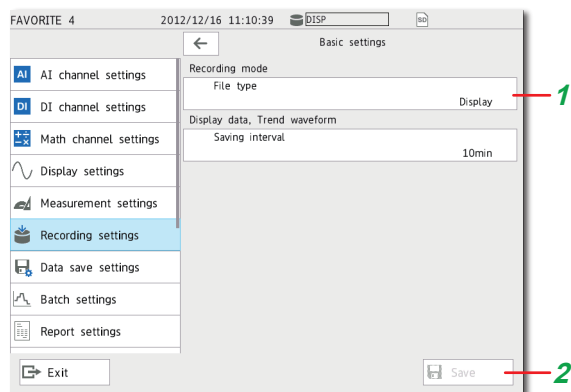


- 1 Tap File type > Display.
- 2 Tap Save.

You can set the file type to record only the data that suits your purpose. For example, you can record detailed data or record data only when alarms occur. For details, see the User's Manual (IM 04L51B01-01EN).

Setting the Scan Interval

Path MENU key > Browse tab > Setting > Setting menu > Measurement settings > Scan interval

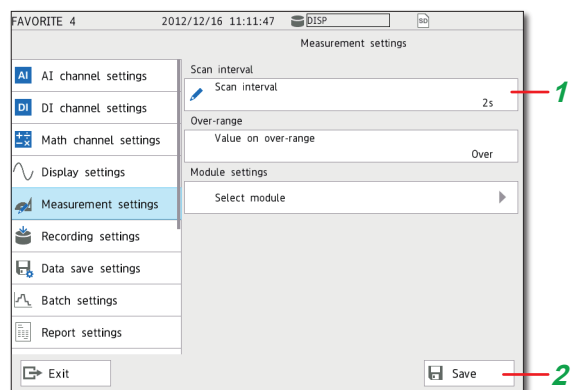


- 1 Tap Scan interval > 2s.
- 2 Tap Save.

Operation complete

Setting the Trend Interval

Path MENU key > Browse tab > Setting > Setting menu > Display settings > Trend interval

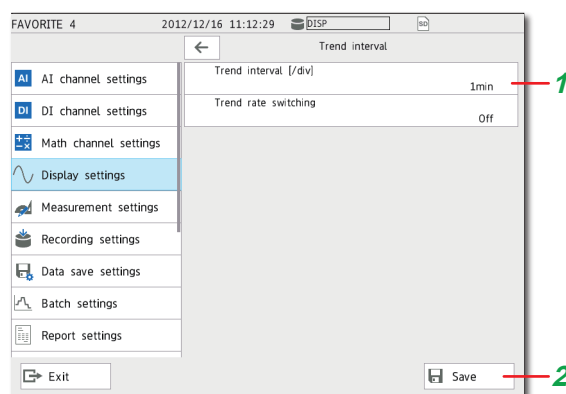


- 1 Tap Trend interval [div] > 1 min.
- 2 Tap Save.

Operation complete

Setting Alarms

On channel 1 of slot 0, set the high limit alarm at the alarm value of 150°C.

Path MENU key > Browse tab > Setting > Setting menu > AI channel settings > Alarm

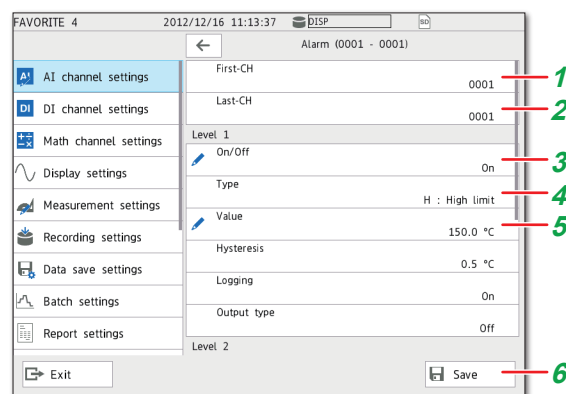


- 1 Tap First-CH > 0001.
- 2 Check that Last-CH is 0001.
- 3 Tap Level1 > On.
- 4 Tap Type > H.
- 5 Tap Value, and enter 150.0.
- 6 Tap Save.

Operation complete

Alarm DO output


Alarms are transmitted via DO output to DO channel 1 of slot 1. (A DO output module is required.)

Configure the following settings in the alarm settings (see "Setting Alarms").

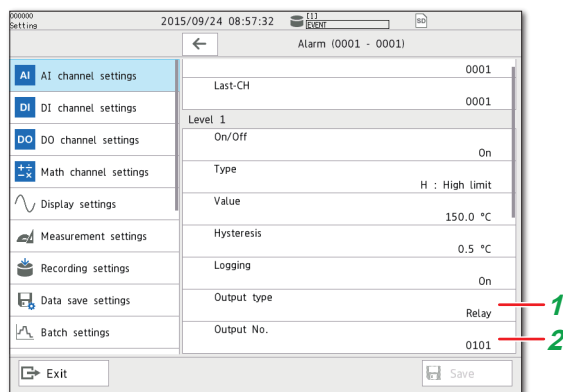

- 1 Tap **Output type** > **Relay**.
- 2 Tap the **Output No.**, and enter 0101.

Path MENU key > Browse tab > Setting > Setting menu > DO channel settings > Range

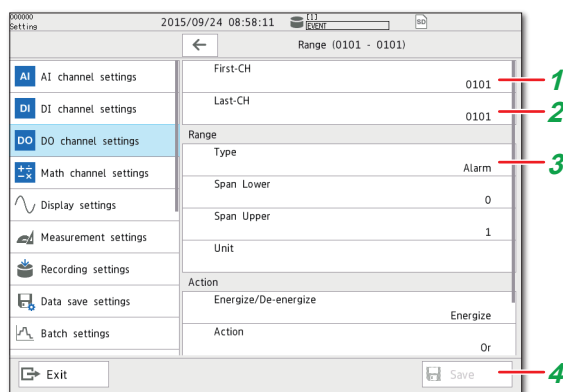



- 1 Tap **First-CH** > **0101**.
- 2 Check that **Last-CH** is **0101**.
- 3 Tap **Range Type** > **Alarm**.
- 4 Tap **Save**.

Operation complete

Using the Scaling Function (Measuring a flow meter)

On channel 1 of slot 1 (0101), measure the input signal ranging from 1 to 5 VDC as 0.0 to 100.0 m³/h.

Path MENU key > Browse tab > Setting > Setting menu > AI channel settings > Range

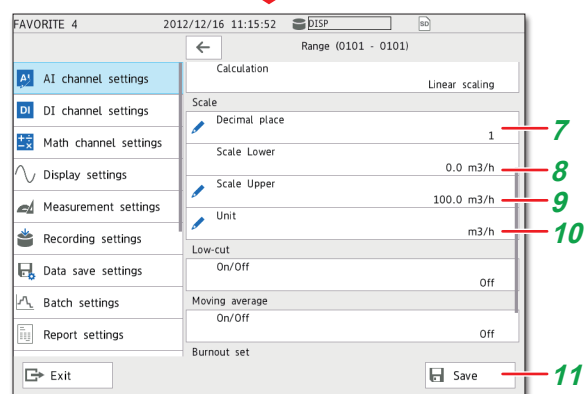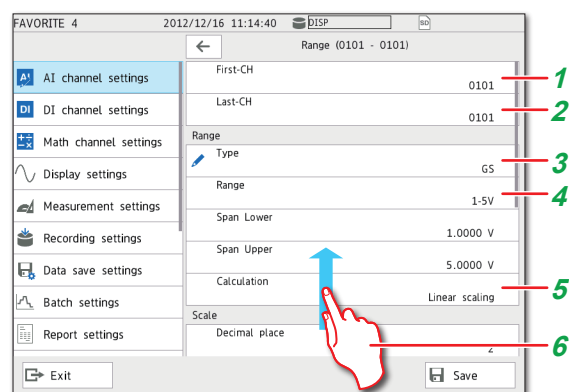


- 1 Tap **First-CH** > **0101**.
- 2 Check that **Last-CH** is **0101**.
- 3 Tap **Type** > **GS**.
- 4 Tap **Range** > **1-5V**.
- 5 Tap **Calculation** > **Linear scaling**.
- 6 Drag the screen up. Show the setting parameters off the screen at the bottom.
- 7 Tap **Decimal place** > **1**.
- 8 Tap **Scale Lower**, and enter 0.0.
- 9 Tap **Scale Upper**, and enter 100.0.
- 10 Tap **Unit**, and enter m3/h.
- 11 Tap **Save**.

Operation complete

Using the Scaling Function (Measuring a temperature)

On channel 1 of slot 0 (0001), measure the input signal ranging from 0 to 5 VDC as 0.0 to 600.0 °C.

Path MENU key > Browse tab > Setting > Setting menu > AI channel settings > Range

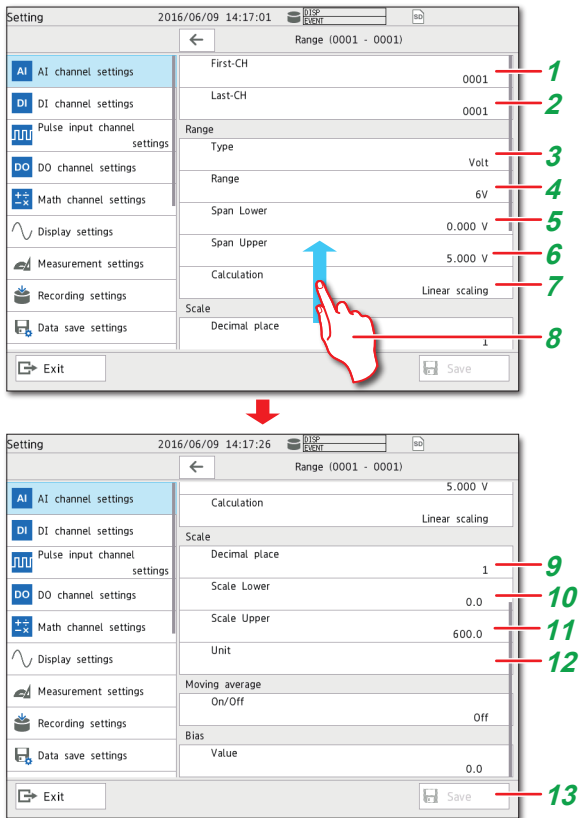

- 1 Tap **First-CH** > 0001.
- 2 Check that **Last-CH** is 0001.
- 3 Tap **Type** > Volt.
- 4 Tap **Range** > 6V.
- 5 Tap **Span Lower**, and enter 0.000.
- 6 Tap **Span Upper**, and enter 5.000.
- 7 Tap **Calculation** > Linear scaling.
- 8 Drag the screen up.
Show the setting parameters off the screen at the bottom.
- 9 Tap **Decimal place** > 1.
- 10 Tap **Scale Lower**, and enter 0.0.
- 11 Tap **Scale Upper**, and enter 600.0.
- 12 Tap **Unit** > , and enter °C.
- 13 Tap **Save**.


Operation complete

Registering and Deleting Favorite Screens

You can register displays that you use frequently as favorite screens and display them with easy operation. You can register up to 20 displays.

Registering a Favorite Screen

- 1 Show the display that you want to register as a favorite screen.
- 2 Press **MENU**.
The menu screen appears.

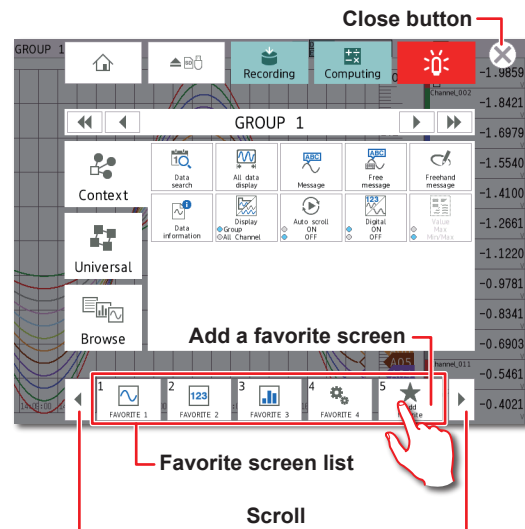

- 3 Tap **Add favorite**.
A confirmation screen appears.
- 4 Tap **Favorite name**, and enter the name.
- 5 Tap **OK**.
The display is registered.
- 6 Tap the **Close** icon.
The screen closes.

Operation complete

Deleting a Favorite Screen

- 1 Press **MENU**.
- 2 Tap **Universal** tab > Remove favorite.
- 3 Select the screen to delete, and tap **OK**.
- 4 Tap the **Close** icon.
The screen closes.

Operation complete

Setting the Measurement Mode

Setting the Measurement Mode

The measurement mode determines how the entire GX/GP system operates. The GX/GP measurement characteristics change depending on the measurement mode. The measurement mode must be set before reconfiguration and before specifying various settings. By factory default, the measurement mode is set to Normal. When performing high-speed or dual interval measurement according to measurement conditions, you need to set the measurement mode to High speed or Dual interval.

- 1 Press **MENU**.
- 2 Tap the **Browse** tab.
- 3 Tap **Initialize Calibration**.
- 4 Tap **Measuremet mode**.
- 5 Setting the Measurement Mode.
- 6 Tap **Execute**.
A confirmation screen is displayed.
- 7 Tap **OK**

Operation complete

Note

- When the measurement mode is changed, the system restarts, and the following data is initialized. Set the measurement mode before reconfiguration and before specifying various settings.

| Data subject to initialization |
|---|
| All internal data |
| All setting parameters including security settings but excluding communication settings |
| System configuration data |

- You cannot set the measurement mode when recording, computation, or control execution is in progress.
- The measurement mode is not initialized during initialization.
- If the advanced security function (/AS) or multi-batch function (/BT) is enabled (On), the measurement mode is fixed to Normal.
When changing the measurement mode, disable the functions beforehand.

Limitations

Depending on the measurement mode, there is a limit to the number of measurement channels, the number of recording channels, and the supported modules. For the specific limitations, see the limitations provided in the following general specifications.

- GX/10/GX20 Paperless Recorder (panel mount type)
General Specifications GS 04L51B01-01EN
- GP10/GP20 Paperless Recorder (portable type)
General Specifications GS 04L52B01-01EN

Reconfiguring the GX/GP (Module identification)

Reconfiguring the GX/GP

When you reconfigure the GX/GP and the GX60, the installed I/O modules are detected, and the settings are changed accordingly.

Reconfiguration is necessary in the following situations.


- If you specify modules separately
- If you change the modules (change to different modules)
- If you add or remove modules
- If you connect the GX60
- When the measurement mode is changed
- When the advanced security function on/off state is changed

If you purchased a model with preinstalled modules (/U[] []0 or /CR[] option), you can start using the GX/GP right away without any reconfiguration. However, if you connect the GX60, change modules, add modules, or delete modules, you will need to reconfigure.

Note

You cannot reconfigure GX/GP while recording start, math start, controlled.

- 1 Press **MENU**.
- 2 Tap the **Browse** tab.
- 3 Tap **Initialize Calibration**.
- 4 Tap **Reconfiguration**.
- 5 Tap **Execute**.
The system information appears.

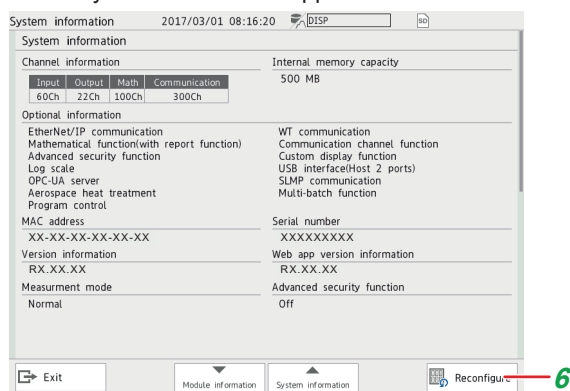

- 6 Tap **Reconfigure**.
- 7 Tap **OK**.

Operation complete

Note

Do not carry out the following operations while the GX/GP is reconfiguring.

- Turn the power off and on
- Insert or remove modules

This procedure is not necessary if you purchased an I/O module preinstalled model and do not need to change the configuration.

Initializing the GX/GP (Initializing all settings)


Initialize the GX/GP after reconfiguring the GX/GP when channels are not assigned to display groups. Channels are automatically assigned during initialization.

For details, see the User's Manual (IM 04L51B01-01EN).

Note

- This procedure is not necessary if you purchased an I/O module preinstalled model and do not need to change the configuration.
- If you initialize, setting parameters are reset to their factory defaults. We recommend that you back up setting parameters before initialization.

- 1 Press **MENU**.
- 2 Tap the **Browse** tab.
- 3 Tap **Initialize Calibration > Initialize > Settings/Inter data**.
- 4 Tap **Initialize all > On**.

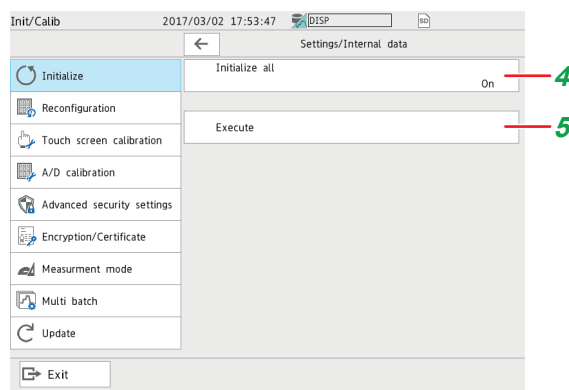

- 5 Tap **Execute**.
A confirmation screen is displayed.
- 6 Tap **OK**.
The settings are initialized.

Operation complete


This section explains how to back up setting parameters.
Before you change the module configuration or settings, we recommend that you back up the setting parameters.

Saving and Loading Setting Parameters

Saving Setting Parameters

Save setting parameters to the SD memory card with the file name "SF1."

Path MENU key > Browse tab > **Save load**
> Menu **Save settings** > Setting parameters

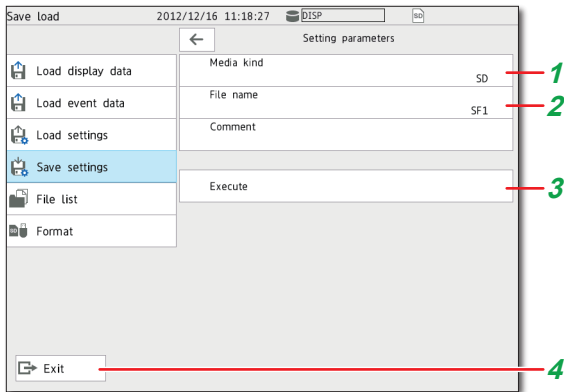


- 1 Tap **Media kind** > **SD**.
- 2 Tap **File name**, and enter SF1.
- 3 Tap **Execute**.
- 4 Tap **Exit**.

Operation complete

Loading Setup Parameters

Load the setup parameter file "SF1.GNL" from the SD memory card.

Path MENU key > Browse tab > **Save load**
> Menu **Load settings** > Setting parameters

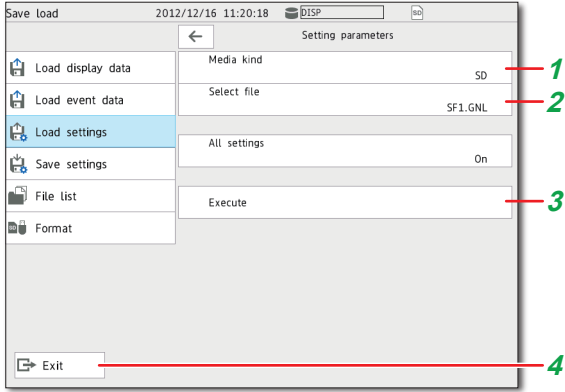

- 1 Tap **Media kind** > **SD**.
- 2 Tap **File name** > **SF1.GNL**.
- 3 Tap **Execute**.
- 4 Tap **Exit**.

Operation complete

Web Application


You can open the Web application simply by starting a Web browser (Microsoft Edge, Google Chrome), and specifying the GX/GP IP address. You do not have to install any software. You can do the following on the Web application.

- Operate the GX/GP
- Monitor data
- Changing setting parameters

For details on configuring the environment settings to connect the GX/GP to an Ethernet network and how to use the software, see the User's Manual (IM 04L51B01-01EN).

Starting the Web Application

- 1 Start the Web browser.
- 2 In the Address box, enter "http://" followed by the GX/GP IP address. If DNS is available, you can specify the host name in place of the IP address. Example: When the IP address is "192.168.1.1," enter http://192.168.1.1 in the Address box.
The Web application starts, and the screen appears.

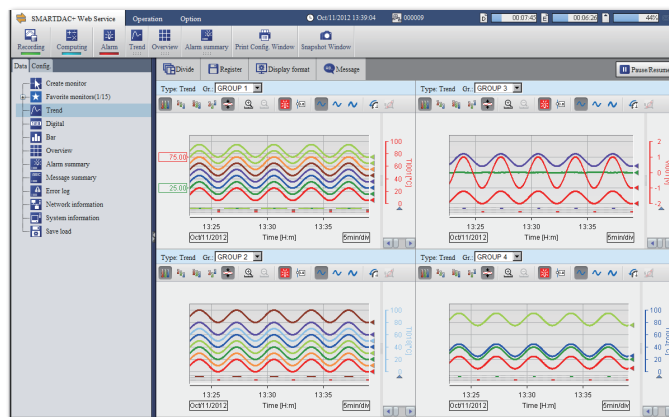

Operation complete

Closing the Web Application

When close the Web browser, the Web application also closes.

Application Software

The following software applications are available for the GX/GP.

- SMARTDAC+ STANDARD Universal Viewer
- SMARTDAC+ STANDARD Hardware Configurator (Included program pattern setting)

You can use SMARTDAC+ STANDARD Universal Viewer to display on screen and print the following types of data that is generated by recorders.

- Display data files
- Event data files
- Report data files (including hourly, daily, monthly, batch, and daily-custom, and free reports)
- Manual sampled data files

Two different recording data files can be displayed superimposed.

You can attach also convert measured data to ASCII or Excel formats.

You can use SMARTDAC+ STANDARD Hardware Configurator to create and edit setup data for the GX/GP recorder.

In addition, program patterns can be created and sent to the GX/GP.

You can download the latest software and labels from the following URL.

<https://www.yokogawa.com/lp/smardtacplus/>

You can the labels on the front door of the GX/GP.

Enter or print tag names on them for use. You can use Microsoft Office Excel 2003 or later to edit the labels.

You can download the product user's manuals from the following URL.

<https://www.yokogawa.com/lp/smardtacplus/>

PC System Requirements

OS

| OS | Type |
|------------|--|
| Windows 10 | Home (32- or 64-bit edition) |
| | Pro (32- or 64-bit edition) |
| | Enterprise (32- or 64bit edition) |
| | Enterprise LTSC (32- or 64bit edition) |
| | Enterprise LTSC (32- or 64bit edition) |
| Windows 11 | Home (64-bit Edition) |
| | Pro (64-bit Edition) |
| | Enterprise (64-bit Edition) |

Note) Yokogawa will also stop supporting OSs that Microsoft Corporation no longer supports.

CPU and main memory

| OS | CPU and main memory |
|------------|---|
| Windows 10 | 32-bit edition: Intel Core2 Duo E6300 or faster x64 or x86 processor. At least 2 GB of memory. |
| | 64-bit edition: Intel Core2 Duo E6300 or faster x64 processor. At least 2 GB of memory. |
| Windows 11 | 64-bit edition: Core-i5 or faster and 8 th generation later Intel processor. At least 8 GB of memory. |

Web Browser

| Compatible Browser |
|--------------------|
| Microsoft Edge |
| Google Chrome |

Hard disk

Free space of at least 100 MB (Windows 10) or 64 GB (Windows 11).

(depending on the amount of data, you may need more memory)

Display

A video card that is recommended for the OS and a display that is supported by the OS.

Other Operating Conditions

To view the user's manuals, you need to use Adobe Acrobat Reader by Adobe Systems (the latest version recommended).

Installation

To install Universal Viewer or Hardware Configurator, download the installer from the Yokogawa website.

- 1 Turn on the PC, and start Windows. Log onto Windows as an administrator.

- 2 Double click the installer (*.exe). The installer starts. Follow the instructions on the screen to install the software.

Note

- Close all other software applications before installing this software.
- To reinstall the software, uninstall the current software first.

Hardware Configurator

- The "Countries/regions except Japan" selection dialog box appears during installation. Select the country that you will use the software in.
- The HTTP port for using the Web browser is set to 34443. If this port is already in use by another application, you will not be able to start Hardware Configurator even if you install it. In such a case, perform the corrective action on section 1.4 in SMARTDAC+ STANDARD Hardware Configurator User's Manual (IM 04L61B01-02EN).

About the User's Manuals

The user's manual is installed with the software. To view the manual, on the **Help** menu, click **Instruction Manual**. You can also access it from **Start > All Programs**. Use Adobe Acrobat Reader to view the manual. The software and manual are installed for the following languages.

Universal Viewer

| Language | Software | User's manual |
|-------------------------------|-------------------------------|---------------|
| Japanese | Japanese | Japanese |
| English | English | English |
| Chinese | Chinese | Chinese |
| Chinese (Traditional chinese) | Chinese (Traditional chinese) | English |
| French | French | |
| German | German | |
| Russian | Russian | |
| Korean | Korean | |
| Italian | Italian | |

Hardware Configurator

| Country Selected at Installation | Software | User's manual |
|----------------------------------|---|----------------------------|
| Japanese | Display language selectable: Japanese/English/ German/French/ Russian/Chinese/ Chinese (Traditional chinese)/Korean/ Italian | Japanese, English, Chinese |
| Regions except Japan | | |

Starting and Closing Universal Viewer

Starting Universal Viewer


- From the Start menu, click **All Programs - SMARTDAC+ STANDARD - Viewer**. Universal Viewer starts.

Closing Universal Viewer

- On the **File** menu, click **Exit**. Or, click the **x** button.

Specifying a File Name and Opening the Data File

- On the **File** menu, click **Open**. Or, click **Open** on the toolbar. The Open dialog box appears.
- Select the data file you want to open, and click **Open**. Or, double-click the file. The data appears in the window.

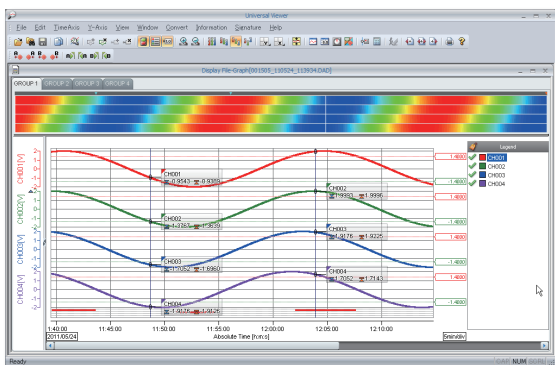


Starting and Closing Hardware Configurator

Starting Hardware Configurator

- From the **Start** menu, select **All Programs - SMARTDAC+ STANDARD - Hardware Configurator**.

The first time Hardware Configurator starts after installation, the Windows Security Alert dialog box appears. Click **Unblock**.

Hardware Configurator starts, and the following window appears.

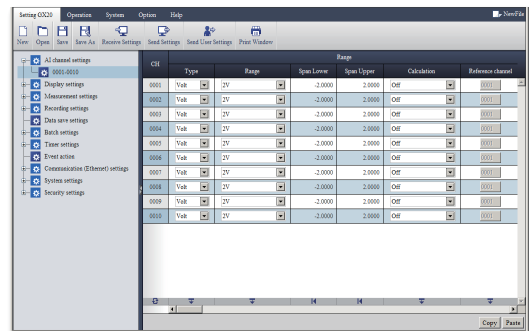

Note

- Hardware Configurator will not start if Web browser is not installed.
- The default settings are the system configuration of the GX10.

Closing Hardware Configurator

Close browser.

- Click the **Close** button; or on the menu, click **Close** or **Exit**.

Note

If you change the setup data, the changes are stored and will appear the next time you start the software.

Setup Menu Map

Depending on setting parameter values, some items may be hidden. For details, see the User's Manual (IM 04L51B01-01EN).

AI channel settings, AI (mA) channel settings

Range

| |
|---------------------------------------|
| First-CH |
| Last-CH |
| Range |
| Type |
| Range |
| Span Lower |
| Span Upper |
| Calculation |
| Reference channel |
| Scale |
| Decimal place |
| Scale Lower |
| Scale Upper |
| Unit |
| Low-cut |
| On/Off |
| Low-cut value |
| Low-cut output |
| Moving average |
| On/Off |
| Count |
| First-order lag filter ^{2 3} |
| On/Off |
| Filter coefficient |
| RJC ^{1 3} |
| Mode |
| Temperature |
| Burnout set ³ |
| Mode |
| Bias |
| Value |

Alarm

| |
|-----------------|
| First-CH |
| Last-CH |
| Level 1 |
| On/Off |
| Type |
| Value |
| Hysteresis |
| Logging |
| Output type |
| Output No. |
| Level 2 |
| On/Off |
| Level 3 |
| On/Off |
| Level 4 |
| On/Off |
| Profile channel |
| Upper |
| Reference |
| Lower |
| Alarm delay |
| Hour |
| Minute |
| Second |

Display settings

| |
|----------------------------------|
| First-CH |
| Last-CH |
| Tag |
| Characters |
| No. |
| Color |
| Color |
| Zone |
| Lower |
| Upper |
| Scale |
| Position |
| Division |
| Bar graph |
| Base position |
| Division |
| Partial |
| On/Off |
| Expand |
| Boundary |
| Color scale band |
| Band area |
| Color |
| Display position Lower |
| Display position Upper |
| Alarm point mark |
| Indicate on Scale |
| Mark kind |
| Alarm 1 color |
| Alarm 2 color |
| Alarm 3 color |
| Alarm 4 color |
| Display characters of each value |
| 0 |
| 1 |

Calibration correction

| |
|--------------------------------|
| First-CH |
| Last-CH |
| Mode |
| Mode |
| Number of set points |
| 1 |
| Linearizer input |
| Linearizer output |
| Execution of input measurement |
| : |
| 12 |
| Linearizer input |
| Linearizer output |
| Execution of input measurement |

Setting when the mode is set to Correction Coefficient on a module with an /AH option

| |
|--------------------------------|
| 1 |
| Uncorrected value |
| Instrument correction factor |
| Sensor correction factor |
| Execution of input measurement |
| : |
| 12 |
| Uncorrected value |
| Instrument correction factor |
| Sensor correction factor |
| Execution of input measurement |

- 1 Not displayed for AI (mA) channel setting.
- 2 Appears for channels of high-speed AI modules
- 3 Not displayed for 4-wire RTD/resistance type.

DI channel settings

Range

| |
|-------------------|
| First-CH |
| Last-CH |
| Range |
| Type |
| Span Lower |
| Span Upper |
| Calculation |
| Reference channel |
| Scale |
| Decimal place |
| Scale Lower |
| Scale Upper |
| Unit |

Alarm

| |
|-----------------|
| First-CH |
| Last-CH |
| Level 1 |
| On/Off |
| Type |
| Value |
| Hysteresis |
| Logging |
| Output type |
| Output No. |
| Level 2 |
| On/Off |
| Level 3 |
| On/Off |
| Level 4 |
| On/Off |
| Profile channel |
| Upper |
| Reference |
| Lower |
| Alarm delay |
| Hour |
| Minute |
| Second |

Display settings

| |
|----------------------------------|
| First-CH |
| Last-CH |
| Tag |
| Characters |
| No. |
| Color |
| Color |
| Zone |
| Lower |
| Upper |
| Scale |
| Position |
| Division* |
| Bar graph |
| Base position |
| Division* |
| Alarm point mark |
| Indicate on Scale |
| Mark kind |
| Alarm 1 color |
| Alarm 2 color |
| Alarm 3 color |
| Alarm 4 color |
| Display characters of each value |
| 0 |
| 1 |

* When the range type is set to Pulse.

Setup Menu Map

```

graph LR
    Pulse[Pulse input channel settings] --> Range1[Range]
    Pulse --> Alarm1[Alarm]
    Pulse --> Display1[Display settings]
    
    Range1 --> First-CH1[First-CH]
    Range1 --> Last-CH1[Last-CH]
    Range1 --> Range1_1[Range]
    Range1 --> Type1[Type]
    Range1 --> Range1_2[Range]
    Range1 --> Chattering[Chattering filter]
    Range1 --> Span1[Span Lower]
    Range1 --> Span1_1[Span Upper]
    Range1 --> Calculation[Calculation]
    Range1 --> Reference[Reference channel]
    Range1 --> Scale1[Scale]
    Range1 --> Decimal[Decimal place]
    Range1 --> Scale1_1[Scale Lower]
    Range1 --> Scale1_2[Scale Upper]
    Range1 --> Unit1[Unit]
    Range1 --> Moving[Moving average]
    Range1 --> OnOff1[On/Off]
    Range1 --> Count[Count]
    
    Alarm1 --> First-CH2[First-CH]
    Alarm1 --> Last-CH2[Last-CH]
    Alarm1 --> Level1[Level 1]
    Alarm1 --> OnOff2[On/Off]
    Alarm1 --> Type2[Type]
    Alarm1 --> Value[Value]
    Alarm1 --> Hysteresis[Hysteresis]
    Alarm1 --> Logging[Logging]
    Alarm1 --> Output[Output type]
    Alarm1 --> OutputNo[Output No.]
    Alarm1 --> Level2[Level 2]
    Alarm1 --> OnOff3[On/Off]
    Alarm1 --> Level3[Level 3]
    Alarm1 --> OnOff4[On/Off]
    Alarm1 --> Level4[Level 4]
    Alarm1 --> OnOff5[On/Off]
    Alarm1 --> Profile[Profile channel]
    Alarm1 --> Upper[Upper]
    Alarm1 --> Reference[Reference]
    Alarm1 --> Lower[Lower]
    Alarm1 --> Delay[Alarm delay]
    Alarm1 --> Hour[Hour]
    Alarm1 --> Minute[Minute]
    Alarm1 --> Second[Second]
    
    Display1 --> First-CH3[First-CH]
    Display1 --> Last-CH3[Last-CH]
    Display1 --> Tag1[Tag]
    Display1 --> Characters1[Characters]
    Display1 --> No1[No.]
    Display1 --> Color1[Color]
    Display1 --> Color2[Color]
    Display1 --> Zone1[Zone]
    Display1 --> Lower1[Lower]
    Display1 --> Upper1[Upper]
    Display1 --> Scale1[Scale]
    Display1 --> Position1[Position]
    Display1 --> Division1[Division]
    Display1 --> Bar[Bar graph]
    Display1 --> Base[Base position]
    Display1 --> Division2[Division]
    
    AO[AO channel settings] --> Range2[Range]
    AO --> Display2[Display settings]
    
    Range2 --> First-CH4[First-CH]
    Range2 --> Last-CH4[Last-CH]
    Range2 --> Range3[Range]
    Range2 --> Type2[Type]
    Range2 --> Range4[Range]
    Range2 --> Span2[Span Lower]
    Range2 --> Span2_1[Span Upper]
    Range2 --> Reference2[Reference channel]
    Range2 --> Channel[Channel type]
    Range2 --> ChannelNo[Channel no]
    Range2 --> Preset1[Preset value]
    Range2 --> Preset2[Preset value]
    Range2 --> Preset3[Preset action]
    Range2 --> Power[At power on]
    Range2 --> Error[On error]
    Range2 --> Stop[During stop conditions]
    
    Display2 --> First-CH5[First-CH]
    Display2 --> Last-CH5[Last-CH]
    Display2 --> Tag2[Tag]
    Display2 --> Characters2[Characters]
    Display2 --> No2[No.]
    Display2 --> Color3[Color]
    Display2 --> Color4[Color]
    Display2 --> Zone2[Zone]
    Display2 --> Lower2[Lower]
    Display2 --> Upper2[Upper]
    Display2 --> Scale2[Scale]
    Display2 --> Position2[Position]
    Display2 --> Division3[Division]
    Display2 --> Bar2[Bar graph]
    Display2 --> Base2[Base position]
    Display2 --> Division4[Division]
    
    DO[DO channel settings] --> Range3[Range]
    DO --> Display3[Display settings]
    
    Range3 --> First-CH6[First-CH]
    Range3 --> Last-CH6[Last-CH]
    Range3 --> Range4[Range]
    Range3 --> Type3[Type]
    Range3 --> Span3[Span Lower]
    Range3 --> Span3_1[Span Upper]
    Range3 --> Unit2[Unit]
    Range3 --> Action1[Action]
    Range3 --> Energize[Energize/De-energize]
    Range3 --> Action2[Action]
    Range3 --> Hold[Hold]
    Range3 --> Relay[Relay Action on ACK]
    Range3 --> Interval[Relay deactivated interval]
    
    Display3 --> First-CH7[First-CH]
    Display3 --> Last-CH7[Last-CH]
    Display3 --> Tag3[Tag]
    Display3 --> Characters3[Characters]
    Display3 --> No3[No.]
    Display3 --> Color5[Color]
    Display3 --> Color6[Color]
    Display3 --> Zone3[Zone]
    Display3 --> Lower3[Lower]
    Display3 --> Upper3[Upper]
    Display3 --> Scale3[Scale]
    Display3 --> Position3[Position]
    Display3 --> Bar3[Bar graph]
    Display3 --> Base3[Base position]
    Display3 --> Characters4[Display characters of each value]
    Display3 --> 0[0]
    Display3 --> 1[1]
  
```


Setup Menu Map

Math channel settings

Calculation expression

| |
|------------------------|
| First-CH |
| Last-CH |
| Math range |
| On/Off |
| Calculation expression |
| Decimal place |
| Span Lower |
| Span Upper |
| Unit |
| TLOG |
| Timer type |
| Timer No. |
| Sum scale |
| Reset |
| Rolling average |
| On/Off |
| Interval |
| Number of samples |
| F-Value |
| Reference temperature |
| Z-Value |
| Start temperature |
| Reset on start |

Alarm

| |
|-----------------|
| First-CH |
| Last-CH |
| Level 1 |
| On/Off |
| Type |
| Value |
| Hysteresis |
| Logging |
| Output type |
| Output No. |
| Level 2 |
| On/Off |
| Level 3 |
| On/Off |
| Level 4 |
| On/Off |
| Profile channel |
| Upper |
| Reference |
| Lower |
| Alarm delay |
| Hour |
| Minute |
| Second |

Display settings

| |
|---------------|
| First-CH |
| Last-CH |
| Tag |
| Characters |
| No. |
| Color |
| Color |
| Zone |
| Lower |
| Upper |
| Scale |
| Position |
| Division |
| Bar graph |
| Base position |
| Division |
| Partial |
| On/Off |
| Expand |
| Boundary |

Color scale band

| |
|------------------------|
| Band area |
| Color |
| Display position Lower |
| Display position Upper |
| Alarm point mark |
| Indicate on Scale |
| Mark kind |
| Alarm 1 color |
| Alarm 2 color |
| Alarm 3 color |
| Alarm 4 color |

Constant

| |
|--------------------|
| Number of constant |
| Constant |
| K001 |
| : |
| K100 |

Variable constant

| |
|-----------------|
| Constant number |
| Constant |
| W001 |
| : |
| W100 |

Math action settings

| |
|--|
| Value on Error |
| START/STOP key action |
| Value on Overflow |
| SUM, AVE |
| MAX, MIN, P-P |
| Operation when PSUM arithmetic overflows |
| OVER/ROTATE |

Logic math settings

| |
|------------------------|
| Logic math number |
| Output |
| Output type |
| Output No. |
| Calculation expression |
| Calculation expression |

Elapsed time calculation settings


Elapsed time settings

| |
|-----------------------|
| Elapsed time No. |
| Elapsed time settings |
| On/Off |
| Count unit |
| Reset on start |
| Digital display |
| Overflow action |

Action settings

| |
|---------------------|
| Reset on math reset |
|---------------------|

Setup Menu Map

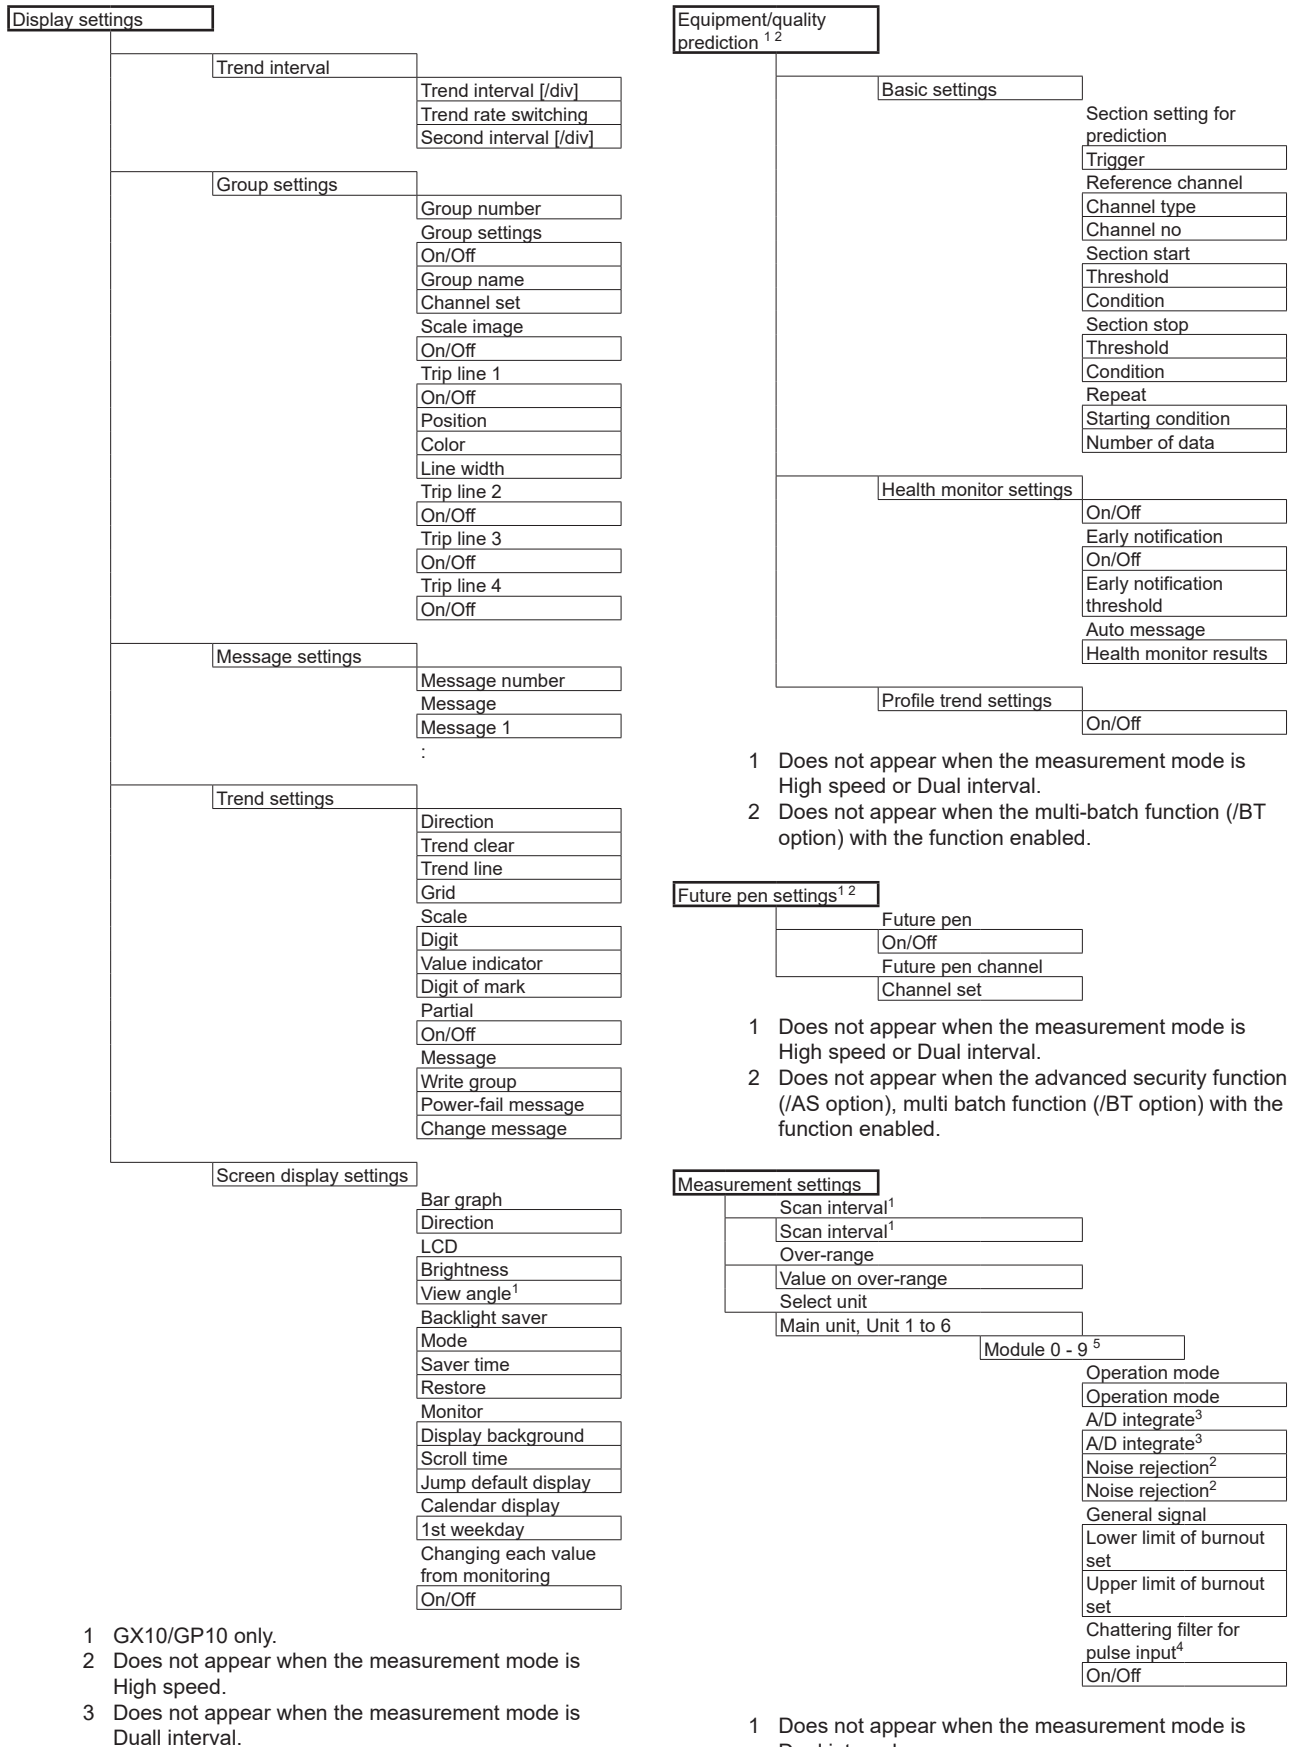


- 1 GX10/GP10 only.
- 2 Does not appear when the measurement mode is High speed.
- 3 Does not appear when the measurement mode is Dual interval.

- 1 Does not appear when the measurement mode is Dual interval.
- 2 Appears when the GX90XA type is -H0 and with PID control modules.


- 3 Does not appear with high-speed AI or PID control modules.
- 4 Pulse input module only
- 5 Does not appear with AO or DO modules.

When the measurement mode is set to dual interval

Dual interval settings

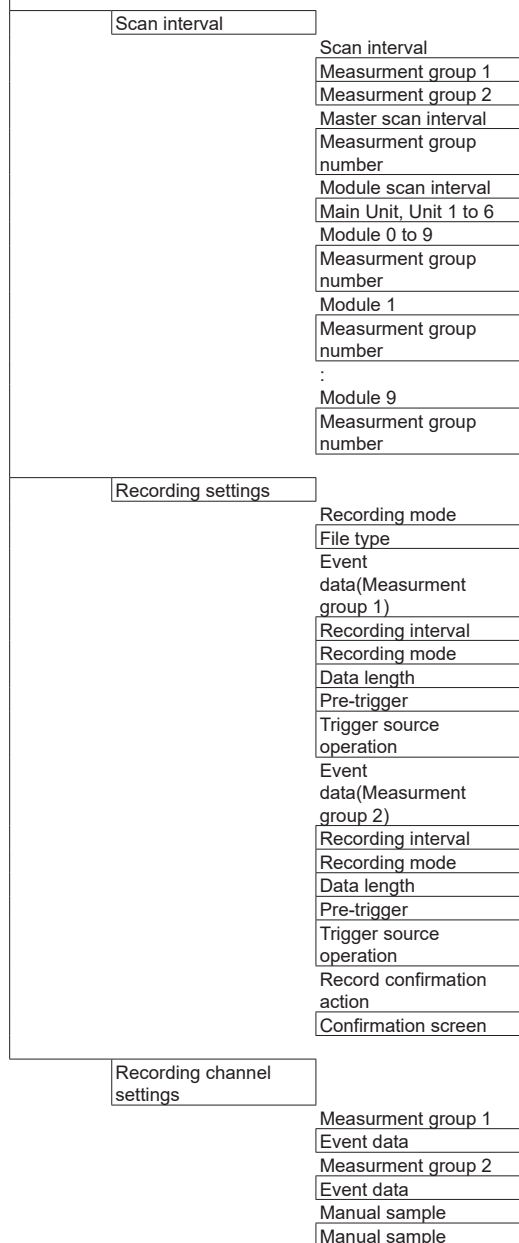


Recording settings*

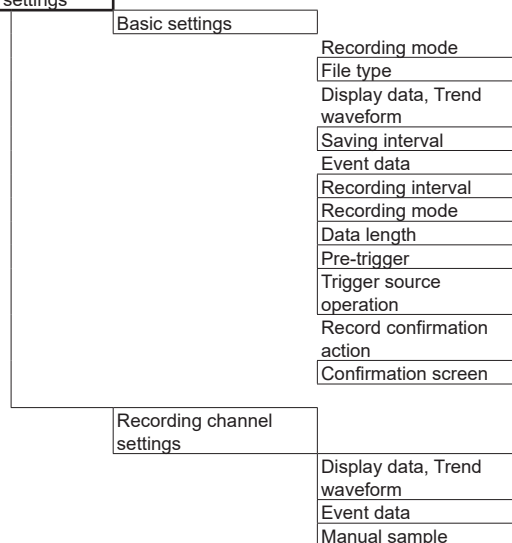


* Does not appear when the measurement mode is Dual interval.

Data save settings

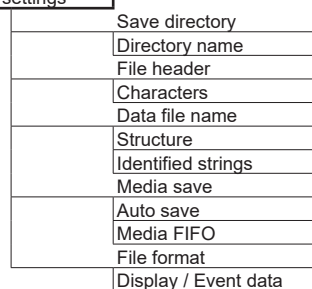


Batch settings

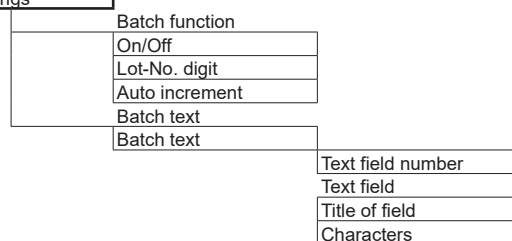

Setup Menu Map

On a GX/GP with the multi-batch function (/BT option) with the function enabled

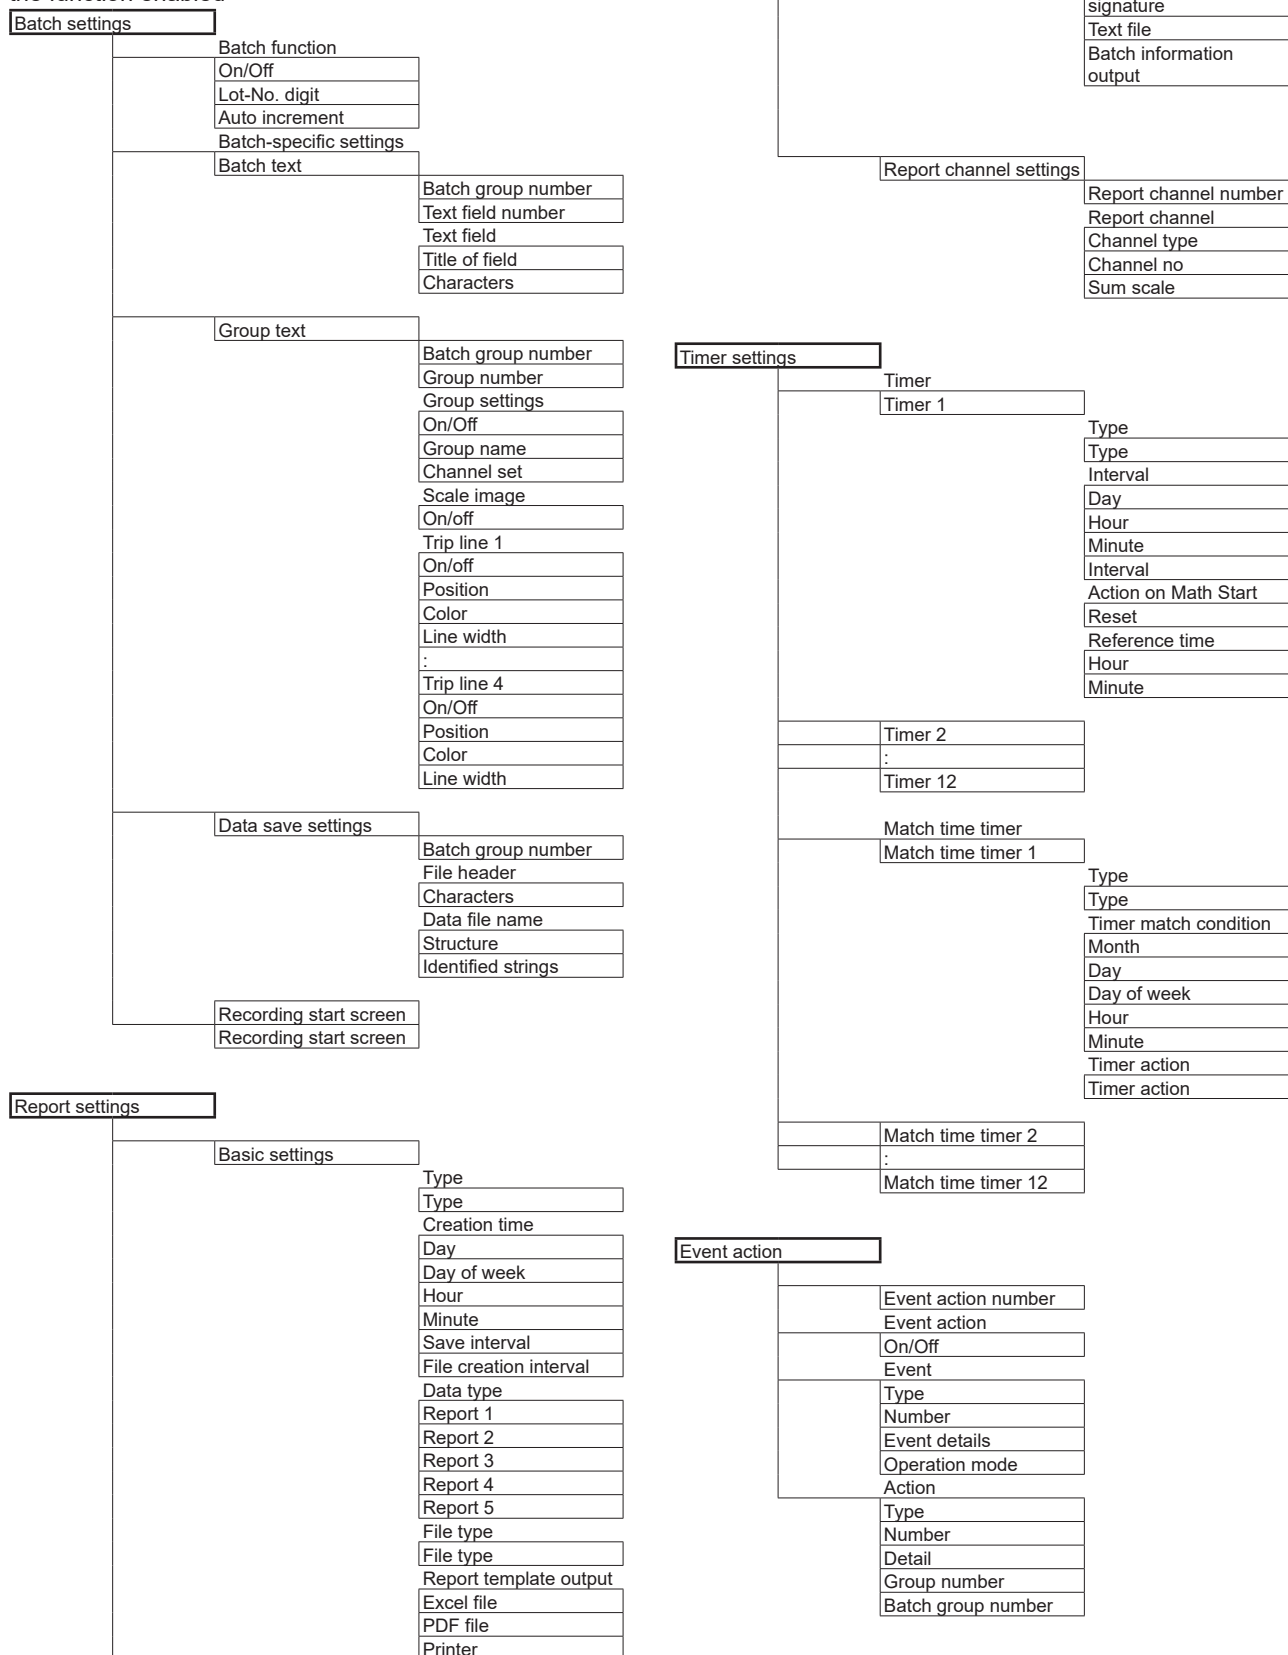

When a PID control module is installed

| Control event action | |
|----------------------|------------------------------------|
| | Control event action number |
| | DI/DO/Internal switch registration |
| | Type |
| | Number |
| | Operation/Status output |
| | Content |
| | Detail 1 |
| | Number |
| | Detail 2 |
| | Number |

Only on GX/GPs with the /AH Aerospace heat treatment

| Calibration reminder settings | |
|-------------------------------|-----------------------------------|
| | Schedule number |
| | Reminder function |
| | On/Off |
| | Due date |
| | Due date |
| | Daily reminder |
| | Re-notification cycle |
| | Notification contents |
| | Title |
| | Notification message1 |
| | Notification message2 |
| | Buzzer |
| | Display settings for date setting |
| | Calibration correction setting |

Communication channel settings

| | |
|--------------|------------------------|
| On/Off, Span | First-CH |
| | Last-CH |
| | On/Off, Span |
| | On/Off |
| | Decimal place |
| | Span Lower |
| | Span Upper |
| | Unit |
| | At power on |
| | Value at power on |
| | Preset value |
| | Preset value |
| | Watchdog timer |
| | On/Off |
| | Timer |
| | Value at timer-expired |
| Alarm | First-CH |
| | Last-CH |
| | Level 1 |
| | On/Off |
| | Type |
| | Value |
| | Hysteresis |
| | Logging |
| | Output type |
| | Output No. |
| | Level 2 |
| | On/Off |
| | Level 3 |
| | On/Off |

Level 4

| |
|-----------------|
| On/Off |
| Profile channel |
| Upper |
| Reference |
| Lower |
| Alarm delay |
| Hour |
| Minute |
| Second |

Display settings

| |
|------------------------|
| First-CH |
| Last-CH |
| Tag |
| Characters |
| No. |
| Color |
| Color |
| Zone |
| Lower |
| Upper |
| Scale |
| Position |
| Division |
| Bar graph |
| Base position |
| Division |
| Partial |
| On/Off |
| Expand |
| Boundary |
| Color scale band |
| Band area |
| Color |
| Display position Lower |
| Display position Upper |
| Alarm point mark |
| Indicate on Scale |
| Mark kind |
| Alarm 1 color |
| Alarm 2 color |
| Alarm 3 color |
| Alarm 4 color |

Calibration correction

| |
|----------------------|
| First-CH |
| Last-CH |
| On/Off |
| On/Off |
| Mode |
| Mode |
| Number of set points |
| 1 |
| Linearizer input |
| Linearizer output |
| : |
| 12 |
| Linearizer input |
| Linearizer output |

Setting when the mode is set to Correction Coefficient on a module with an /AH option

| |
|------------------------------|
| 1 |
| Uncorrected value |
| Instrument correction factor |
| Sensor correction factor |
| : |
| 12 |
| Uncorrected value |
| Instrument correction factor |
| Sensor correction factor |

Setup Menu Map

Communication (Ethernet) settings

Basic settings

| |
|----------------------------------|
| Automatic IP settings |
| Obtain IP address automatically |
| IP Address |
| IP Address |
| Subnet mask |
| Default gateway |
| Automatically DNS settings |
| Obtain DNS address automatically |
| DNS settings |
| Primary DNS server |
| Secondary DNS server |
| Domain suffix |
| Primary domain suffix |
| Secondary domain suffix |
| Host settings |
| Host name |
| Domain name |
| Host name registration |
| Host name registration |

FTP client settings

| |
|-----------------------------|
| FTP client function |
| On/Off |
| Transfer file |
| Display & Event data |
| Report |
| Manual sampled data |
| Alarm summary |
| Snap shot |
| Setting file ¹ |
| Health monitor |
| Transfer wait time |
| Display & Event data |
| Report |
| Encryption |
| Encryption |
| Verification of certificate |
| FTP connection Primary |
| FTP server name |
| Port number |
| User name |
| Password |
| Directory |
| PASV mode |
| FTP connection Secondary |
| FTP server name |
| Port number |
| User name |
| Password |
| Directory |
| PASV mode |

SMTP client settings

| |
|-----------------------------|
| SMTP client function |
| On/Off |
| Authentication |
| Authentication |
| Encryption |
| Encryption |
| Verification of certificate |
| SMTP server |
| SMTP server name |
| Port number |
| User name |
| Password |
| POP3 server |
| POP3 server name |
| Port number |
| User name |
| Password |

E-mail settings

| |
|---|
| Mail header |
| Recipient 1 |
| Recipient 2 |
| Sender |
| Subject |
| E-mail contents |
| Header |
| Include source URL |
| Alarm settings |
| Alarm notification |
| Detection |
| Channel set |
| Alarm level 1 |
| : |
| Alarm level 4 |
| Attach instantaneous data |
| Send alarm action |
| Include tag/ch in Subject |
| Report settings |
| Report notification |
| Scheduled settings |
| Scheduled notification |
| Attach instantaneous data |
| Interval (Recipient 1) |
| Ref. time hour (Recipient 1) |
| Ref. time minute (Recipient 1) |
| Interval (Recipient 2) |
| Ref. time hour (Recipient 2) |
| Ref. time minute (Recipient 2) |
| System settings |
| Memory full notification |
| Power failure notification |
| System error notification |
| Notification of user lockout ¹ |
| Health score notification |

SNTP client settings

| |
|-----------------------------|
| SNTP client function |
| On/Off |
| SNTP server |
| SNTP server name |
| Port number |
| Query action |
| Ref. time (Hour) |
| Ref. time (Minute) |
| Interval |
| Timeout |
| Time adjust on Start action |

Modbus client settings

Basic settings

| |
|------------------------|
| Modbus client function |
| On/Off |
| Communication |
| Interval |
| Recovery action |
| Wait time |
| Connection |
| Keep connection |
| Connection timeout |


Modbus server settings

| |
|------------------------|
| Server number |
| Modbus server settings |
| Server name |
| Port number |

Continued on the next page

| | | | |
|---|---|---------------------------------------|---------------------------------------|
| Command settings | Client command number | KDC client settings ¹ | KDC connection Primary |
| Command settings | Command settings | Server name | Server name |
| Type | Type | Port number | Port number |
| Server | Server | KDC access point Secondary | KDC access point Secondary |
| Unit No. | Unit No. | Server name | Server name |
| Data type | Data type | Port number | Port number |
| | | | |
| | Register | Certification key | Certification key |
| | Channel type | Host principal | Host principal |
| | First-CH | Realm name | Realm name |
| | Last-CH | Password | Password |
| | | Encryption | Encryption |
| WT connection client settings | | Cross realm Authentication | Cross realm Authentication |
| Basic settings | WT connection client function | On/Off | On/Off |
| | On/Off | Trusted domain | Trusted domain |
| | Communication | Realm name | Realm name |
| | Interval | Server name | Server name |
| | Recovery action | Port number | Port number |
| | Wait time | | |
| WT server settings | | Server settings | |
| Server number | Server number | Sever function | |
| WT server settings | WT server settings | Keep alive function | Keep alive function |
| On/Off | On/Off | On/Off | On/Off |
| Server name | Server name | Timeout function | Timeout function |
| Model name | Model name | On/Off | On/Off |
| | | Timeout (minute) | Timeout (minute) |
| WT data allocation settings | | FTP server | FTP server |
| Allocation No | Allocation No | Output Directory Format | Output Directory Format |
| WT data allocation setting | WT data allocation setting | Modbus server | Modbus server |
| On/Off | On/Off | Modbus delay response | Modbus delay response |
| Server No | Server No | | |
| Data group name | Data group name | Allowed Modbus clients | |
| Data name | Data name | Modbus client connect limits function | Modbus client connect limits function |
| Exponential scaling | Exponential scaling | On/Off | On/Off |
| Communication channel | Communication channel | 1 | 1 |
| | | On/Off | On/Off |
| | | IP Address | IP Address |
| | | | : |
| | | 10 | 10 |
| SLMP client settings ⁴ | | On/Off | On/Off |
| Basic settings | SLMP client function | IP Address | IP Address |
| | On/Off | | |
| | Data code | Server list | |
| | Data code | FTP | FTP |
| | Communication | On/Off | On/Off |
| | Interval | Encryption | Encryption |
| | Connection | Port number | Port number |
| | Communication timeout | HTTP | HTTP |
| | Recovery action | On/Off | On/Off |
| | Recovery time | Encryption | Encryption |
| | | Port number | Port number |
| SLMP server settings | | SNTP | SNTP |
| Server number | Server number | On/Off | On/Off |
| SLMP server settings | SLMP server settings | Port number | Port number |
| Server name | Server name | MODBUS | MODBUS |
| Port number | Port number | On/Off | On/Off |
| | | Port number | Port number |
| Command settings | Client commnad number | GENE | GENE |
| Commnad settings | Commnad settings | On/Off | On/Off |
| Type | Type | Port number | Port number |
| Server | Server | EtherNet/IP ³ | EtherNet/IP ³ |
| Request destination network No. | Request destination network No. | On/Off | On/Off |
| Request destination station No. | Request destination station No. | DARWIN | DARWIN |
| Request destination unit IO number | Request destination unit IO number | On/Off | On/Off |
| Request destination multidrop station No. | Request destination multidrop station No. | Channel conversion | Channel conversion |
| Device code | Device code | OPC-UA ⁵ | OPC-UA ⁵ |
| First device number | First device number | On/Off | On/Off |
| Data type | Data type | Port number | Port number |
| Channel type | Channel type | | |
| First-CH | First-CH | | |
| Last-CH | Last-CH | | |

Setup Menu Map

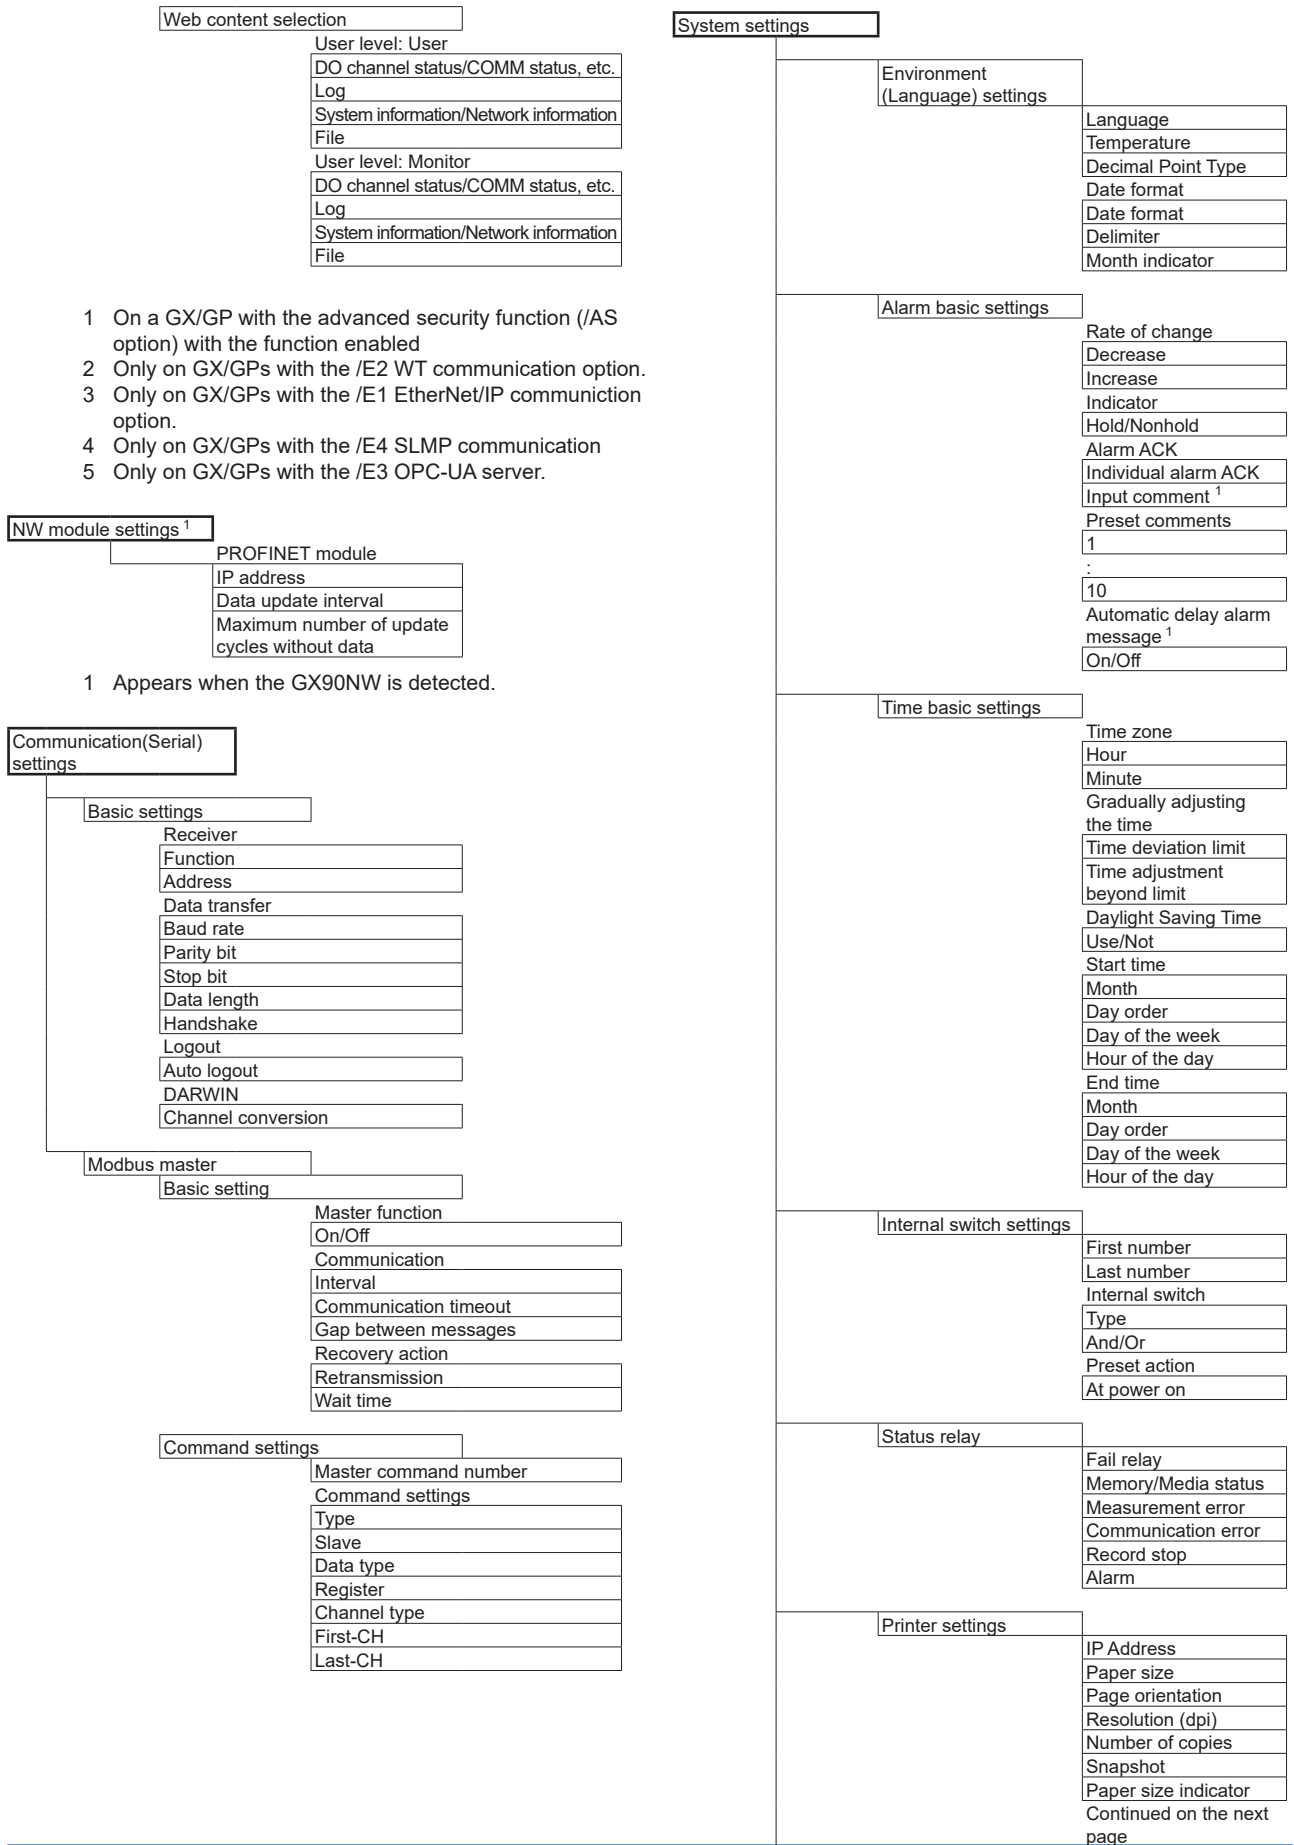

| | |
|------------------|---|
| Sound, LED | Sound |
| | Touch |
| | Warning |
| | LED |
| | MENU key LED |
| Instruments tag | Instruments tag |
| | Instrument tag No. |
| Setting file | Setting file comment |
| | Configuration change comment ¹ |
| | Input comment |
| | Preset comments ¹ |
| | 1 |
| | : |
| | 10 |
| USB input device | USB input device |

1 On a GX/GP with the advanced security function (/AS option) with the function enabled.

Security settings

| | |
|----------------|--|
| Basic settings | Security function |
| | Touch operation |
| | Communication |
| | Logout |
| | Auto logout |
| | Operation without Login |
| | Password management (Kerberos authentication) ¹ |
| | On/Off |
| | Root user password |
| | Password retry ¹ |
| | Password retry |
| | User ID ¹ |
| | On/Off |
| | Password policy ¹ |
| | Minimum character length |
| | Upper case |
| | Lower case |
| | Numeric character |
| | Symbol |
| | Number of previous passwords |
| | Advance notice of expiry date |
| | Notice |
| | Admin/User/Sign in property ¹ |
| | setting |
| | Changing values from comm command ^{1, 5} |
| | Communication channel |
| User settings | User number |
| | User settings |
| | User level |
| | Mode |
| | User name |
| | User ID ¹ |
| | Initialize password |
| | Password expiration ¹ |

| |
|--|
| Admin property ^{1, 4} |
| Admin Authority number ^{1, 4} |
| User property |
| Authority number |
| Sign in property ¹ |
| Authority of signature ¹ |

Admin property¹

| |
|------------------------|
| Admin Authority number |
| Security settings |
| Basic settings |
| User settings |
| Admin property |
| User property |
| Sign in settings |
| Sign in property |
| Operation |
| Initialize |
| Reconfiguration |
| Certificate |
| Update |

Authority of user


| |
|-------------------------------------|
| Authority number |
| Authority of user |
| Record |
| Math |
| Data save |
| Message |
| Batch |
| Alarm ACK |
| Communication |
| Touch operation |
| Time set |
| Setting operation |
| Calibration correction ¹ |
| External media |
| System operation |
| Output operation |
| Remote/Local operation ² |
| Control operation ² |
| Tuning operation ² |
| SP operation ² |
| Program operation ² |

Operation Lock

| |
|-------------------------------------|
| Operation Lock function |
| Password |
| Limitations |
| Record |
| Math |
| Data save |
| Message |
| Batch |
| Alarm ACK |
| Communication |
| Touch operation |
| Time set |
| Setting operation |
| Calibration settings ¹ |
| External media |
| System operation |
| Output operation |
| Remote/Local operation ² |
| Control operation ² |
| Tuning operation ² |
| SP operation ² |
| Program operation ³ |

Continued on the next page

Setup Menu Map

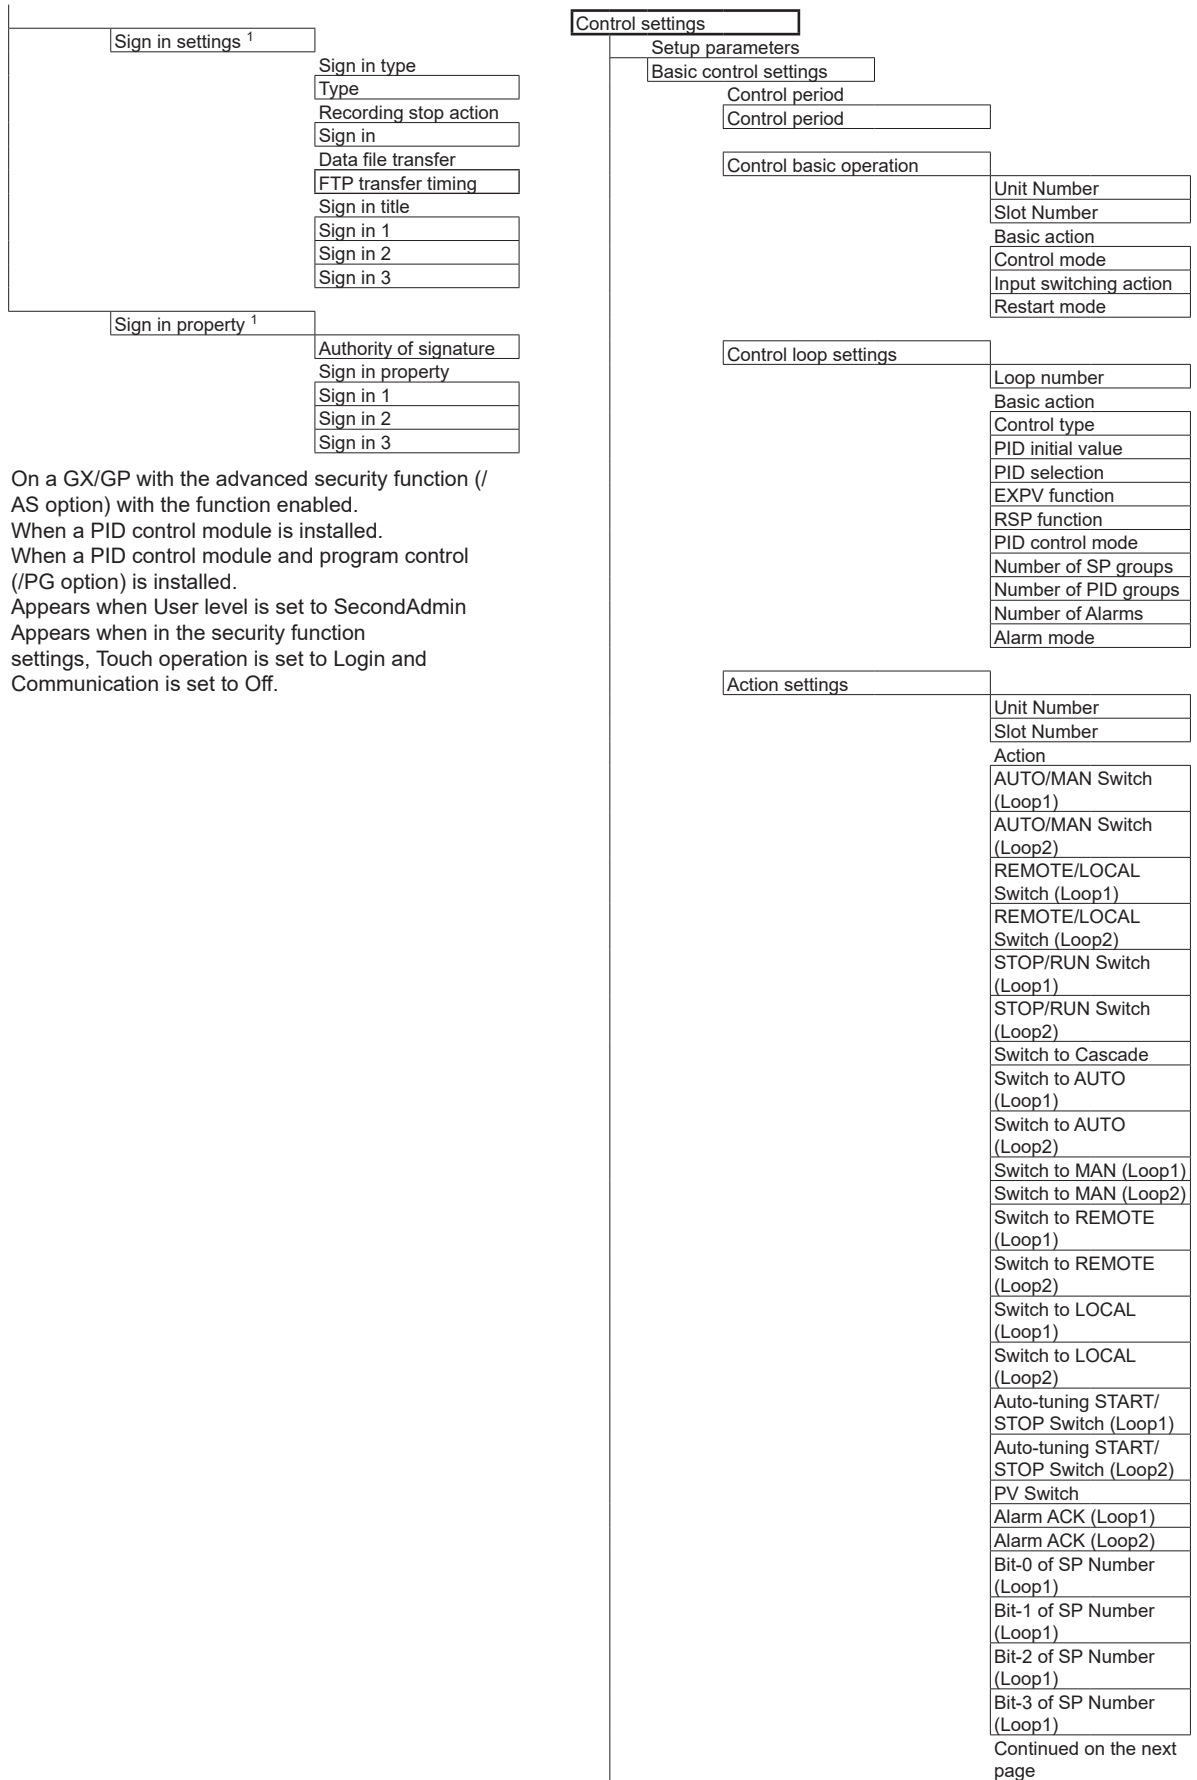


- 1 On a GX/GP with the advanced security function (/AS option) with the function enabled.
- 2 When a PID control module is installed.
- 3 When a PID control module and program control (/PG option) is installed.
- 4 Appears when User level is set to SecondAdmin
- 5 Appears when in the security function settings, Touch operation is set to Login and Communication is set to Off.




| | | | | |
|--|--------------------------------|--|---|------------------------------------|
| | Bit-0 of SP Number (Loop2) | | Calibration correction | Unit Number |
| | Bit-1 of SP Number (Loop2) | | | Slot Number |
| | Bit-2 of SP Number (Loop2) | | | AI number |
| | Bit-3 of SP Number (Loop2) | | | Mode |
| | Bit-0 of PID Number (Loop1) | | | Mode * |
| | Bit-1 of PID Number (Loop1) | | | Number of set points |
| | Bit-2 of PID Number (Loop1) | | | 1 |
| | Bit-3 of PID Number (Loop1) | | | Linearizer input |
| | Bit-0 of PID Number (Loop2) | | | Linearizer output |
| | Bit-1 of PID Number (Loop2) | | | : |
| | Bit-2 of PID Number (Loop2) | | | 12 |
| | Bit-3 of PID Number (Loop2) | | | Linearizer input |
| | | | | Linearizer output |
| | | | * Setting when the mode is set to Correction Coefficient on a module with an /AH option | |
| | | | | 1 |
| | | | | Uncorrected value |
| | | | | Instrument correction factor |
| | | | | Sensor correction factor |
| | | | | |
| | | | | Execution of the input measurement |
| | | | | : |
| | | | | 12 |
| | | | | Uncorrected value |
| | | | | Instrument correction factor |
| | | | | Sensor correction factor |
| | | | | |
| | | | | Execution of the input measurement |
| | | | | |
| | | | Output settings | |
| | | | Re-Trans | |
| | | | | Unit Number |
| | | | | Slot Number |
| | | | | AO number |
| | | | | Re-Trans |
| | | | | On/Off |
| | | | | Type |
| | | | | Minimum value of input scale |
| | | | | Maximum value of input scale |
| | | | | |
| | | | Split computation | |
| | | | | Unit Number |
| | | | | Slot Number |
| | | | | AO number |
| | | | | Mode |
| | | | | On/Off |
| | | | | |
| | | | | Output 0% segmental point |
| | | | | Output 100% segmental point |
| | | | | |
| | | | Output type | |
| | | | | Unit Number |
| | | | | Slot Number |
| | | | | AO number |
| | | | | Output type |
| | | | | Type |
| | | | | Cycle time |
| | | | | Current output range |
| | | | | Continued on the next page |

68

Continued on the next page

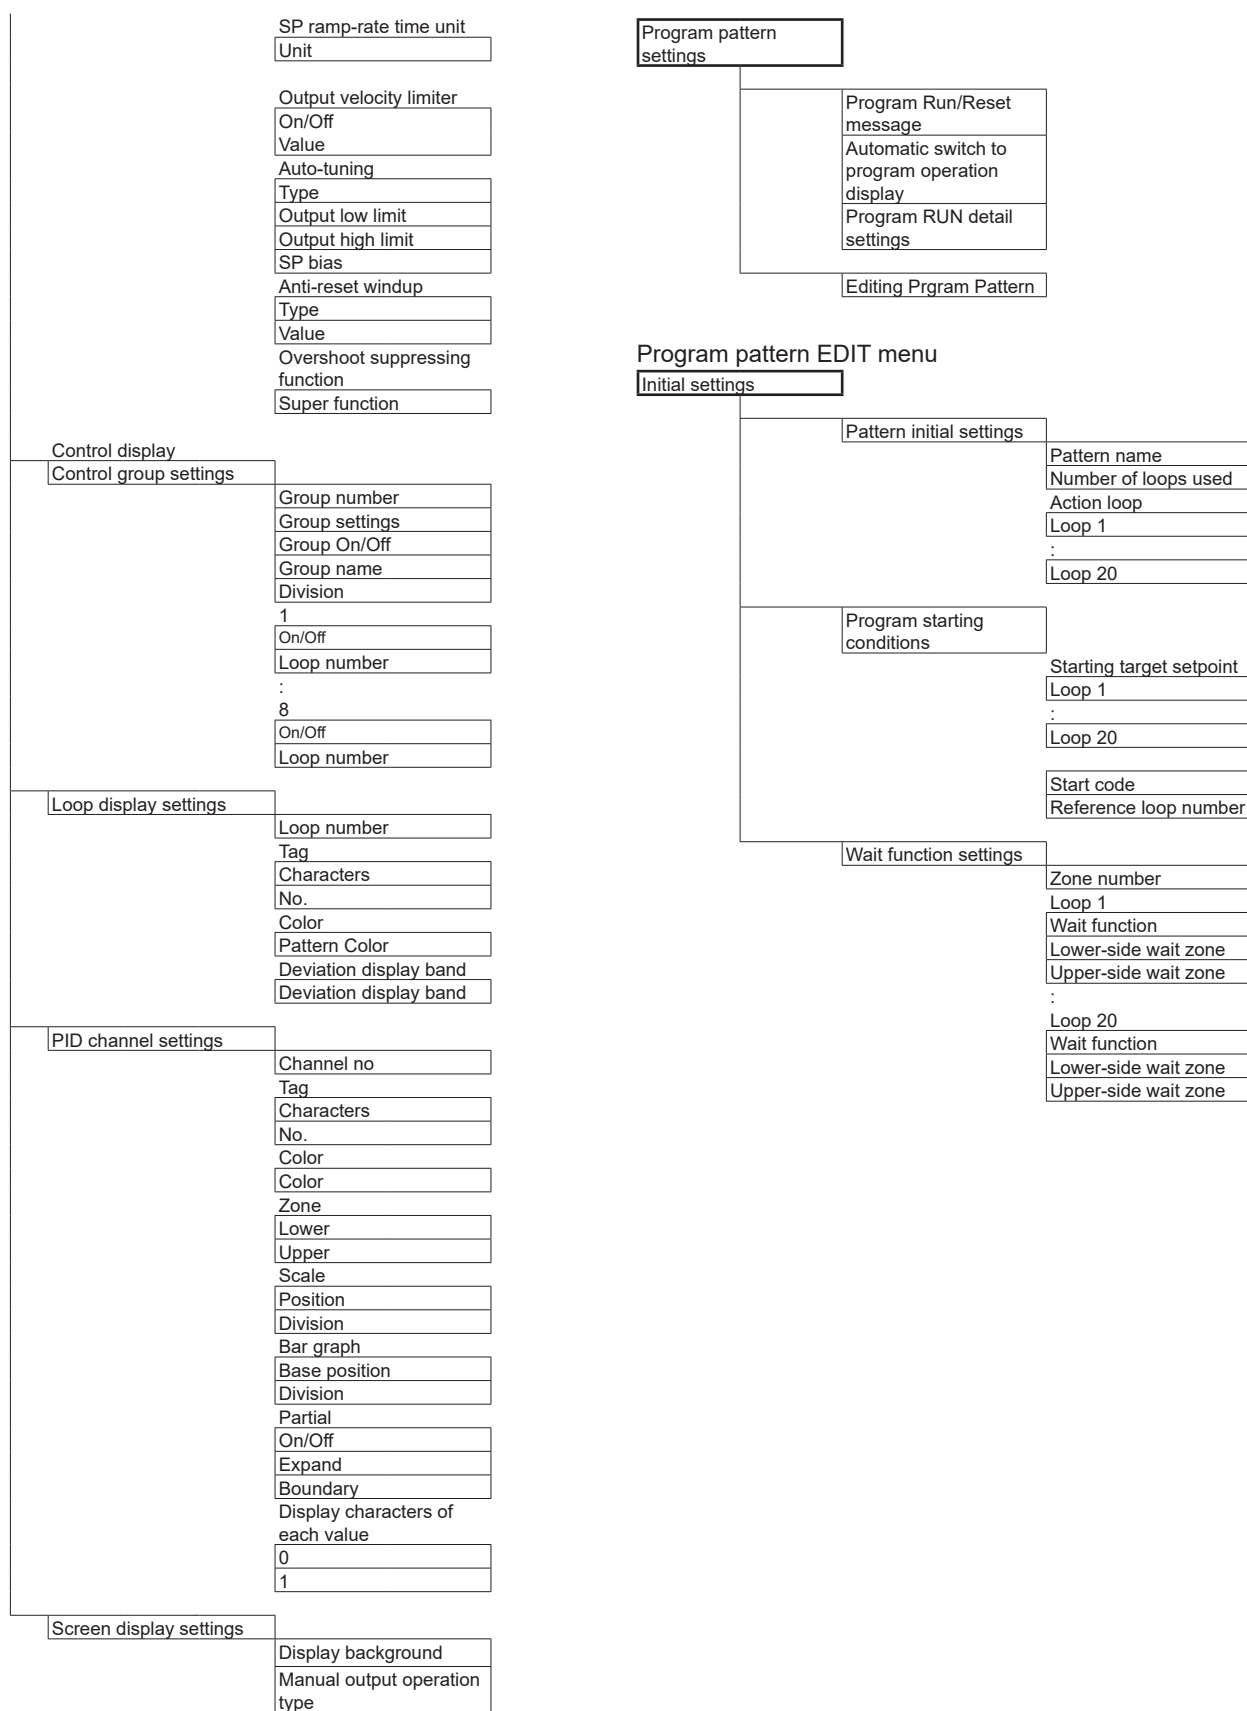

Setup Menu Map

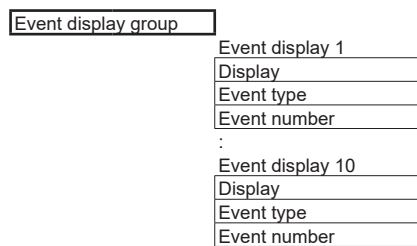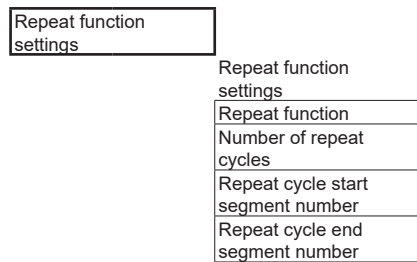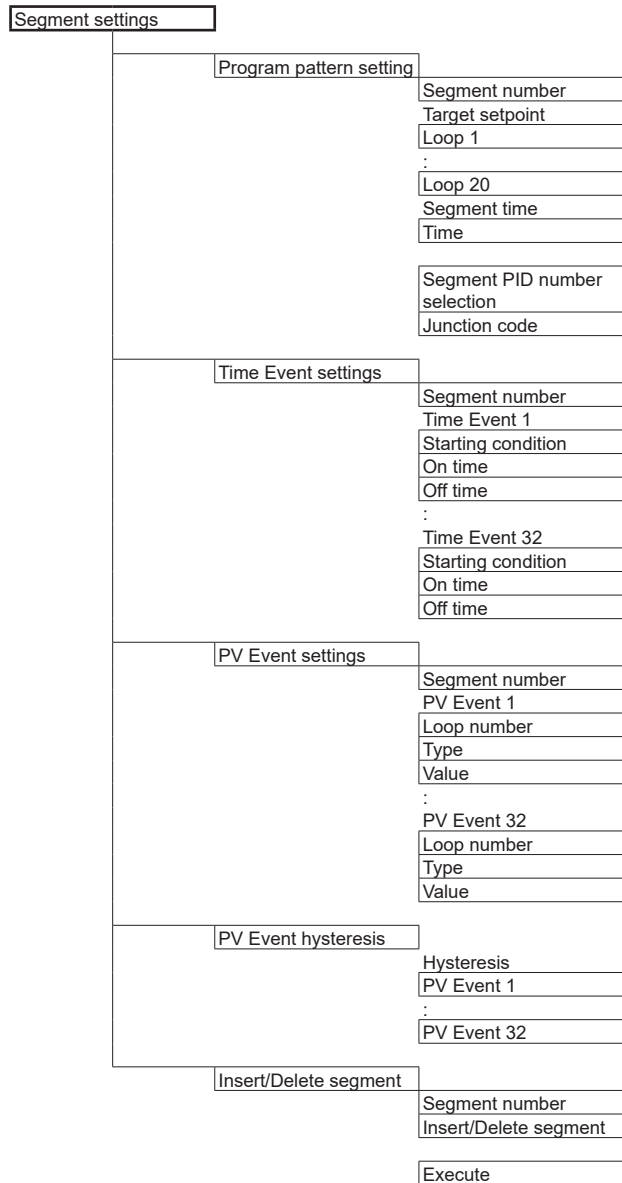

Blank



YOKOGAWA ELECTRIC CORPORATION

Headquarters

9-32, Nakacho, 2-chome, Musashino-shi, Tokyo, 180-8750 JAPAN
Phone : 81-422-52-5555

Branch Sales Offices

Osaka, Nagoya, Kurashiki, Hiroshima, Fukuoka, Kitakyusyu

YOKOGAWA CORPORATION OF AMERICA

Head Office

12530 West Airport Blvd, Sugar Land, Texas 77478, USA
Phone : 1-281-340-3800 Fax : 1-281-340-3838

Georgia Office

2 Dart Road, Newnan, Georgia 30265, USA
Phone : 1-800-888-6400 Fax : 1-770-254-0928

YOKOGAWA AMERICA DO SUL LTDA.

Alameda Xingu 850 Barueri CEP 06455-030-Barueri-SP/ BRAZIL
Phone : 55-11-3513-1300 Fax : 55-11-5681-2400

YOKOGAWA EUROPE SOLUTIONS B. V.

Euroweg 2, 3825 HD Amersfoort, THE NETHERLANDS
Phone : 31-88-4641000 Fax : 31-88-4641111

YOKOGAWA ELECTRIC CIS LTD.

1, Samarskaya street, business center Novion, Moscow, Russia, 129110, RUSSIA
Phone : 7-495-737-7868 Fax : 7-495-737-7869

YOKOGAWA CHINA CO., LTD.

Room 1801, Tower B, THE PLACE, No.100 Zunyi Road, Changning District,
Shanghai, CHINA
Phone : 86-21-62396262 Fax : 86-21-54051011

YOKOGAWA ELECTRIC KOREA CO., LTD.

(Yokogawa B/D, Yangpyeong-dong 4-Ga), 21, Seonyu-ro 45-gil, Yeongdeungpo-gu,
Seoul, 07209, KOREA
Phone : 82-2-2628-6000 Fax : 82-2-2628-6400

YOKOGAWA ENGINEERING ASIA PTE. LTD.

5 Bedok South Road, Singapore 469270, SINGAPORE
Phone : 65-6241-9933 Fax : 65-6444-6252

YOKOGAWA INDIA LTD.

Plot No.96, Electronic City Complex, Hosur Road, Bangalore - 560 100, INDIA
Phone : 91-80-4158-6000 Fax : 91-80-2852-1442

YOKOGAWA AUSTRALIA PTY. LTD.

Level 3, 66 Waterloo Road, Macquarie Park NSW 2113, AUSTRALIA
Phone : 61-2-8870-1100 Fax : 61-2-8870-1111

YOKOGAWA MIDDLE EAST & AFRICA B.S.C.(C)

P.O. Box 10070, Manama, Building 577, Road 2516, Busaiteen 225, Muharraq,
Kingdom of BAHRAIN
Phone : 973-17358100 Fax : 973-17336100