

Model GX10/GX20/GP10/GP20

**Advanced Security Function (/AS)
User's Manual**

Introduction

Thank you for purchasing the SMARTDAC+ Series GX10/GX20/GP10/GP20 (hereafter referred to as the GX or GP).

This manual explains how to use the Advanced Security Function (/AS option) of the GX/GP. Please use this manual in conjunction with the standard user's manual (IM 04L51B01-01EN (GX/GP).

Although the display of GX20 is used in this manual, GX10/GP10/GP20 can be operated similarly.

To ensure correct use, please read this manual thoroughly before beginning operation.

PID control modules and program control function (/PG option) cannot be used when the advanced security function (/AS option) is enabled.

To ensure correct use, please read this manual thoroughly before beginning operation. The following manuals are provided for the GX/GP.

• Paper Manuals

Manual Title	Manual No.	Description
Model GX10/GX20/GP10/GP20 Paperless Recorder First Step Guide	IM 04L51B01-02EN	Explains the basic operations of the GX/GP.

• Downloadable Electronic Manuals

You can download the latest manuals from the following website.

<https://www.yokogawa.com/lp/smardtacplus/>

Manual Title	Manual No.	Description
Model GX10/GX20/GP10/GP20 Paperless Recorder First Step Guide	IM 04L51B01-02EN	This is the electronic version of the paper manual.
Model GX10/GX20/GP10/GP20 Paperless Recorder User's Manual	IM 04L51B01-01EN	Describes how to use the GX/GP. The communication control commands and some of the options are excluded.
Model GX10/GX20/GP10/GP20/GM10 Paperless Recorder Communication Command User's Manual	IM 04L51B01-17EN	Describes how to use command control communication functions.
SMARTDAC+ Standard Universal Viewer User's Manual	IM 04L61B01-01EN	Describes how to use Universal Viewer, which is a software that displays GX/GP measurement data files.
SMARTDAC+ Standard Hardware Configurator User's Manual	IM 04L61B01-02EN	Describes how to use the PC software for creating setting parameter for various GX/GP functions.
Model GX10/GX20/GP10/GP20/GM10 Multi-batch Function (/BT) User's Manual	IM 04L51B01-03EN	Describes how to use the multi-batch function (/BT option).
Model GX10/GX20/GP10/GP20 Advanced Security Function (/AS) User's Manual	IM 04L51B01-05EN	Describes how to use the advanced security function (/AS option).
Model GX10/GX20/GP10/GP20 Log Scale (/LG1) User's Manual	IM 04L51B01-06EN	Describes how to use the log scale (/LG option).
Model GX10/GX20/GP10/GP20 EtherNet/IP (/E1) Communication User's Manual	IM 04L51B01-18EN	Describes how to use the communication functions through the EtherNet/IP (/E1 option).
Model GX10/GX20/GP10/GP20 WT Communication (/E2) User's Manual	IM 04L51B01-19EN	Describes how to use WT communication (/E2 option).
Model GX10/GX20/GP10/GP20/GM10 OPC-UA Server (/E3) User's Manual	IM 04L51B01-20EN	Describes how to use the OPC-UA server function (/E3 option).
Model GX10/GX20/GP10/GP20/GM10 SLMP Communication (/E4) User's Manual	IM 04L51B01-21EN	Describes how to use SLMP communication function (/E4 option).
Model GX10/GX20/GP10/GP20/GM10/ GX90NW PROFINET Communication User's Manual	IM 04L51B01-22EN	Describes how to use PROFINET communication.
Model GX10/GX20/GP10/GP20/GM10 Loop Control Function, Program Control Function (/PG Option) User's Manual	IM 04L51B01-31EN	Describes how to use Loop control function, program control function (/PG Option).
DXA170 DAQStudio	IM 04L41B01-62EN	Describes how to create custom displays (/CG option).

Notes

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument's performance and functions.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA dealer.
- Copying or reproducing all or any part of the contents of this manual without the permission of YOKOGAWA is strictly prohibited.

QR Code

The product has a QR Code pasted for efficient plant maintenance work and asset information management.

It enables confirming the specifications of purchased products and user's manuals.

For more details, please refer to the following URL.

<https://www.yokogawa.com/qr-code>

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Trademarks

- SMARTDAC+ is registered trademark or trademark of Yokogawa Electric Corporation.
- Microsoft, MS, Microsoft Edge and Windows are registered trademarks of Microsoft Corporation in the United States.
- Adobe and Acrobat are registered trademarks or trademarks of Adobe Systems Incorporated.
- Kerberos is a trademark of Massachusetts Institute of Technology (MIT).
- RC4 is a registered trademark of RSA Security Inc. in the United States and/or other countries.
- Google Chrome is registered trademark of Google LLC.
- Company and product names that appear in this manual are registered trademarks or trademarks of their respective holders.
- The company and product names used in this manual are not accompanied by the registered trademark or trademark symbols (® and ™).

Using Open Source Software

This product uses open source software.


For details on using open source software, see Regarding the Downloading and Installing for the Software, Manuals and Labels (IM 04L61B01-11EN).

Revisions






May 2014	1st Edition	December 2014	2nd Edition	December 2015	3rd Edition
June 2017	4th Edition	June 2018	5th Edition	December 2019	6th Edition
May 2020	7th Edition	April 2021	8th Edition	May 2022	9th Edition
September 2022	10th Edition	May 2023	11th Edition	October 2023	12th Edition
September 2024	13th Edition	September 2025	14th Edition		

Conventions Used in This Manual

Unit	
K	Denotes 1024. Example: 768K (file size)
k	Denotes 1000.

Markings	
 CAUTION	<i>Improper handling or use can lead to injury to the user or damage to the instrument.</i> This symbol appears on the instrument to indicate that the user must refer to the user's manual for special instructions. The same symbol appears in the corresponding place in the user's manual to identify those instructions. In the manual, the symbol is used in conjunction with the word "WARNING" or "CAUTION."
WARNING	Calls attention to actions or conditions that could cause serious or fatal injury to the user, and precautions that can be taken to prevent such occurrences.
CAUTION	Calls attention to actions or conditions that could cause light injury to the user or cause damage to the instrument or user's data, and precautions that can be taken to prevent such occurrences.
<i>Note</i>	Calls attention to information that is important for the proper operation of the instrument.

Reference Item	
▶	Reference to related operation or explanation is indicated after this mark. Example: ▶ section 4.1

Conventions Used in the Procedural Explanations	
Bold characters	Denotes key or character strings that appear on the screen. Example: Volt
	Indicates the character types that can be used.  uppercase alphabet,  lowercase alphabet,  symbol,  numbers
Procedure	Carry out the procedure according to the step numbers. All procedures are written with inexperienced users in mind; depending on the operation, not all steps need to be taken. Explanation gives information such as limitations related the procedure.
Explanation	
Path	Indicates the setup screen and explains the settings.
Description	

Applicable Recorders

The contents of this manual apply to the GX/GP with the following release number (see the STYLE S number) and later and style number (see the STYLE H number) and later .

Model	Release Number	Style Number
GX10	5	5
GP10		
GX20		
GP20		

What This Manual Explains

This manual primarily explains how to use the login, audit trail, and signature functions of the advanced security function. For details on how to use other functions, see also the User's Manual (IM04L51B01-01EN).

For details on the communication functions, see the Communication Command User's Manual (IM04L51B01-17EN).

The GX20/GP20 standard type and large memory type are distinguished using the following notations.

- Standard type: GX20-1/GP20-1
- Large memory type: GX20-2/GP20-2

The following terms are used for references to other manuals:

Notation	Description
User's Manual	Model GX10/GX20/GP10/GP20 Paperless Recorder User's Manual Refers to the IM 04L51B01-01EN.
First Step Guide	Model GX10/GX20/GP10/GP20 Paperless Recorder First Step Guide Refers to the IM 04L51B01-02EN.
Multi-batch Function Manual	Model GX10/GX20/GP10/GP20/GM10 Multi-batch Function (/BT) User's Manual Refers to the IM 04L51B01-03EN.
Communication Command Manual	Model GX10/GX20/GP10/GP20 Paperless Recorder Communication Command User's Manual Refers to the IM 04L51B01-17EN.
Universal Viewer Manual	SMARTDAC+ STANDARD Universal Viewer User's Manual Refers to the IM 04L61B01-01EN.

Revision History

Edition	Product	Description
1	Release number 2 (Version 2.0x) Style number 1	New edition
2	Release number 2 (Version 2.02) Style number 1	Calibration correction has been added to user privileges.
3	Release number 3 (Version 3.01) Style number 1	Support for Multi-batch function (/BT) and Aerospace heat treatment (/AH) has been added. Event log contents has been added.
4	Release number 4 (Version 4.01) Style number 2	Support for release number 4.
5	Release number 4 (Version 4.02) Style number 2	Support for release number 4 (Version 4.02). Support for calibration correction of communication channels.
6	Release number 4 (Version 4.07) Style number 2	Support for release number 4 (Version 4.07). Support for data integrity.
7	Release number 4 (Version 4.08) Style number 3, 4	Support for style up (H: 3 (GX10/GX20/GP10), H: 4 (GP20)).
8	Release number 4 (Version 4.09) Style number 3, 4	Support for release number 4 (Version 4.09). Added number of previous passwords to password policy. Change of user property (Time set).

Continued on next page

Edition	Product	Description
9	Release number 5	Support for release number 5.
	Style number 3, 4	Added equipment/quality prediction.
10	Release number 5 (Version 5.02)	Support for release number 5 (Version 5.02).
	Style number 3, 4	Support for network module (PROFINET communication).
11	Release number 5 (Version 5.02)	Support for style up (H: 5 (GX10/GP10)).
	Style number 5 (GX10/GP10), 4 (GP20), 3 (GX20)	
12	Release number 5 (Version 5.03)	Support for release number 5 (Version 5.03).
	Style number 5	Support for cross realm authentication function.
13	Release number 5 (Version 5.04)	Support for release number 5 (Version 5.04).
	Style number 5	Supports expansion of calculation functions.
14	Release number 5 (Version 5.06)	Support for release number 5 (Version 5.06).
	Style number 5	Added automatic delay alarm message. Support for Windows Server 2025.

Contents

1

2

3

App

Introduction.....	i
Conventions Used in This Manual.....	iii
Applicable Recorders	iv
What This Manual Explains	iv
Revision History.....	iv

Chapter 1 Explanation of the Advanced Security Function

1.1	Using the Advanced Security Function	1-1
1.1.1	Operation Overview	1-1
1.1.2	GX/GP Operation Range	1-2
1.1.3	PC Software	1-2
1.1.4	Terminology.....	1-3
1.2	Recording and Saving Data	1-4
1.2.1	Data Types.....	1-4
1.2.2	Data Recording and Storage Flowchart.....	1-5
1.2.3	Display, Event, and Setting File Encryption	1-5
1.2.4	Display and Event Data Recording Methods	1-6
1.2.5	Manual Sampled Data.....	1-7
1.2.6	Report Data (/MT option)	1-7
1.2.7	Directories and File Saving on External Storage Medium.....	1-8
1.2.8	Saving Data to External Storage Medium	1-10
1.2.9	Saving Data through an Ethernet Network.....	1-16
1.3	Login Function.....	1-17
1.3.1	Logging In and Out Using Touch Operation	1-17
1.3.2	Logging In and Out through Communication	1-17
1.3.3	User Levels	1-18
1.3.4	Login Restrictions.....	1-23
1.3.5	How the GX/GP Operates When the Login Function Is Not Used	1-23
1.4	Password Management	1-24
1.4.1	Cross Realm Authentication Function (Release number 5 (Version 5.03) and later).....	1-25
1.5	Audit Trail Function	1-26
1.5.1	Information That Is Saved to Measurement Data Files.....	1-26
1.5.2	Event Log.....	1-27
1.5.3	Login Information	1-27
1.5.4	Event Log and Setting File When Recording Is Not in Progress.....	1-28
1.5.5	Event Log and Setting File When Recording Is in Progress	1-29
1.5.6	SET0 Directory Operations	1-32
1.5.7	Load the Profile Trend (PRF0 Directory Operations) (release number 5 and later) (with communication channel (/MC option))	1-33
1.6	Signature Function	1-34
1.6.1	Signable Files.....	1-34
1.6.2	Signature Privileges and Signatures	1-34
1.6.3	Signing from the GX/GP.....	1-35
1.6.4	Signing Using the Standard PC Software (Universal Viewer).....	1-35
1.7	Unique Specifications of GX/GP with Advanced Security	1-36
1.7.1	Functions That Differ from Those of GX/GPs without Advanced Security or GX/GPs Whose Advanced Security Is Disabled	1-36
1.7.2	Functions That Differ from Those of the DX1000/DX1000N/DX2000	1-37
1.8	Advanced Security Limitations	1-38

Chapter 2 Logging In, Logging Out, and Signing

2.1	Enabling/Disabling the Advanced Security Function.....	2-1
2.2	Registering Users and Setting the Signature Method.....	2-3
2.2.1	Configuring the Security Function, Logout, Password Management Function, Password policy, Etc.	2-3
2.2.2	Registering Users.....	2-8
2.2.3	Setting Administrator Properties (Release number 4 (Version 4.07) and later)	2-10
2.2.4	Setting User Properties	2-12
2.2.5	Configuring the Sign in Settings.....	2-14
2.2.6	Setting Signature Restrictions.....	2-16
2.2.7	Configuring the Comment Input Function for Setting Changes.....	2-16
2.2.8	Activating Modules (for module swapping)	2-17

Contents

2.2.9	Configuring the Alarm ACK Comments (Release number 4 (Version 4.07) and later).....	2-18
2.2.10	Configuring the Automatic Delay Alarm Message Fundtion (Release number 5 (Version 5.06) and later)	2-18
2.3	Logging In and Out.....	2-20
2.3.1	Logging In	2-20
2.3.2	Logging Out.....	2-25
2.4	Signing Display and Event Data.....	2-26
2.4.1	Signing Process	2-26
2.4.2	Signing In	2-27
2.5	Viewing the Event Log	2-30
2.6	Entering Configuration Change Comments (Release number 4 (Version 4.07) and later)	2-31
2.7	Entering Alarm ACK Comments (Release number 4 (Version 4.07) and later).....	2-32
2.8	Displaying Configuration Change Differences (Release number 4 (Version 4.07) and later)	2-34

Chapter 3 Password Management

3.1	Configuring the Password Management Function	3-1
3.1.1	GX/GP KDC Client Settings	3-2
3.1.2	GX/GP Password Management Settings	3-4
3.1.3	Testing the KDC Server Connection	3-4
3.2	Using the Password Management Function	3-10
3.2.1	Logging In and Out.....	3-10
3.2.2	Signing In	3-10
3.2.3	Dealing with the "Invalid User" Status	3-10
3.2.4	Password Expiration	3-10
3.3	Error Messages and Corrective Actions.....	3-11

Appendix

Appendix 1	Event Log Contents.....	App-1
------------	-------------------------	-------


1.1 Using the Advanced Security Function

This section gives a general overview of how to use the advanced security function.


1.1.1 Operation Overview

Configuring Functions

First, you need to configure the GX/GP functions. You have to configure the measurement settings and then register GX/GP users. After you register users, to use the GX/GP, you will need to log in to it by entering a user name, user ID (when in use), and password.

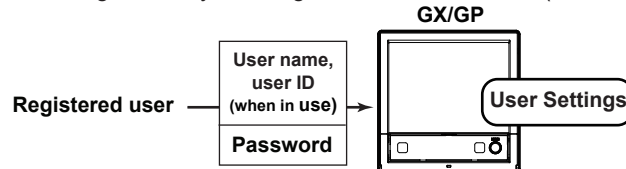


History of setting changes is recorded in an event log, and a new setting file is saved to an SD memory card.

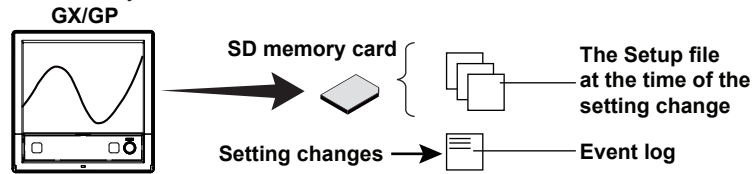


Measurement

Measured data (display or event data; see section, 1.2) is recorded to the GX/GP internal memory and saved to files on an external storage medium. The measurement data file includes the settings at the time of measurement, a history of the operations (event log), and login (user) information.

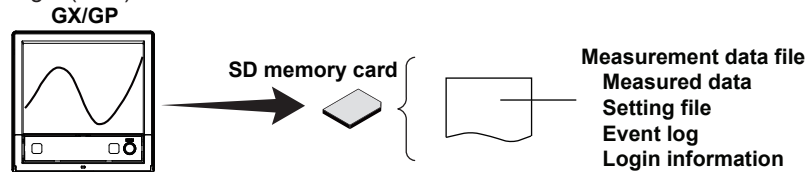

Signing Files

You can check the measured data and the event log and add pass or fail data to the measurement data file. This is referred to as "signing." Only permitted users can sign files. On the GX/GP, you can only sign measurement data files in the internal memory. You can sign measurement data files that have been saved to an external storage medium using the standard PC software, Universal Viewer.

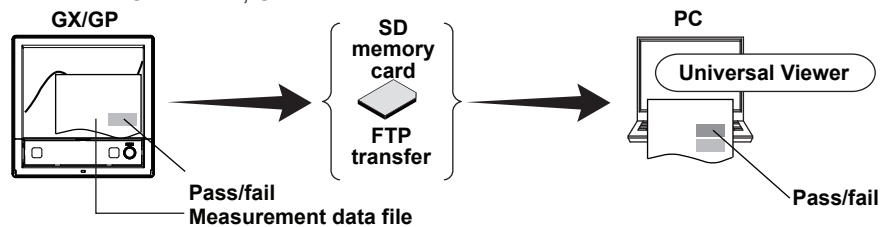

1.1.2 GX/GP Operation Range

The GX/GP Manages Measured Data in Its Internal Memory

- You cannot change the measured data in the GX/GP internal memory. The only way you can delete the measured data is by initializing the internal memory.
- From the GX/GP, you can only sign measurement data files in the internal memory.
- Measured data in the internal memory can automatically be saved to a file on an external storage medium. During this operation, if a file with the same name exists on the external storage medium, it is overwritten unconditionally.

You Cannot Use the GX/GP to Change a Measurement Data File That Has Been Saved to an External Storage Medium

- You can view a measurement data file that has been saved to an external storage medium on the GX/GP, but you cannot change or delete it.
- The GX/GP cannot format external storage media.

1.1.3 PC Software

You can use the standard PC software, Universal Viewer, to view and sign GX/GP measurement data files.

- See the Universal Viewer Manual (IM 04L61B01-01EN).

1.1.4 Terminology

Administrator ▶section, 1.3

A type of user that can be registered on the GX/GP. An administrator has access to all operations.

Second Administrator (Release number 4 (Version 4.07) and later) ▶section, 1.3

A type of user that can be registered on the GX/GP. The range of operations can be limited using administrator privileges and user privileges.

User ▶section, 1.3

A type of user that can be registered on the GX/GP. The range of operations can be limited using user privileges.

Monitor User ▶section, 1.3

A type of user that can be registered on the GX/GP. A monitor user can only monitor the GX/GP by connecting to the Web application or FTP server.

Admin property (Release number 4 (Version 4.07) and later) ▶section, 1.3

A limitation on the operating range of second administrators (SecondAdmin).

Limitations can be placed on security settings and operation settings.

User Privileges ▶section, 1.3

The range of operations that a user and SecondAdmin can perform.

Login and Logout ▶section, 1.3

Logging in is the act of entering a user name, user ID (when in use), and password that are registered on the GX/GP so that you can operate it. Logging out is the act of clearing the logged in status.

Audit Trail Function ▶section, 1.5

This function saves information that can be used to retrace past operations.

Event Log ▶section, 1.5

A log that lists setting changes and operations in a specified format in chronological order.

Signature Function, Signing ▶section, 1.6

A function for checking saved data and adding pass-or-fail approval information and the user name to the measurement data file, or the act of adding such information.

Password Management Function ▶section, 1.4

A function for managing the users who can access the GX/GP by using a KDC server connected to the network.

Auto Save ▶section, 1.2

A method for automatically saving the data in the internal memory to the SD memory card.

Manual Save ▶section, 1.2

A method for specifying an external storage medium and saving unsaved data in the internal memory to files on the storage medium when a given operation is carried out.

Media FIFO (First in first out) ▶section, 1.2

A method for saving a new file to the SD memory card when there is not enough space, in which the oldest file is deleted and then the new file is saved.

Login Information ▶section, 1.5, Universal Viewer Manual

A user's password may change during operation. This can happen when the password expires. The login information is the user name and password information at the time that the measurement data file was created. To sign a measurement data file using Universal Viewer, you must log in as a user that is registered in the login information in that file. You cannot view the login information.

Password policy (Release number 4 (Version 4.07) and later) ▶section, 1.3

Conditions for passwords such as the minimum number of characters and the use of uppercase and lower characters, numbers, symbols, and number of previous passwords (version 4.09 and later) can be specified.

1.2 Recording and Saving Data

This section explains the types of data that a GX/GP with the /AS advanced security option can record and how to save them.

1.2.1 Data Types

The types of data that the GX/GP can store to files are listed below.


► For information about file name extensions, see page 1-14.

Data Type	Description
Display data	<ul style="list-style-type: none">Waveform data displayed on the trend display. The measured data is recorded at the specified trend interval.The minimum and maximum values among the measured data within the trend interval are saved.A header string (shared with other files) can be written in the file.The file contains alarm and message information, an event log, login information, and setting parameters.Data format: Binary (undisclosed) The data is encrypted.
Event data	<ul style="list-style-type: none">Measured data that is recorded at the specified recording interval. The only available recording mode is Free. You cannot start recording with triggers.A header string (shared with other files) can be written in the file.The file contains alarm and message information, an event log, login information, and setting parameters.Data format: Binary (undisclosed) The data is encrypted.
Manual sampled data	<ul style="list-style-type: none">Instantaneous value of the measured data when a manual sample operation is executed.A header string (shared with other files) can be written in the file.Data format: Text
Report data (/MT option)	<ul style="list-style-type: none">Hourly, daily, weekly, monthly, batch, daily custom report data. Report data is created at an interval that is determined by the report type (one hour for hourly reports, one day for daily reports, and so on).A header string (shared with other files) can be written in the file.Data format: TextThe data can be converted to Excel and PDF formats.
Snapshot data (screen image data)	<ul style="list-style-type: none">GX/GP screen image data.Can be saved to an SD memory card or USB flash memory.Data format: PNG
Setting parameters	<ul style="list-style-type: none">The setting parameters of the GX/GP.Data format: Binary (undisclosed) The data is encrypted.
Alarm summary data	<ul style="list-style-type: none">The alarm summary information in the internal memory is saved to a text file.Can be saved to a SD memory card and USB flash memory.
Health monitor log data	<ul style="list-style-type: none">Health monitor log data.Data format: TextCan be saved to an SD memory card or USB flash memory.

Display data and event data


Display data can be likened to the conventional recording on the chart sheet and are useful for long-term recording.

Event data is useful when you wish to record the measured data in detail.

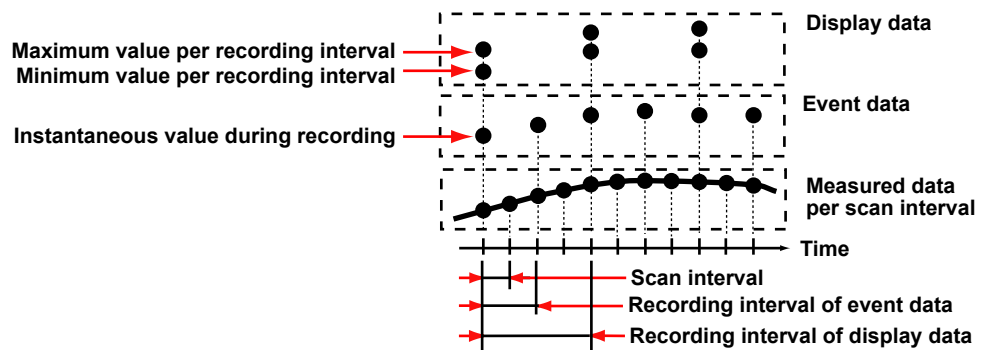


1.2.2 Data Recording and Storage Flowchart

Measured data is recorded once to the internal memory and then saved to the external storage medium.

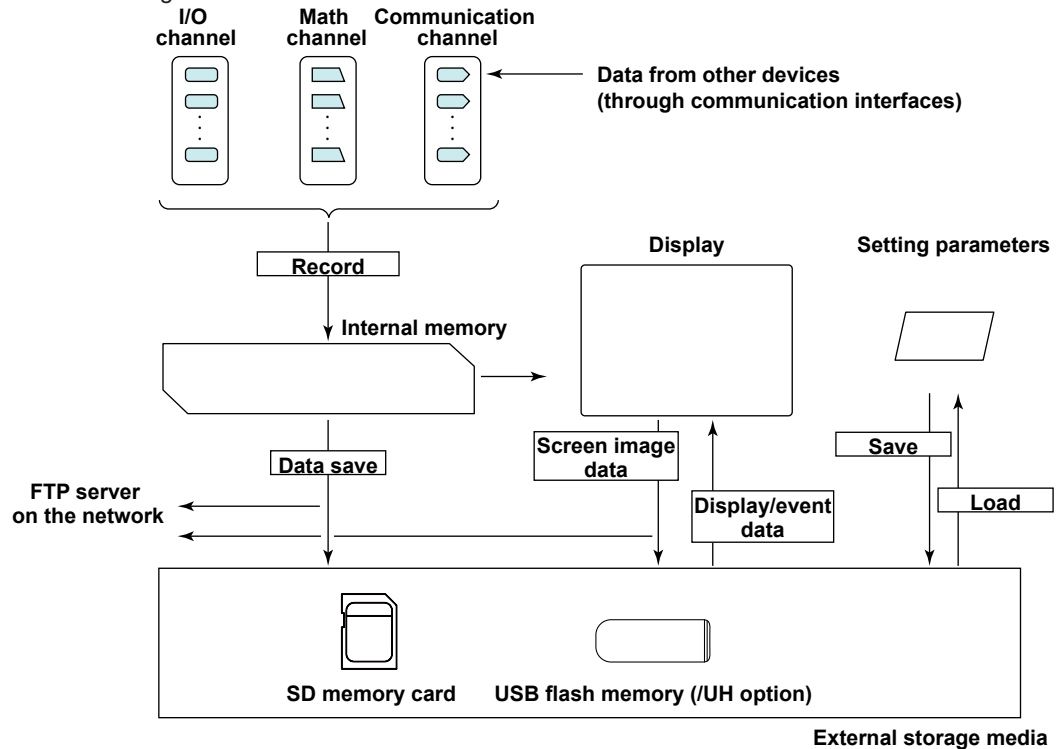

Internal Memory

Display data and event data are held in files in the internal memory. They are also saved as files to an external storage medium.

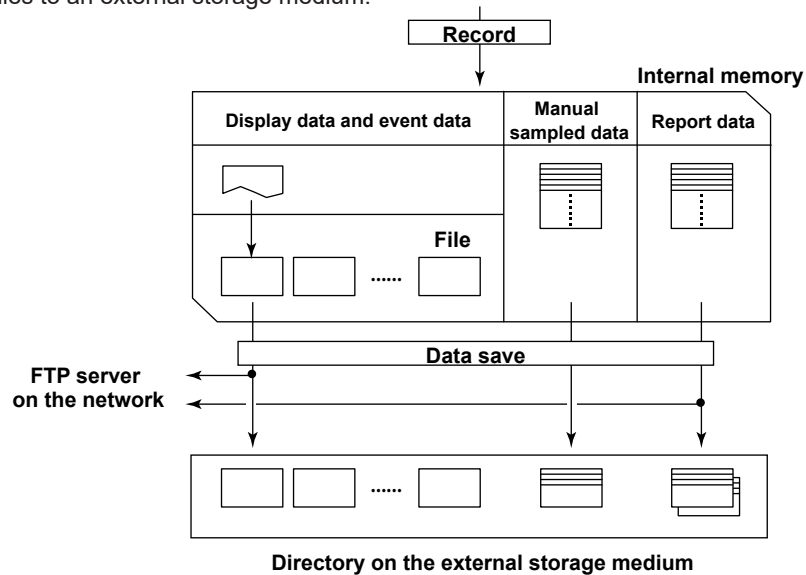

1.2.3 Display, Event, and Setting File Encryption

Display, event, and setting files are encrypted. You cannot change their data or delete them.

1.2.4 Display and Event Data Recording Methods

- ▶ For the setting procedure, see section 1.12, “Setting Recording Conditions (Recording mode, recording interval, saving interval)” and 1.11, “Setting Measurement Conditions (Scan interval, A/D integrate, etc.)” in the User’s Manual.
- ▶ For operating instructions, see section 2.1, “Starting and Stopping Recording and Computation” in the User’s Manual.

Type of Data to Record

You can choose to record display or event data.

• Choosing What Type of Data to Record

Record the type of data that meets your needs. Use the following examples for reference.
Example 1: Record continuous waveform data only, just like conventional chart sheet recording instruments.

Record the display data.


Example 2: Continuously record data that is as detailed as possible.

Record event data by specifying the recording interval.

Internal Memory

The measured data is partitioned and saved to files at set intervals. If the internal memory is full or if the number of display data files and event data files exceeds 500 for GX10/GP10 and GX20-1/GP20-1 or 1000 for GX20-2/GP20-2, files are overwritten from the oldest file.

Recording Conditions of Display Data


Item	Description
Channel type	You can set the channel type to measurement, computation, or communication.
Recording interval	Determined by the “trend interval” (see the following diagram). You cannot choose an interval that is shorter than the scan interval.
File generation	Files are generated at the set file-save interval.  <p>A file is also created in the following instances.</p> <ul style="list-style-type: none"> • When a file is created manually • When recording is stopped. • When file creation is executed with the event action function • After recovering from a power failure
Recording start/stop	You can start or stop recording on the menu screen or using START/STOP key. ▶ For operating instructions, see section 2.1, “Starting and Stopping Recording and Computation” in the User’s Manual.

Trend Interval and Display Data Recording Interval

Trend Interval ¹	5s	10s	15s	30s	1min
Recording interval	100ms	200ms	500ms	1s	2s
Trend Interval ¹	2min	5min	10min	15min	20min
Recording interval	4s	10s	20s	30s	40s
Trend Interval ¹	30min	1h	2h	4h	10h
Recording interval	1min	2min	4min	8min	20min


¹ You cannot choose a recording interval that is shorter than the scan interval.

Recording Conditions of Event Data

Item	Description
Channel type	Same as display data.
Recording interval	Choices are available in the range of 100 ms to 30 min. You cannot choose a recording interval that is shorter than the scan interval.
File generation	<p>A file is generated when the set data length is reached. A file is also created in the following instances.</p> <ul style="list-style-type: none"> • When a file is created manually • When recording is stopped • When file creation is executed with the event action function • After recovering from a power failure
Mode	<p>Free (always recording)</p> <p>You can start or stop recording on the menu screen or using the START/STOP key.</p> <p>► For operating instructions, see section 2.1, "Starting and Stopping Recording and Computation" in the User's Manual.</p> 

Creating Files through Touch Operation

You can use touch operations to generate files.

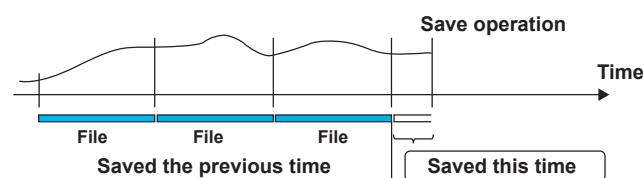

► For operating instructions, see section 2.5.6, "Saving Display Data or Event Data during Recording through Touch Operation" in the User's Manual (IM04L51B01-01EN).

1.2.5 Manual Sampled Data


Manual sampled data is recorded to internal memory. If the number of manual sampled data entries exceeds 400, the data is overwritten from the oldest entry.



► For operating instructions, see section 2.5.3, "Manually Saving Instantaneous Values of Measured Data (Manual sample)" in the User's Manual.

1.2.6 Report Data (/MT option)

Report data is saved to the internal memory. If the number of report data entries exceeds 800, the data is overwritten from the oldest entry.



► For the setting procedure, see section 1.16, "Setting the Report Function (/MT option)" in the User's Manual.

1.2.7 Directories and File Saving on External Storage Medium

Types of External Storage Medium

- SD memory card (1 GB or more)
- USB flash memory (/UH option)

SD Memory Card Directory

The directories that the GX/GP automatically creates in the SD memory card and the files that it saves are indicated below.

Note

- Do not place a file named "SET0" in the SD card.
- Do not place a file with the same name as the directory name ("DATA0" by default) in the storage medium for saving data.

Root directory

Setting file, Predictive detection model file*, Profile trend file*
Setting files, Predictive detection model file*, Profile trend file*
saved using touch operation
▶ For operating instructions, see section 1.26,
"Saving Setting Parameters," in the User's Manual.

SET0 directory

- Stores the following files when settings are changed.
Setting file
- Has media FIFO action.
▶ For details, see section 1.5.

Data save destination directory

- Stores the following files.
Display data files
Event data files
Manual sampled data files
Report data files (/MT option)
Snapshot data files
Health monitor log data files*
- The initial directory name is "DATA0".
- Has media FIFO action.
▶ For the setting procedure, see section 1.14,
"Setting the Conditions for Saving Data Files," in the User's Manual.

PRF0 directory*

- Stores the following files when load the Profile trend file.
Profile trend file*
- Has media FIFO action.
▶ For details, see section 1.5.

Data save destination directory using touch operation

Creates a directory and stores the following files when data is saved
using touch operation.
Display data, event data, manual sampled data, report data,
Health monitor log data*
▶ For operating instructions, see section 2.3.3,
"Displaying a List of Data Files in the Internal Memory (Memory summary),"
in the User's Manual.

* Release number 5 and later.

Saved Files

GX/GPs with the advanced security option create the following types of files.

Type	Extension	Notes
Display data file	GSD	-
Event data file	GSE	-
Setting file	GSL	See section, 1.5.
Manual sampled data file	GMN	-
Snapshot data file	png	-
Report data file (/MT option)	GRE	-
	xlsx or xlsm	For use with the report template function
	pdf	
Health monitor log data file	GHL	-

1.2.8 Saving Data to External Storage Medium


Auto Save

The following type of files are automatically saved: display data, event data, manual sampled data, report data (/MT option), and health monitor log data (release number 5 and later).

Keep the SD memory card inserted in the drive at all times. The data in the internal memory is automatically saved to the SD memory card.

► For the setting procedure, see section 1.14, "Setting the Conditions for Saving Data Files" in the User's Manual.

Auto Save Timing

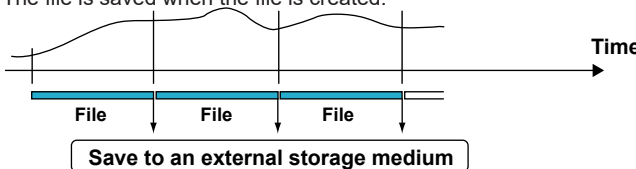Data Type	Description														
Display data	<p>The file is saved when the file is created.</p> 														
Event data	Same as display data.														
Manual sampled data	<p>The first time manual sample is executed, a manual sampled data file is created on the SD memory card. Data is appended to this file at every subsequent manual sample operation. A new file is created after manual sampled data is stored 100 times.</p> <p>► For operating instructions, see section 2.5.3, "Manually Saving Instantaneous Values of Measured Data (Manual sample)" in the User's Manual.</p>														
Report data	<p>The first time report data is generated, a report data file is created on the SD memory card, and report data is stored. Report data is appended to this file at every report interval.</p> <p>Dividing of the report files</p> <p>The appending of the report data to the file is stopped at a specified time, and subsequent reports are saved to a new file. The file is divided in the unit shown in the table below. Also, when recording is stopped, all report files are divided.</p> <p>Report template function</p> <p>Every time a report file is divided, a report file is created according to the specified template format such as an Excel format or PDF format. The report file can also be printed.</p> <p>► For the setting procedure, see section 1.16, "Setting the Report Function (/MT option)" in the User's Manual.</p>														
Report Type	<table border="1"> <thead> <tr> <th>Report File</th><th></th></tr> <tr> <th>Separate</th><th>Combine</th></tr> </thead> <tbody> <tr> <td>Hourly + Daily</td><td> <input type="checkbox"/> a file for each daily report <input type="checkbox"/> hourly reports for a day and a daily report </td></tr> <tr> <td>Daily + Weekly</td><td> <input type="checkbox"/> a file for each weekly report <input type="checkbox"/> daily reports for a week and a weekly report </td></tr> <tr> <td>Daily + Monthly</td><td> <input type="checkbox"/> a file for each monthly report <input type="checkbox"/> daily reports for a month and a monthly report </td></tr> <tr> <td>Batch</td><td> <input type="checkbox"/> a file for each recording start/stop operation The file will be divided if the number of data entries exceeds 200. <input type="checkbox"/> a file for each recording start/stop operation The file will be divided if the number of data entries exceeds 200. </td></tr> <tr> <td>Day custom</td><td> <input type="checkbox"/> a file for each file creation unit <input type="checkbox"/> a file for each file creation unit </td></tr> </tbody> </table>	Report File		Separate	Combine	Hourly + Daily	<input type="checkbox"/> a file for each daily report <input type="checkbox"/> hourly reports for a day and a daily report	Daily + Weekly	<input type="checkbox"/> a file for each weekly report <input type="checkbox"/> daily reports for a week and a weekly report	Daily + Monthly	<input type="checkbox"/> a file for each monthly report <input type="checkbox"/> daily reports for a month and a monthly report	Batch	<input type="checkbox"/> a file for each recording start/stop operation The file will be divided if the number of data entries exceeds 200. <input type="checkbox"/> a file for each recording start/stop operation The file will be divided if the number of data entries exceeds 200.	Day custom	<input type="checkbox"/> a file for each file creation unit <input type="checkbox"/> a file for each file creation unit
Report File															
Separate	Combine														
Hourly + Daily	<input type="checkbox"/> a file for each daily report <input type="checkbox"/> hourly reports for a day and a daily report														
Daily + Weekly	<input type="checkbox"/> a file for each weekly report <input type="checkbox"/> daily reports for a week and a weekly report														
Daily + Monthly	<input type="checkbox"/> a file for each monthly report <input type="checkbox"/> daily reports for a month and a monthly report														
Batch	<input type="checkbox"/> a file for each recording start/stop operation The file will be divided if the number of data entries exceeds 200. <input type="checkbox"/> a file for each recording start/stop operation The file will be divided if the number of data entries exceeds 200.														
Day custom	<input type="checkbox"/> a file for each file creation unit <input type="checkbox"/> a file for each file creation unit														
Health monitor log data	When the log reaches 100, the file is saved.														

Data Saved to Display and Event Data Files

The following data is saved to display and event data files.

Contents of the display data and event data files

- Header string (see section 1.14.1, "Setting the Save Directory, File Header, and File Name" in the User's Manual)
- Batch information (when the batch function is in use, ► see section 1.15, "Setting the Batch Function" in the User's Manual)
- Measured / computed data
- Setting parameters
- Login information (see section 1.1.4, "Terminology")
- Event log (see section 1.5, "Audit Trail Function")
- Alarm summary
- Approval information. (see section 1.6, "Signature Function")

Save Destination

Files are saved to an SD memory card.

Data Save Destination Directory

You can specify the name of the directory that data will be saved to (the default directory is "DATA0"). The GX/GP will create the directory on the SD memory card and save data to it.

► For the setting procedure, see section 1.14, "Setting the Conditions for Saving Data Files" in the User's Manual.

Note

Do not place a file with the same name as the directory name ("DATA0" by default) in the SD card.

Save Operation (When not using media FIFO)


If there is not enough free space on the SD memory card, the GX/GP cannot save the data in the internal memory to the SD memory card. Replace the SD memory card before the data in the internal memory is overwritten.

Save Operation (Always retain most recent data file/media FIFO)

When saving the data files automatically, you can save the data so that the most recent data files are constantly retained in the SD memory card. This method allows you to use the GX/GP continuously without having to replace the SD memory card.

► For the setting procedure, see section 1.14, "Setting the Conditions for Saving Data Files" in the User's Manual.

Operation

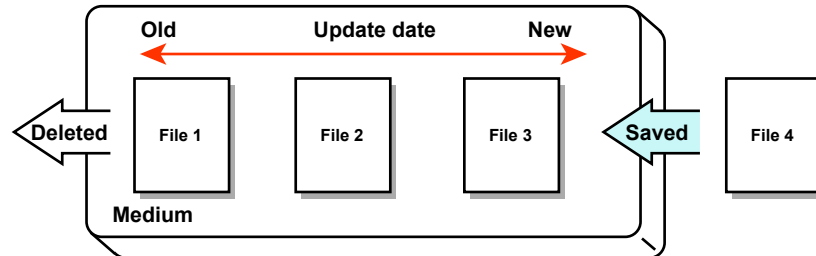


If not enough free space is available when saving a new data file to the SD memory card, files are deleted in order from the oldest data update date/time to save the new file. This operation is referred to as FIFO (first in first out).

- FIFO is used only when the following files are saved automatically. When files are saved using other methods, FIFO is not used.
 - Display data files, event data files, report data files (/MT option), manual-sampled-data files, and snapshot data files.
- Files subject to deletion
 - All files in the destination directory, except for the ones listed below, are subject to deletion. Files not subject to deletion:
 - Hidden files, read-only files, files in the subdirectory within the save destination directory
- If the free space on the SD memory card would fall to less than 1 MB after the file is saved, the oldest files are deleted in order from the save destination directory before the file is saved. The GX/GP ensures that at least 1 MB of free space is available after a file is saved.
- Up to the most recent 1000 files are retained. If the number of files in the save destination directory exceeds 1000, the number of files is held at 1000 by deleting old files even if there is enough free space.
- If there are more than 1000 files already in the save destination directory, at least one file is always deleted before saving the new file. The number of files is not kept within 1000 in this case.

Manual Save (Collectively Storing Unsaved Data)

Unsaved data in the internal memory is stored in unit of files to the external storage medium (SD memory card or USB flash memory) when an external storage medium is inserted and a given operation is carried out.

► For instructions on how to save data manually, see section 2.5.2, “Manually Saving Measured Data (Collectively saving unsaved data)” in the User’s Manual.

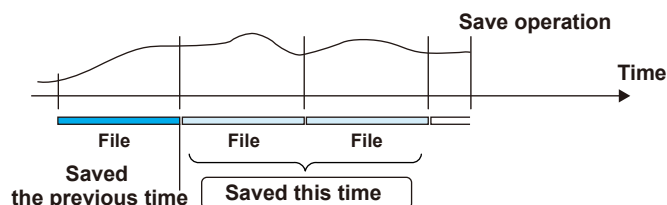**Note**

When you use manual save, it is important that you save the data in the internal memory to the external storage medium before the data is overwritten. Determine the usage condition of the internal memory and save the data to the external storage medium at appropriate times.

► For the setting procedure, see section 1.14, “Setting the Conditions for Saving Data Files” in the User’s Manual.

► For operating instructions, see section 2.1, “Starting and Stopping Recording and Computation” in the User’s Manual.

Data Saved to Display and Event Data Files

The same as for auto save.

Save Destination

You can select an SD memory card or USB flash memory (/UH option).

Data Save Destination Directory

You can specify the name of the directory that data will be saved to (the default directory is “DATA0”).

► For the setting procedure, see section 1.14, “Setting the Conditions for Saving Data Files” in the User’s Manual.

1.2 Recording and Saving Data

File Name

You can select what type of file name to use to save measured data to an SD memory card.
The following three types are available.

Structure	Data Type	Description
Date	Display data Event data Manual sampled data Snapshot data Alarm summary data Health monitor log data	<div>7-digit</div> <div>Specified string</div> <div>Date</div> . <div>Extension</div> Example: 000123_AAAAAAAAAA121231_174633.GSD
	Report data (/MT option)	<div>7-digit</div> <div>Specified string</div> <div>Date</div> <div>Type</div> . <div>Extension</div> Example: 000123_AAAAAAAAAA121231_174633HD.GRE
7-digit	Display data Event data Manual sampled data Snapshot data Alarm summary data Health monitor log data	<div>7-digit</div> <div>Specified string</div> . <div>Extension</div> Example: 000123_AAAAAAAAAA.GSD
	Report data	<div>7-digit</div> <div>Specified string</div> <div>Type</div> . <div>Extension</div> Example: 000123_AAAAAAAAAAHD.GRE
Batch name	Display data Event data	<div>7-digit</div> <div>Batch name</div> . <div>Extension</div> Example: 000123_BBBBBBBBBBBBBBBBBBBBBBBB.GSD
	Report data	<div>7-digit</div> <div>Date</div> <div>Type</div> . <div>Extension</div> Example: 000123_121231_174633HD.GRE
	Manual sampled data Snapshot data Alarm summary data Health monitor log data	<div>7-digit</div> <div>Date</div> . <div>Extension</div> Example: 000123_121231_174633.GMN

Item	Description	
7-digit	Consists of <div>6-digit number</div> + <div>1-character delimiter</div>	
	6-digit number ¹	A sequence number in chronological order. The number ranges from 000001 to 999999. If the number reaches 999999, it returns to 000000.
	1-character delimiter	Starts with '_' and takes on the following values: A to Z and 0 to 9. If a file with the same name exists in the specified directory, the file is saved by changing the delimiter to prevent overwriting. Example: Example: If a file named "000123_AAAAAAAAAA.GSD" already exists, the file is saved to the name "000123AAAAAAAAAAAAA.GSD."
Date	YYMMDD_hhmmss	YY: Year (lower two digits), MM: Month, DD: Day hh: Hour, mm: Minute, ss: Second
Specified string	AAAAAAAAAAAAAA	Up to 16 alphanumeric characters can be used.
Batch name	BBBBBBBBBBBBB...B	Up to 41 alphanumeric characters can be used.
Type	H_, D_, W_, M_, HD, DW, DM, B_, C_	Report data type H_: Hourly, D_: Daily, W_: Weekly, M_: Monthly, HD: Hourly and daily, DW: Daily and weekly, DM: Daily and monthly, B_: Batch, C_: Daily custom
Extension	Display data : GSD Event data : GSE Manual sampled data : GMN Alarm summary data : GAL Snapshot data : png	Report data : GRE Report data : xlsx or xlsx (report template function) Report data : pdf (report template function) Health monitor log data: GHL

- 1 When the multi-batch function (/BT option) is in use, the file name is batch group identifier + number + delimiter. For details, see the multi-batch function manual.

Saving Data through Touch Operation

You can carry out the following data save operations regardless of whether auto save or manual save is used.

- For operating instructions, see section 2.3.3, “Displaying a List of Data Files in the Internal Memory (Memory summary)” in the User’s Manual.

Saving Alarm Summary Data

- For operating instructions, see section 2.3.1, “Listing the Log of Alarm Occurrences and Releases (Alarm Summary)” in the User’s Manual.

Data Save Operation (applicable icon)	Description
Collectively save (All save)	Collectively saves all the data stored in the internal memory.
Collectively save display data and event data (Disp/Event save)	Collectively saves display data and event data stored in the internal memory.
Selectively save data (Selective data save)	Saves the specified display data or event data file.
Collectively save manual sampled data (Msample data save)	Collectively saves all the manual sampled data stored in the internal memory.
Collectively save report data (/MT option) (Report data save)	Collectively saves all the report data stored in the internal memory.
Alarm save (Save alarm)	Saves the alarm summary data.
Health monitor log save (Health monitor save)	Saves the health monitor log data.

Save Destination

You can select an SD memory card or USB flash memory (/UH option).

Data Save Destination Directory

A directory is created with a name that is a combination of the data save destination directory name and the date/time, and the data is saved there.

Directory name: “Specified string”_YYMMDD_HHMMSS

Example: If a file is saved on September 30, 2014 at 17:06:42, the file will be saved to a directory with the name DATA0_140930_170642. “DATA0” is the specified string.

Note

The number of directories that you can create on the external storage medium varies depending on the length of the directory names. When the specified directory name is 5 characters long, about 170 directories can be created. When it is 20 characters long, about 120 directories can be created. An error occurs if you try to create directories exceeding this limit.

1.2.9 Saving Data through an Ethernet Network

You can use the FTP client function to automatically transfer and save the following data to an FTP server through an Ethernet network: display data, event data, report data (/MT option), snapshot data (screen image data), setup data when the settings are changed, data when the profile trend loaded, health monitor log data. You can also use the GX/GP as an FTP server. You can access the GX/GP from a personal computer and retrieve and store data files from both internal and external memory.

- ▶ For the setting procedure, see section 1.21.2, “Setting the FTP Client Function” in the User’s Manual.
- ▶ For operating instructions, see section 3.3, “Accessing the Measurement Data File on the GX/GP from a PC (FTP server function)” in the User’s Manual.

1.3 Login Function


You can allow only registered users to use the GX/GP.

- ▶ For the setting procedure, section, 2.2.
- ▶ For operating instructions, section, 2.3.

1.3.1 Logging In and Out Using Touch Operation

You need to enter user identification information (a user name, user ID (when in use), and password) to log in to the GX/GP in the following cases.

GX/GP Access Method	Login Necessary
Touch operation	When the power is turned on
	When logging in after logging out.

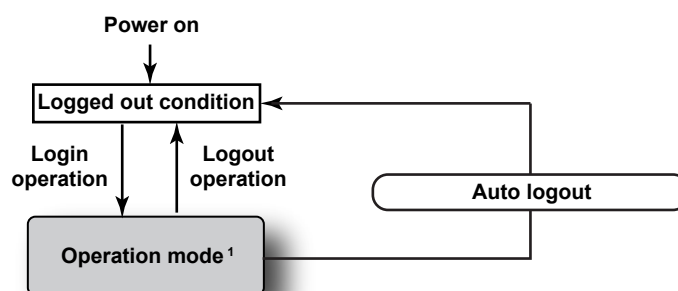

1 This is the normal mode in which configuration and operation are performed.

Auto Logout

You can set the GX/GP to log a user out automatically when there is no touch operation over a specified period.

In the case of general communication using Ethernet, use the timeout function.

- ▶ See section 1.21.7, "Configuring the Server Function" in the User's Manual.

In the case of general communication using serial communication, use the logout function.

- ▶ See section 1.22.1, "Setting Basic Communication Conditions" in the User's Manual.

Operations Available While Logged Out

You can configure the GX/GP so that when you are logged out, in addition to just being able to log in, you can switch the screen using the Browse tab of the menu screen or from the favorite screen list.

1.3.2 Logging In and Out through Communication

You need to log in as a registered user in the following cases.

- ▶ For details about logging in through communication, see the Communication Command Manual.

GX/GP Access Method	Function Accessed	Login
Ethernet	Setting and measurement server (General communication)	To send commands, you need to log in by entering user identification information (a user name, user ID (when in use), and password). There is a special command for logging out.
	Web application	To monitor the GX/GP, you need to log in by entering user identification information (a user name and password). Only Monitor level users can log in. To log out, close the Web page.
Serial	Setting and measurement function (General communication)	To send commands, you need to log in by entering user identification information (a user name, user ID (when in use), and password). There is a special command for logging out.

1.3.3 User Levels

There are three user levels: Administrator, Second Administrator, User, and Monitor user.
 Number of users that can be registered: 100 (GX10/GP10/GX20-1/GP20-1) or 200 (GX20-2/GP20-2) (Release number 4 (Version 4.07) and later)

User Level		Description
Administrator	Admin	An administrator has access to all operations.
Second Administrator (Release number 4 (Version 4.07) and later)	SecondAdmin	<p>A second administrator can configure security settings that the administrator can, limit the range of operations that can be performed with administrator privileges, and limit the range of operations that can be performed with user privileges.</p> <p>A second administrator cannot perform A/D calibration, configure the advanced security function, configure the encryption/certificate encryption function, or create keys for encryption/certificate.</p> <p>A second administrator cannot set the multi batch function on/off setting or load settings that include the multi batch function on/off setting.</p> <p>A second administrator cannot set the measurement mode.</p>
User	User	<p>A limitation can be placed on the operating range (user property).</p> <p>A user cannot access security settings.</p> <p>Nor can a user perform A/D calibration, enable the advanced security function, configure the encryption function or create keys for encryption/certificate, or upload I/O module firmware.</p> <p>You cannot set the multi batch function on or off or load settings that include the multi batch function on/off setting.</p> <p>You can specify the range of operations that a user can perform.</p> <p>You cannot set the measurement mode.</p>
Monitor user	Monitor	A monitor user can only use the monitor function. The user cannot configure or operate the GX/GP.

Administrator

Item	Description	
Login methods	Touch operation	Users can log in using touch operation.
	Communication	Users can log in using general purpose communication, DARWIN compatible communication (Ethernet or serial communication).
	Touch operation + Communication	Users can log in using touch operation and general purpose communication (Ethernet or serial communication).
Identification information	User name	Up to 20 characters and symbols
	User ID ¹	Up to 20 characters and symbols
	Password ¹	Between 6 and 20 characters and symbols A password policy can be set. (Release number 4 (Version 4.07) and later)
	Password expiration	Select Off, one month, three months, six months or one year.

¹ Characters that cannot be used in passwords and user IDs: SP (space) ' ' ; DEL (7f)

Note

To use the login function, at least one administrator who can log in to the GX/GP using touch operation must be registered.

The user level of the user registered at User number 1 is fixed to **Admin**. You cannot change it.

Second Administrator (Release number 4 (Version 4.07) and later)

Item	Description	
Login methods	Touch operation	Users can log in using touch operation. See "Admin Property" and "User Property."
	Communication	Users can log in using general purpose communication, DARWIN compatible communication (Ethernet or serial communication). See "Admin Property" and "User Property."
	Touch operation + Communication	Users can log in using touch operation and general purpose communication (Ethernet or serial communication). See "Admin Property" and "User Property."
Identification information	The same as for administrators..	

User

Administrators or second administrator with privileges register users.

Item	Description	
Login methods	Touch operation	Users can log in using touch operation. See "User Privileges."
	Communication	Users can log in using general purpose communication, DARWIN compatible communication (Ethernet or serial communication). See "User Privileges."
	Touch operation + Communication	Users can log in using touch operation and general purpose communication (Ethernet or serial communication). See "User Privileges."
Identification information	The same as for administrators.	

Monitor User

Administrators or second administrators with privileges register monitor users.

Item	Description	
Login methods	Touch operation	Users can log in using touch operation. Only monitoring is possible. The user cannot configure or operate the GX/GP except for changing the password.
	Communication	Users can log in through the FTP server or Web application, DARWIN compatible communication. Only monitoring is possible. The user cannot configure or operate the GX/GP except for changing the password.
	Touch operation + Communication	Users can log in using touch operation and through the FTP server or Web application.
Identification information	User name	Up to 20 characters and symbols
	User ID ¹	Up to 20 characters and symbols
	Password ¹	Between 6 and 20 characters and symbols A password policy can be set. (Release number 4 (Version 4.07) and later)

¹ Characters that cannot be used in passwords and user IDs: SP (space) ' ; DEL (7f)

Admin property (Release number 4 (Version 4.07) and later)

Limitations can be placed on security configuration and operation for each second administrator.

The applicable operations are shown in the following table.

Up to 10 types of administrator privileges can be assigned to SecondAdmin level users.

Administrator privileges take precedence over user privileges.

Settings and Item		Description
Security settings	Basic settings	Security function settings, logout settings, password management function settings, password retry count settings, user ID settings, Admin/User/Sign in property settings, password policy settings, password expiration advance notification settings, writing through communication commands
	User settings	User settings, User locked ACK
	Admin property	Administrator property settings
	User property	User property settings, Web content selection tree settings
	Sign in settings	Sign in type settings, sign in title settings, recording stop action settings, data file transfer settings
	Sign in property	Sign in property settings
Operation	Initialize	Initialize
	Reconfiguration	System reconfiguration, module activation
	Certificate	Creating a self-signed certificate, creating a certificate signing request (CSRs), installing a certificate, deleting a server certificate, confirming a certificate
	Update	I/O module firmware update, Web application update

User Privileges (User Property)

The following operations can be enabled or disabled for and user. Operations performed using communication commands are included.

Up to 10 types of user privileges can be assigned to User level second administrator and users.

Setup and operation Item	Operation
Record	Start and stop recording (including the START/STOP key)
Math	Start, stop, reset computation (including the START/STOP key), acknowledge data dropout, start, stop, reset elapsed time, and individual math reset
Data save	Save display data, save event data, manual sample, snapshot, reset timer, reset match time timer
Message	Write messages
Batch	Enter the batch name number, lot number, comment, text field, and predictive detection section start/stop/hold
Alarm ACK	Alarm acknowledge (including individual alarm ACK)
Communication	Start, stop, and test mail; test FTP, get and release network information; test printer output; test KDC; manually recover Modbus master; manually recover Modbus client ; and manually recover SLMP
Touch operation	Touch operation
Time set	Manual SNTP server time adjustment, date/time adjustment, time zone settings, gradually adjusting the time settings, and daylight saving time settings.
Setting operations	All setting operations
Calibration correction	Configure calibration correction, Calibration reminder settings (/AH option).
External media	Save, load, and list files; manually save data; save alarms; abort saving; create certificate signature requests (CSR); install certificates; install intermediate certificates; save manually; and health monitor save
System operations	Initialize, reconfigure system, use encryption/certificate, execute unverified certificate, and activate module
Output operations	Operate internal switches of type Manual , operate the relays of range type Manual, operate the AO output, and communication input data settings.

Signature Privileges (Sign In Property)

The following operations can be enabled or disabled for second administrator and user.

Operations performed using communication commands are included.

Up to 8 types of signature privileges can be assigned to User level second administrator and users.

Setup Item	Operation
Sign in 1 to Sign in 3	Signature operations

Explanation of Admin Privileges and User Privileges (Admin property, User Property) (Release number 4 (Version 4.07) and later)

- Operations performed using communication commands are also limited. However, operations can always be performed through Modbus communication, regardless of the settings. ► section 2.2 in the Communication Command Manual
- Operations assigned by the event action function are always performed, regardless of the operation-restriction settings. If the event is a "User Function Key," the operation will be restricted.
- If you lock computation, even if the starting and resetting of computation are enabled for the START/STOP key operation, computation will not be reset or started when recording starts.
- Administrator privileges take precedence over user privileges. However, the following operations depend on user privileges (Lock).

Admin property		Items dependent on user privileges
Initialize	Initialize	Setup operation Calibration correction (when the advanced security function is enabled)
	Indv Init	
Certificate	Certificate signing request (CSR)	External storage media
	InstallServCert	

User ID

You can choose whether or not to use a user ID.

User ID and Password

You cannot specify a user-ID and password pair that is already registered on the GX/GP.

Password Expiration

You can set a password expiration period (but not for Monitor users).

Advance notice of expiry date (Release number 4 (Version 4.07) and later)

You can configure the logging function to indicate the password expiration period when a user logs in.

► page 2-3 in section 2.2.1, "Configuring the Security Function, Logout, Password Management Function, Password policy, Etc."

Number of Password Retries and User Invalidation

When a user is prompted for a password, if he or she enters the wrong password for the specified number of times (Password retry), the user's account is invalidated, and the user cannot log in (Monitor users are not affected).

An administrator or second administrator with privileges can clear the "user locked" status by setting the invalidated user's password to the default value.

1.3 Login Function

Password policy (Release number 4 (Version 4.07) and later)

You can set the number of characters (6 to 20) and the combination of characters (whether to include uppercase/lowercase alphabet characters, numbers, and symbols) to use for passwords, and number of previous passwords (version 4.09 and later).

► page 2-3 in section 2.2.1, "Configuring the Security Function, Logout, Password Management Function, Password policy, Etc."

Reusing Setting Parameters

You can use the settings of one GX/GP on another GX/GP by loading the setting file.

You can specify whether to load all settings or specific settings (security, IP address, or other).

However, the passwords are not loaded except for Monitor users. All administrator, second administrator and user passwords are set to their defaults.

► For operating instructions, see section 1.25.1, "Loading Setting Parameters" in the User's Manual.

The following tables show the settings that can be loaded for different user levels when the user is logged in depending on the recording status (recording or recording stopped).

Recording

User Level		Admin	SecondAdmin (Release number 4 (Version 4.07) and later)	User	Login Function Not Used
Setup Item	Security	✓	✓		✓
	IP address				
	Other ¹	✓	✓	✓	✓

¹ Only settings that can be changed during recording

Recording stopped

User Level		Admin	SecondAdmin ² (Release number 4 (Version 4.07) and later)	User	Login Function Not Used
Setup Item	Security	✓	✓		✓
	IP address	✓	✓	✓	✓
	Other	✓	✓	✓	✓

² A second administrator with privileges.

Loading Setting Files Using Event Action

Security settings are not loaded.


1.3.4 Login Restrictions

Logging In with the Same User Name

Simultaneous login is possible by the same user from multiple PCs.

Logging in Simultaneously

Multiple users can simultaneously log in to the GX/GP through touch operation and communication.

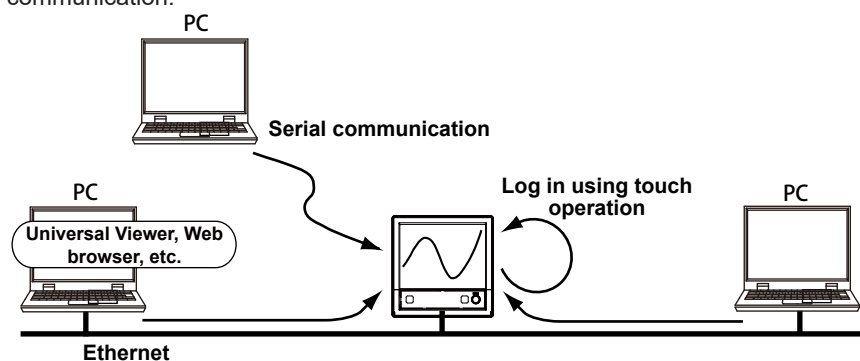

Number of the simultaneous connection

Access Method	Number of Maximum Connection
General communication	4
Web application	4

When Not Using Communication Login

The following table shows the available operations through communication depending on the touch-operation security settings.

Access Method	Touch-Operation Security Settings	
	Off	Login
Using general communication (Ethernet or serial communication)	No login. All operations available.	No login. Monitor function only.
Web application	No login. Monitor function only.	No login. Monitor function only.
FTP server		

1.3.5 How the GX/GP Operates When the Login Function Is Not Used

The GX/GP operates in the following manner when the login function is not used.

- There is no need to log in.
- The signature function is not available.
- You can connect and execute commands using general communication (Ethernet or serial communication) in the same way as on a standard model.
- Only the monitor function is available over a Web application connection.


1.4 Password Management

The password management function enables you to manage access to the GX/GP by using the Kerberos v5 authentication protocol.

► For the setting procedure and operating instructions, see section Chapter 3, “Password Management”.

System Configuration

The following figure shows the configuration of the authentication system.

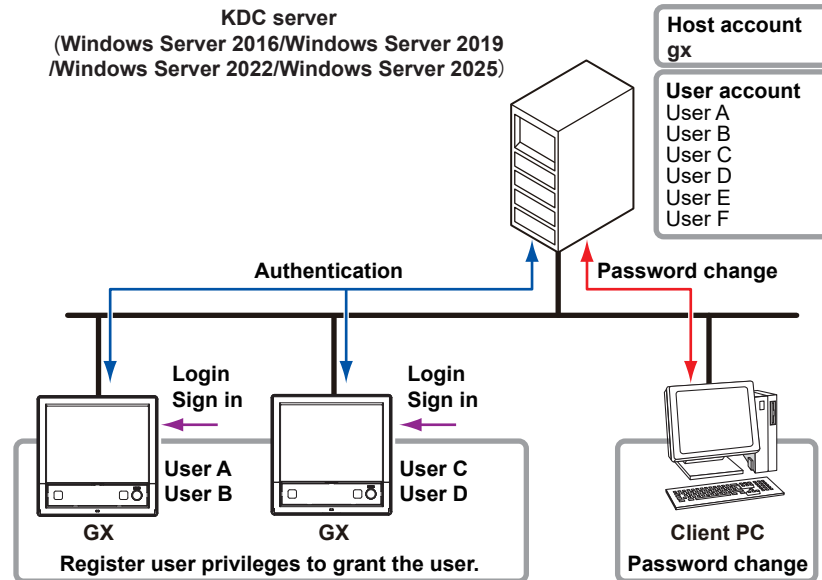

The authentication system consists of the devices listed below connected on an Ethernet.

- KDC server
Windows Server 2016, Windows Server 2019, Windows Server 2022 or Windows Server 2025. Manages the account of a GX/GP on the network (host account) and the user accounts for accessing the GX/GP.
- GX/GP
Of the user accounts on the KDC server, you can specify which accounts to use (login settings) on which GX/GPs. You can also set different user privileges for each user on each GX/GP.
- Client PC for maintenance
This device is used to change user account passwords and for other maintenance. It is not explained in this manual.

Operation

When you log in to the GX/GP or use the signature function, you will be prompted for a user name and password (the password management function does not use user IDs). The GX/GP will then perform the communication with the KDC server that is necessary for authentication. When authentication completes successfully, you can operate the GX/GP. The server manages the passwords and their expiration period. Monitor users (Monitor level users) are excluded from this function.

If the connection to the KDC server is broken, or if no users can be authenticated for some other reason, you can operate the GX/GP using a special user account (root).


► See Note in section 3.2.1, “Logging In and Out”.

Note

- You cannot change user account passwords from the GX/GP.

1.4.1 Cross Realm Authentication Function (Release number 5 (Version 5.03) and later)

Cross-realm authentication is a function that allows a user registered in one realm to log in to a GX/GP in another realm as long as that both realms share a parent-child trust. In this device, authentication is possible only between parent-child realms as shown in the figure below. Users registered in the parent realm can also log in to a GX/GP belonging to a child realm.

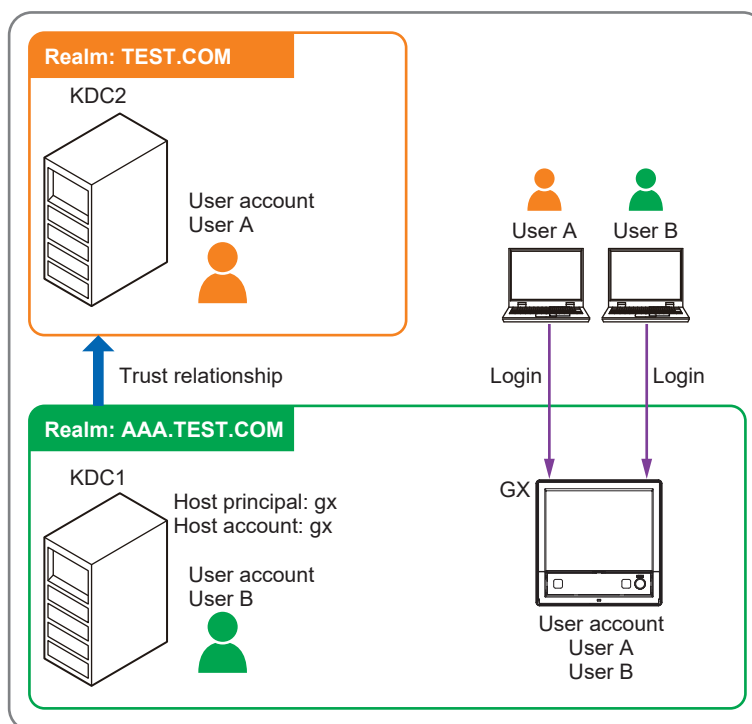


Note

- Authentication is only allowed between realms in parent-child relationships.
- A parent-child trust must be configured between realms.
- To use cross-realm authentication, you must set up a parent realm.
- Look up the user name in the child realm first, then the parent realm. If the parent realm and child realm have the same user name, log in as the user in the child realm.

1.5 Audit Trail Function

The audit trail function records histories of operations. It saves event logs and also setup files when the settings change. You do not need to perform any special settings to use this function.

The figure below indicates what items are recorded to the event log (operations and setting changes).

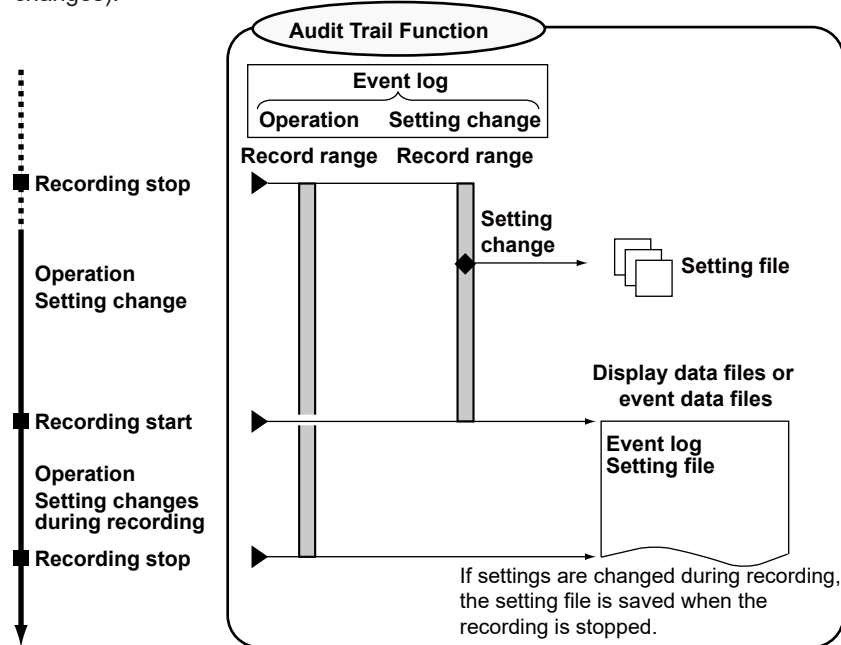

* Release number 4 (Version 4.07) and later

1.5.1 Information That Is Saved to Measurement Data Files

When measurement data files (display data or event data files) are saved, in addition to the measured data, a setup file and event log are also saved.

Setting File

A file that contains the settings that were in use when recording started. If the settings are changed during recording, you can view the changes in the event log.

Event Log

A history of operations and setting changes.
The event log is saved in the measurement data file.

Login Information

Information about the users who can operate the GX/GP.

1.5.2 Event Log

The event log records operations and setting changes on the GX/GP in chronological order. The event log is saved in the measurement data file.

- ▶ For information about the display, see section, 2.5.
- ▶ Description: section, Appendix 1

Recorded Operations

- Operations that affect the measured data, such as record start and message writing, are recorded. Error messages are also recorded.
 - Touch operations and START/STOP key operations, communication operations, remote-control operations, event-action operations, and automatic GX/GP operations (e.g., error messages) can be distinguished from each other.
 - Operations that do not affect the measured data, such as screen switching and display configuration changes, are not recorded.
- ▶ For details, see section, Appendix 1.

How the Event Log Is Saved

- The GX/GP can record up to 3000 operations and setting changes (log entries) in its internal memory. When the number of log entries exceeds 3000, the oldest log entries are overwritten.
- The log of events that occurred since the previous record stop to the current record stop is stored in the measurement data file (display or event data file). If the measurement data file is divided, each time a file is created, the event log up to that point is saved in the file.

Viewing the Event Log

- You can display the event logs in the internal memory on the GX/GP screen.
The GX/GP can display only the most recent 2000 events from a given event log.
- You can view event logs in measurement data files on the GX/GP screen or Universal Viewer (standard software).

How to Clear the Event Log

- The event logs in the internal memory are cleared if you execute Initialize all. However, you cannot execute initialization (clearing event logs) while recording is in progress.
- You cannot clear the event log in a measurement data file.

1.5.3 Login Information

A user's password may change during operation. The login information is the user name, user ID (when in use), and the password at the time that the measurement data file was created. To sign a measurement data file using the standard software (Universal Viewer), you must log in as a user that is registered in the login information in that file. You cannot view the login information.

- ▶ For information about the display, see the Universal Viewer Manual.

1.5.4 Event Log and Setting File When Recording Is Not in Progress

When you change the settings, the changes are logged in the event log. At the same time, a setting file is saved to the SET0 directory (fixed) on the SD memory card.

► For information about the display, see section, 2.5.

Note

- Make sure that the SD memory card is inserted when you change the settings. If the GX/GP is unable to save a setting file, it will display an error message, and you will not be able to finish changing the settings.
- Do not place a file named "SET0" in the SD card.

Logged Operations

Changes to the settings are logged. Setting file loading and setting initialization are also logged.

How Setting Files Are Saved

- A setting file is saved to the SD memory card when the settings are changed. If an SD memory card is not inserted at such an instant, an error occurs.
- The directory "SET0" is automatically created on the SD memory card, and a setting file (.GSL extension) is saved in the directory.
- The file name is generated automatically.

Structure		
<div> <div>7-digit</div> <div>Date, time</div> <div>Extension</div> </div> <p>Example: 000123_131231_174633.GSL</p>		
Item	Description	
7-digit	Consists of <div>6-digit number</div> + <div>1-character delimiter</div>	
	6-digit number	A sequence number in chronological order. The number ranges from 000001 to 999999. If the number reaches 999999, it returns to 000000.
	1-character delimiter	Starts with '_' and takes on the following values: A to Z and 0 to 9. If a file with the same name exists in the specified directory, the file is saved by changing the delimiter to prevent overwriting. Example: If a file named "000123_131231_174633.GSL" already exists, the file is saved to the name "000123A131231_174633.GSL."
Date	YYMMDD_hhmmss	YY: Year (lower two digits), MM: Month, DD: Day hh: Hour, mm: Minute, ss: Second
Extension	GSL	

Viewing a Setting File

You can use the standard software (Universal Viewer) to view the setting file contents that correspond to the relevant event log.

► For operating instructions, see the Universal Viewer Manual.

How the Event Log Is Saved

► See section 1.5.2, "Event Log".

1.5.5 Event Log and Setting File When Recording Is in Progress

The setting changes are recorded in the event log. You can configure the GX/GP to automatically write into the measured data a message indicating that the settings have changed. The GX/GP does not save a setting file.

► For the setting procedure, see section 1.10.4, "Setting Trend Display Conditions," in the User's Manual.

Logged Operations (Settings that can be changed during recording)

The following setting changes can be logged during recording.

However, the following limitations apply.

- The maximum number of settings that can be changed simultaneously is 100.
If this limit is exceeded, the setting changes cannot be saved.
If this limit is exceeded, you can either cancel the setting changes or stop recording to apply the setting changes. Save the setting changes before the number of changed settings exceeds 100.
- You cannot set multiple consecutive channels. (Only the first channel will be selected.)

Setup Item	
Alarm settings	On/Off
	Type
	Value
	Hysteresis
	Logging
	Output type
	Output No.
Calibration correction	Alarm delay
	Mode: Linearizer Approximation/Linearizer/Correction factor ²
	Number of set points
	Input value (1 to 12)
	Output value (1 to 12)
	Uncorrected value (1 to 12) ^{1,2}
	Instrument correction factor (1 to 12) ^{1,2}
Variable constants settings (Release number 4 (Version 4.07) and later)	Sensor correction factor (1 to 12) ^{1,2}
	W001 to W100
Data save settings	Save directory
Communication (Ethernet) settings	Recipient 1
	Recipient 2
	Sender
	Subject
User settings	User level
	Mode
	User name
	User ID
	Password
	Password expiration
	Admin property On/Off
	Admin authority number
	User property On/Off
	Authority number
	Sign in property On/Off
	Authority of sign in
Calibration reminder settings ²	On/Off
	Due date
	Daily reminder
	Re-notification cycle
	Buzzer
	Calibration correction setting
	Title
	Notification message 1
	Notification message 2

Continued on next page

1.5 Audit Trail Function

Setup Item	
Section setting for prediction	Trigger
	Reference channel Channel type
	Reference channel Channel number
	Section start Threshold
	Section start Condition
	Section stop Threshold
	Section stop Condition
	Repeat Starting condition
	Repeat Number of data

- 1 When the mode is set to correction factor.
- 2 To use the correction factor, the aerospace heat treatment (/AH option) must be installed in the GX/GP.

Writing Change Messages

You can configure the GX/GP so that a message is written automatically when any of the following settings are changed during recording.

Setup Item		Message
Alarm	On/Off	Alarm settings
	Type	
	Value	
	Hysteresis	
	Logging	
	Output type	
	Output No.	
Alarm delay	Alarm delay (hour/minute/second)	Alarm delay setting
Calibration correction	Mode	Calibration correction setting
	Number of set points	
	Input value (1 to 12)	
	Output value (1 to 12)	
	Uncorrected value (1 to 12) ¹	
	Instrument correction factor (1 to 12) ¹	
Variable constants (Release number 4 (Version 4.07) and later)	Sensor correction factor (1 to 12) ¹	W const settings
	Value	
Section setting for prediction (Release number 5 and later)	Trigger	Section setting for prediction
	Reference channel Channel type	
	Reference channel Channel number	
	Section start Threshold	
	Section start Condition	
	Section stop Threshold	
	Section stop Condition	
	Repeat Starting condition	
	Repeat Number of data	

- 1 When the mode is set to correction factor. To use the correction factor, the aerospace heat treatment (/AH option) must be installed in the GX/GP.

To do so, in **Display settings**, under **Trend settings**, you need to set **Message's Change message** to **On**.

► For the setting procedure, see section 1.10.4, "Setting Trend Display Conditions," in the User's Manual.

Setting Changes during Recording

You can change the following settings and perform the following file operations during recording. Administrators can perform all operations. Second administrator and users can only perform operations that have been permitted. The setting menu that appears varies depending on the operations that can be performed.

If settings are changed during recording, the setting file is saved when the recording is stopped.

Setting Changes

See section 1.5.5, "Event Log and Setting File When Recording Is in Progress" (described earlier).

File Operations

The file operations that you can perform during recording are shown below.

Load/Save Function	
Load display data	
Load event data	
Load settings	Setting parameters (only those that can be changed during recording)
	Scale image
	Report templates (when the /MT computation option is installed)
	Load trusted certificates (when the encryption function is enabled)
	Custom display (when the /CG custom display option is installed)
	Predictive detection model
	Profile trend (with communication channel (/MC option))*
Save settings	Setting parameters (only those that can be changed during recording)
	Scale image
	Report templates (when the /MT computation option is installed)
	Trusted certificates (when the encryption function is enabled)
	Custom display (when the /CG custom display option is installed)
	Predictive detection model
	Profile trend (with communication channel (/MC option))
File list	

* If the change message is On, the message "Profile Load" is written to the data when loaded during recording.

1.5.6 SET0 Directory Operations

Save Operation (When not using media FIFO)


If there is not enough free space on the SD memory card, the GX/GP cannot save the setting parameters in the internal memory to the SD memory card. When this happens, an error occurs, and the setting parameters cannot be changed. Use another SD memory card to save the data.

Save Operation (Always retain most recent data file/media FIFO)

The newest setting files can always be saved on the SD memory card. This method allows you to use the GX/GP continuously without having to replace the SD memory card.

► For the setting procedure, see section 1.14.2, "Setting the Save Method to Media (Auto save or manual save) and Media FIFO," in the User's Manual.

• Operation

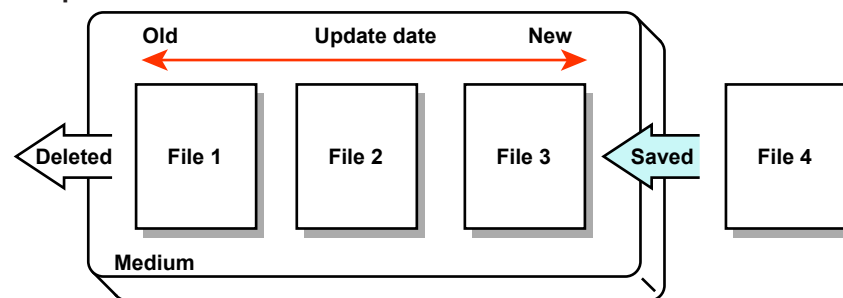

If there is not enough space to save a new file, the GX/GP deletes the oldest files and then saves the new file. This operation is referred to as FIFO (first in first out).

- FIFO is used only when the following files are saved automatically. When files are saved using other methods, FIFO is not used.
Setting File
- Files subject to deletion
All files in the destination directory, except for the ones listed below, are subject to deletion. Files not subject to deletion:
Hidden files, read-only files, files in the subdirectory within the save destination directory
- Up to the most recent 100 files are retained. If the number of files in the save destination directory exceeds 100, the number of files is held at 100 by deleting old files even if there is enough free space.
- If there are more than 100 files already in the save destination directory, one or more files are always deleted before saving the new file. The number of files does not remain at or below 100 in this case.
- Displaying Configuration Change Differences (release number 4 (version 4.07) and later) The files in the SET0 directory are used to display the difference. Displaying the difference may not be possible if FIFO is in use. If you replace the SD memory card, copy the SET0 directory to the new SD memory card.

1.5.7 Load the Profile Trend (PRF0 Directory Operations) (release number 5 and later) (with communication channel (/MC option))

Auto Save Timing

When the profile trend is loaded, it is saved to an external storage medium.

Save Operation (When not using media FIFO)

► See page 1-32 in section 1.5.6, "SET0 Directory Operations".

Save Operation (Always retain most recent data file/media FIFO)

Up to the most recent 200 files are retained in the PRF0 directory.

If the number of files exceeds 200, the number of files is held at 200 by deleting old files even if there is enough free space.

In addition, if the total file size in the directory exceeds 200 Mbytes, the latest files up to 200 Mbytes are retained.

► For media FIFO, page 1-32 in section 1.5.6, "SET0 Directory Operations".

File name

7-digit	Date	Extention
---------	------	-----------

Example: 000123_220331_174633.GPF

► For the file name, see page 1-10 in section 1.2.8, "Saving Data to External Storage Medium".

1.6 Signature Function

Signing is the act of attaching the following approval information to a measurement data file.

- Pass or fail judgment
 - Comment
 - Name of the user who attached the information and time when the information was attached
- For the setting procedure, see section, 2.2.
► For operating instructions, see section, 2.4.

1.6.1 Signable Files

Display and event data files (.GSD and .GSE extensions) can be signed.

Two Sign In Type

Set the sign in type to choose what types of measurement data files can be signed.

Sign In Type	Signable Data	
	When signing from the GX/GP	When signing from Universal Viewer
Batch	When the measured data from the start to stop of recording is contained in a single file.	When all the measurement data files from the start to stop of a recording are present. You can specify one file or multiple files.
Continuous	Each measurement data file.	Each measurement data file.

The “continuous” process type is useful when you are dealing with a continuously operating process, such as the monitoring of the air conditioning temperature. You can sign each measurement data file.

On the other hand, the “batch” process type is useful when you are dealing with a process such as one in which recording starts and stops in accordance with production. You cannot sign a unit of data unless all the files from the start to the stop of the recording are present. On the GX/GP, data files whose Sign in type is set to Batch and are divided from the start to stop of recording cannot be signed.

Such files need to be signed using the standard software (Universal Viewer).

1.6.2 Signature Privileges and Signatures

Users and Signature Privileges

- You can attach three signatures (Sign in 1, Sign in 2, and Sign in 3), each with different privileges, to a single display or event data file. For example, you could reserve Sign in 1 for the operator, Sign in 2 for the quality control supervisor, and Sign in 3 for the general supervisor.
- An administrator can attach signatures with any privilege.
- A second Administrator and user can only attach a signature that they have been given permission to attach.
- A signature with the same privilege can only be attached once. You cannot overwrite a signature.

Deleting and Changing Approval Information

You cannot delete or change the approval information that has been attached to a file.

1.6.3 Signing from the GX/GP

From the GX/GP, you can only sign measurement data files in the internal memory.

You can sign measurement data files that have been saved to an external storage medium using the standard PC software, Universal Viewer.

- You can show display or event data on the signature screen (historical trend screen) and sign it.
- You can configure the settings so that the signature screen (historical trend screen) appears automatically when recording stops.

- Viewing the data

When you sign a file, you can view the following information from the signature screen (historical trend screen).

- Measured value
- Data information (information about the displayed measurement data file)
- Event log (a history of the operations)
- Alarm summary
- Message summary

1.6.4 Signing Using the Standard PC Software (Universal Viewer)

You can sign measurement data files using Universal Viewer. A measurement data file can only be signed by a user with signature privileges who is registered in the login information of that measurement data file.

- For operating instructions, see the Universal Viewer Manual.

1.7 Unique Specifications of GX/GP with Advanced Security

1.7.1 Functions That Differ from Those of GX/GPs without Advanced Security or GX/GPs Whose Advanced Security Is Disabled

The main functions that have not been explained thus far in this manual that differ with the functions of GX/GPs without advanced security or GX/GPs whose advanced security is disabled are explained in the table below.

Item	Specification for GX/GPs with Advanced Security	Reference
Recording of display and event data	Display and event data cannot be recorded simultaneously.	For the setting procedure, see section 1.12 in the User's Manual.
Event data modes	You can only record event data at all times (free mode).	For the setting procedure, see section 1.12 in the User's Manual.
Event action function	Action cannot be set to Event trigger.	For the setting procedure, see section 1.19 in the User's Manual.
Operation lock function	Not available	—
Setting changes during recording	There are limitations on the settings that you can change during recording.	For an explanation, see section section, 1.5.5.
Automatic writing of messages when the settings are changed during recording	You can automatically write a message when the settings are changed during recording.	For the setting procedure, see section 1.10.4 in the User's Manual.
Data file format	Binary format only. The data is encrypted.	—
Operations performed on external storage media	Formatting and file deletion cannot be performed.	—
Loading of setting files	When you load a setting file onto the GX/GP from an external storage medium, the settings that can be loaded vary depending on the user level and recording status.	For the operating procedure, see section 1.25 in the User's Manual.
Web application	Monitor function only. The user cannot configure or operate the GX/GP.	—
Measurement mode	Fixed to [Normal]	page 2-1 in section 2.1, "Enabling/Disabling the Advanced Security Function"
PID Control module	Cannot be used (module not be recognized).	page 1-38 in section 1.8, "Advanced Security Limitations"
Program control (/PG option)	Cannot be used	—
Writing setting comments	<ul style="list-style-type: none"> • A comment can be recorded in the setting file when settings are changed. • A comment can be recorded in the event log when settings are changed. 	page 2-31 in section 2.6, "Entering Configuration Change Comments (Release number 4 (Version 4.07) and later)"
Profile channel (/MC)	Only the recording target channel can be set.	—

* Release number 4 (Version 4.07) and later

1.7.2 Functions That Differ from Those of the DX1000/DX1000N/DX2000

The main differences between the GX/GP advanced security function and the DX1000/DX1000N/DX2000 advanced security function are explained in the table below.

Item	Specification for DXs with Advanced Security	Specification for GX/GPs with Advanced Security	Reference
Setting modes	There are two modes: <i>Setting mode</i> , which is a mode for configuring settings, such as the input range and the measurement method, and <i>Basic setting mode</i> , which is a mode for configuring basic settings, such as the scan interval and the measured data save method.	There is no distinctions by modes.	—
Number of failed password entry attempts	You can select the number of failed password entry attempts that will result in a user being invalidated.	Same as the DX.	For the setting procedure, see section, 2.2.
Signature privilege settings	You can give or deny a user signature privileges for each signature level (Sign in 1, 2, and 3).	Same as the DX.	For the setting procedure, see section, 2.2..
Multi login	You can log in simultaneously through key operations and communication.	Same as the DX.	
Selecting a user name when logging in	When user IDs are being used, you can select the user name from a list when you log in (you do not have to enter the user name directly).	Same as the DX.	For operating instructions, see section, 2.3.
KDC server password management	You can manage user accounts and passwords from a KDC server on the network.	Same as the DX.	For the setting procedure and operating instructions, see Chapter 3.
Signature function	You can only sign files in the internal memory. You cannot sign files that have been loaded from the external memory. You can sign files from the historical trend display.	Same as the DX.	For operating instructions, see section, 2.4.
		You can sign files from the signature screen (historical trend screen).	For operating instructions, see section, 2.4.
Saving files	If the same file already exists in the save destination, it is overwritten.	Same as the DX.	For an explanation, see section, 1.1.
Settings that can be changed during recording	Alarm settings can be changed during recording.	Same as the DX.	For an explanation, see section, 1.5.5.
Logging of setting changes during recording	Setting changes are recorded in the operation log.	Setting changes are recorded in the event log.	For an explanation, see section, 1.5.
Alarm ACK	You can perform the alarm acknowledge operation using the FUNC key.	You can perform the alarm acknowledge operation by touching the screen.	For the operating procedure, see section 2.4 in the User's Manual.
Alarm delay time	Can be set to up to 24 hours.	Same as the DX.	For the setting procedure, see sections 1.2, 1.3, and 1.6 in the User's Manual.
Batch text fields	You can enter a text field at the start of recording.	Same as the DX.	For the operating procedure, see section 1.15 in the User's Manual.
Alarm ACK summary	There is no alarm acknowledge summary. Alarm acknowledge operations are recorded in the alarm summary and the operation log.	There is no alarm acknowledge summary. Alarm acknowledge operations are recorded in the event log and alarm summary.	
The "batch" process type (sign in type)	You can freely select the display-data file-save interval or the event-data data length from the listed options.	Same as the DX.	For the setting procedure, see section, 2.2.

1.8 Advanced Security Limitations

If you install the /AS option and enable advanced security, the following limitations are applied to the standard functions.

Item	When Advanced Security Is Disabled	When Advanced Security Is Enabled
Number of user registrations	50	100 (GX10/GP10/GX20-1/GP20-1) 200 (GX20-2/GP20-2) (Release number 4 (Version 4.07) and later)
Number of event logs	50	3000
Touch-operation security	Off, Login, Operation Lock	Off, Login
File type	Display data, event data, display data + event data	Display data, event data
Event data recording modes	Free, Single, Repeat	Free
Data save settings, file format	Binary, Text	Binary
Event action setting > Action	Event trigger action available	Event trigger action not available
Delete files on the external storage medium (SD memory card or USB memory card)	Yes	No
Format the external storage medium (SD memory card or USB memory card).	Yes	No
Web application	Monitor, configure, operate	Monitor
FTP server feature	Output the external storage medium list	Output the external storage medium list
	Transfer files stored in the external storage medium	Transfer files stored in the external storage medium
	Write files to the external storage medium	—
	Delete files stored on the external storage medium	—
	Output the internal memory list	Output the internal memory list
	Transfer files stored in the internal memory	Transfer files stored in the internal memory
Load setting parameters	Load passwords of registered users	Cannot load passwords of registered users (except monitor user) Administrator, second administrator, and user passwords are set to their default passwords.
Measurement mode	Setting available	Fixed to [Normal]
PID Control module	Using available	Cannot be used (module not be recognized).
Program control function (/PG option)	Using available	Cannot be used
Future Pen	Using available	Cannot be used

2.1 Enabling/Disabling the Advanced Security Function

You can enable and disable the advanced security function as you like. If you disable the advanced security function, the functions that you can use on the GX/GP are the same as those of the standard product.

If you change the advanced security settings, all data including recorded data will be initialized, and the GX/GP will restart.

You can set a password on the advanced security settings so that they cannot be changed without permission (only for operations performed from the GX/GP).

If the measurement mode is set to High speed or Dual interval, the advanced security function is disabled (fixed to Off) and cannot be changed. To enable the advanced security function, set the measurement mode to Normal.

Data Subject to Initialization

- All internal data
- All setting parameters including security settings (Contents ¹ of certificates are excluded)
- System configuration data ²

¹ Loading certificates or installing certificates/intermediate certificates

² You must reconfigure the system.

Path

GX/GP: **MENU** key > **Browse** tab > **Init/Calib** > Setting menu **Advanced security settings**
Hardware configurator: **System** tab > System config > **Option detail**

Description

Password settings

Setup Item	Selectable Range or Options	Default Value
On/Off	Off/On	Off
Password	Character string (up to 16 characters, [A a # 1])	—

On/Off

Set this to **On** to set a password on the advanced security settings.

If you set the password setting to On, the next time you want to change the advanced security settings, you will be prompted to enter the password.

Password

Set the password for the advanced security settings.

Characters that cannot be used in passwords: SP (space) ' ; DEL (7f)

Note

Be careful not to forget the password. If you do, you will not be able to change the advanced security settings.

Default password: default

Advanced security function

Setup Item	Selectable Range or Options	Default Value
On/Off	Off/On	On

On/Off

Set this to **On** to enable the advanced security function.
If you change this setting, all data including recorded data will be initialized, and the GX/GP will restart.

Execute

Enables the advanced security function
Tapping **Execute** displays a confirmation screen. If you tap **OK**, the GX/GP will restart, and the advanced security function will be enabled.
You cannot change the advanced security settings during recording or computation.

Note ////////////////////////////////////

- You cannot turn on or off the advanced security function from the Hardware Configurator.
- If the advanced security function is enabled, the measurement mode is fixed to Normal. To set the measurement mode to High speed or Dual interval, disable the advanced security function.

////////////////////////////////////

2.2 Registering Users and Setting the Signature Method

Procedure for Configuring the Login and Signature Features for the First Time

When the advanced security function is enabled, the GX/GP is configured so that you can operate it without logging in. First, register an administrator. After you register an administrator, a second administrator, a user, or a monitor user, you will have to log in before you can use the GX/GP.

► For an explanation of this function, see section 1.3, "Login Function" and section 1.6, "Signature Function".

2.2.1 Configuring the Security Function, Logout, Password Management Function, Password policy, Etc.

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **Security settings** > **Basic settings**

Hardware configurator: **Security settings** > **Security basic settings**

Description

Security function

Setup Item	Selectable Range or Options	Default Value
Touch operation	Off, Login	Off
Communication	Off, Login	Off

Touch operation

Set the type of touch screen security to apply.

Options	Description
Off	Disables the security function
Login	Enables the login function

Communication

To apply communication access security, set this to **Login**.

Options	Description
Off	Disables the security function
Login	Allows only registered users to access the GX/GP via communication

Note

If Touch operation is set to Login, configure User settings and User property and then save the settings. If you save immediately after setting Login, you will exit from the setup menu and be logged out. You must log in to configure User settings and User property.

Logout ¹

Setup Item	Selectable Range or Options	Default Value
Auto logout	Off/1min/2min/5min/10min	Off
Operation without Login	Off/On	Off

¹ Appears when Touch operation in Security settings is set to Login.

Auto logout

Options	Description
Off	Stays logged in until the user logs out.
1min to 10min	When you log in through touch operation, you will be automatically logged out when there is no activity for the specified duration.

This does not work for FTP server or Web application.

Use Timeout function to set the auto logout for Ethernet communication .

► See section 1.21.7, "Configuring the Server Function" in the User's Manual.

Operation without Login

Set the operations that users can carry out without being logged in.

Options	Description
Off	Allows only login operation.
On	Allows login operation and switching the operation screen

Password management

Setup Item	Selectable Range or Options	Default Value
On/Off	Off/On	Off
Root user password	Character string (between 6 and 20 characters, [Aa#1])	root123

On/Off

To perform password management using a KDC server on the Ethernet, select **On**.

Options	Description
Off	Disables KDC server password management
On	Enables KDC server password management

If you change the password management on/off setting, the user ID enable/disable setting is changed to Off. Also, the user IDs and passwords of all users will be initialized.

Before setting password management to On, we recommend that you perform a KDC server connection test to verify that a connection can be established with the KDC server.

► See section 3.1.3, "Testing the KDC Server Connection".

Note

Before setting password management to On, configure User settings, User property, and KDC client.

If you set password management to On, configure User settings, User property, and KDC client, and then save the settings. If you save immediately after specifying On, you will exit from the setup menu and be logged out. You need to perform authentication with the KDC server to configure User settings and User property.

Root user password

Set the password of the root user (this user name is fixed to "root").
The default password is "root123."

The root user is an emergency user account that you can use when users cannot log in to the GX/GP, such as when the KDC server is inaccessible.

If the KDC server is accessible and passwords can be managed, the root user cannot be used.

Password retry

Setup Item	Selectable Range or Options	Default Value
Password retry	Off, 3 times, 5 times	3 times

Password retry

Set a total number of failed password-entry attempts that results in user invalidation.

Options	Description
3, 5	Three or five failed password entry attempts result in user invalidation.
Off	Users are never invalidated, no matter how many times they enter the wrong password.

Note

If you set the password retry, be careful not to forget the password or mistype the password repetitively causing the user to be invalidated (user lock out).

User ID

Setup Item	Selectable Range or Options	Default Value
On/Off	Off/On	On

On/Off

Set whether to use user IDs for user registration.

Options	Description
Off	User IDs are not used to register users.
On	User IDs are used to register users.

If you change the user ID enable/disable setting, the user IDs and passwords of all users will be initialized.

Password policy (Release number 4 (Version 4.07) and later)

When changing a password, the password must conform to these password policy settings.

Setup Item	Selectable Range or Options	Default Value
Minimum character length	6 to 20	6
Upper case	Off/On	Off
Lower case	Off/On	Off
Numerical character	Off/On	Off
Symbol	Off/On	Off
Number of previous passwords ¹	1/3/5	1

¹ Version 4.09 and later.

Minimum character length

Set the minimum number of characters (6 to 20) for passwords.

Upper case

Set whether to include uppercase alphabet characters in the password conditions.

Options	Description
Off	Uppercase alphabetic characters are not included in the password conditions.
On	Uppercase alphabetic characters are included in the password conditions.

Lower case

Set whether to include lowercase alphabet characters in the password conditions.

Options	Description
Off	Lowercase alphabetic characters are not included in the password conditions.
On	Lowercase alphabetic characters are included in the password conditions.

Numerical character

Set whether to include numbers in the password conditions.

Options	Description
Off	Numbers are not included in the password conditions.
On	Numbers are included in the password conditions.

Symbol

Set whether to include symbols in the password conditions.

Options	Description
Off	Symbols are not included in the password conditions.
On	Symbols are included in the password conditions.

Valid symbols

ASCII symbols	
~	?
!	
@	=
#	+
\$	-
%	/
^	¥
&	
*	<
(>
)	{
"	}
,	[
.]
:	`

Invalid symbols

Symbols
'
:
SP (blank)
DEL (0x7f)

Number of previous passwords

When you change a password, you cannot set any password that has been saved as password history.

- The number of password histories includes the current password that you have set.
- If you change the settings for the number of password histories to save, the passwords that have been saved are cleared.
- If you change the user name settings, the passwords that have been saved are cleared.

Advanced notice of expiry data ¹ (Release number 4 (Version 4.07) and later)

Setup Item	Selectable Range or Options	Default Value
Notice	Off/5 days before/10 days before	Off

¹ This is displayed when the password management function On/Off is set to Off.

Notice

Advance notice of expiry date is displayed according to the setting immediately after login.

Options	Description
Off	Advance notice of expiry date is disabled.
5 days before	A notice is given when the user logs in within 5 days of the password expiry date.
10 days before	A notice is given when the user logs in within 10 days of the password expiry date.

If the password is expired at the time of login, a notification message is not displayed, and a screen is displayed for changing the password.

Admin/User/Sign inproperty (Release number 4 (Version 4.07) and later)

Setup Item	Selectable Range or Options	Default Value
Setting	On/Off select/On only	ON/Off select

Setting

This is set to reinforce the application of limitations to user levels "SecondAdmin" and "User."

Options	Description
On/Off select	Makes On or Off selectable for Admin property, User property, and Sign in property.
On only	Admin property, User property, and Sign in property are fix to On.

Changing values from comm command (Release number 4 (Version 4.07) and later) ¹

Setup Item	Selectable Range or Options	Default Value
Communication channel	Invalid/Valid	Invalid

¹ Appears when communication in Security function settings is set to Off.

Communication channel

Set this item when writing values to communication channels using communication commands (OCommCh).

Options	Description
Invalid	Disables writing to communication channels.
Valid	Enables writing to communication channels.

Note

Users whose user settings have changed are automatically logged out.

2.2.2 Registering Users

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **Security settings** > **User settings**¹

Hardware configurator: **Security settings** > **User settings**¹

¹ Appears when, in Basic settings, Touch operation or Communication of the security function is set to Login

Description

Setup Item	Selectable Range or Options	Default Value
User No.	1 to 100 (GX10/GP10/GX20-1/GP20-1) 1 to 200 (GX20-2/GP20-2) (Release number 4 (Version 4.07) and later)	Off

User No.

Select the user number to register.

User settings

Setup Item	Selectable Range or Options	Default Value
User level	Off/Admin ⁸ /SecondAdmin/User/Monitor	Off
Mode	Touch operation, Communication, Touch operation + operation + Communication	Touch operation + Communication
User name	Character string (between 1 to 20 characters, [Aa#1])	—
User ID ⁵	Character string (up to 20 characters, [Aa#1])	—
Initialize password	Back, Initialize password	—
Password expiration ²	Off, 1 month, 3 month, 6 month, 1 year	Off
Admin property ⁶	Off/On ⁹	Off
Admin Authority number ⁷	1 to 10	1
User property ¹	Off/On ⁹	Off
Authority number ³	1 to 10	1
Sign in property ¹	Off/On ⁹	Off
Authority of sign in ⁴	1 to 8	1

¹ Appears when the user level is set to SecondAdmin, User.

² Does not appear when the user level is set to Monitor.

³ Appears when the User property is set to On.

⁴ Appears when the Sign in property is set to On.

⁵ Does not appear when the user ID is disabled.

⁶ Appears when the user level is set to SecondAdmin.

⁷ Appears when the Admin property is set to On.

⁸ Cannot be set by second administrators.

⁹ When Admin/User/Sign in property is set to On only, this is fixed to On.

When password management is enabled, the user settings vary depending on the user level as shown below.

User level	Admin	SecondAdmin (Release number 4 (Version 4.07) and later)	User	Monitor
Setup Item	User No.	User No.	User No.	User No.
	User level	User level	User level	User level
	Mode	Mode	Mode	Mode
	User name	User name	User name	User name
		Admin property	User property	Initialize password
		Admin Authority number	Authority number	
		User property	Sign in property	
		Authority number	Authority of sign in	
		Sign in property		
		Authority of sign in		

User level

Set the user level.

The user level of User number 1 is fixed to Admin.

Options	Description
Admin	The system administrator. An administrator has access to all operations.
SecondAdmin (Release number 4 (Version 4.07) and later)	The second administrator. A second administrator can configure security settings that the administrator can, limit the range of operations that can be performed with administrator privileges, and limit the range of operations that can be performed with user privileges. A second administrator cannot perform A/D calibration, configure the advanced security settings, configure the encryption/certificate encryption function, or create keys for encryption/certificate. A second administrator cannot set the multi batch function on/off setting or load settings that include the multi batch function on/off setting. A second administrator cannot set the measurement mode. A second administrator cannot set the measurement mode.
User	A common user. A user cannot access security settings. In addition, a user cannot execute A/D calibration, configure advanced security settings, configure the encryption or the certificate encryption function, create keys, update the firmware, set the multi batch function on or off or load settings that include the multi batch function on/off setting. Nor can a user set the measurement mode. Limitations (user property) can be applied to the operations that a user can perform.
Monitor	A type of user that has access only to the monitor function. A monitor user can only change the password; the user cannot change settings or operate the GX/GP.

Note

We recommend that you register several administrators.

If there is only a single administrator and this administrator becomes locked as a result of forgetting the password or entering the password multiple times, there will be no way of unlocking the user.

Mode

Options	Description
Touch operation	You can log in to the GX/GP through touch operation.
Communication ¹	You can log in to the GX/GP via communication.
Touch operation + Communication	You can log in to the GX/GP through touch operation and communication.

¹ Communication cannot be specified for user number 1.

User name

Set the user name. Duplicate user names are not allowed.

User names cannot contain spaces. User names cannot be set to "PowerUser" or "root."

User ID

Set the user ID. You cannot set the user ID if password management is enabled.

User IDs cannot contain spaces.

Initialize password

Select **Initialize password** to initialize a password. To cancel the initialization, select **Back**.

► For the default value, see section 2.3.1, "Logging In".

Note

The password is set the first time you log in.

Password expiration

Options	Description
Off	The password will not expire.
1 month, 3 month, 6 month, 1 year	The GX/GP will prompt the user to change the password after the specified period of time passes.

This item cannot be set when:

- Password management is enabled.
- When the user level is Monitor.

Admin property (When the user level is SecondAdmin) (Release number 4 (Version 4.07) and later)

Set this to On to restrict the functions that second administrators can configure and use.

Admin Authority number (When the user level is SecondAdmin) (Release number 4 (Version 4.07) and later)

Set the admin authority number to apply restrictions to configuration and functions.

User property

Set this to **On** to restrict the functions that second administrator, users can use.

Authority number

Select the authority number to apply restrictions to functions.

►For details on how to set the user property, see section 2.2.4, "Setting User Properties".

Sign in property

Set this to **On** to restrict the sign in level that a second administrator, user can use to sign at.

Authority of sign in

Set the authority of sign in to restrict the signature.

►For details on how to set the "Sign in property," see section 2.2.6, "Setting Signature Restrictions".

2.2.3 Setting Administrator Properties (Release number 4 (Version 4.07) and later)

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **Security settings** > **Admin property**¹

Hardware configurator: **Security settings** > **Admin property**¹

¹ Appears when, in Basic settings, Touch operation or Communication of the security function is set to Login.

Admin Authority number

This is the admin authority number (1 to 10) used to apply restrictions to second administrators.

Security settings

Setup Item	Selectable Range or Options	Default Value
Basic settings	Free/Lock	Free
User settings	Free/Lock	Free
Admin property	Free/Lock	Free
User property	Free/Lock	Free
Sign in settings	Free/Lock	Free
Sign in property	Free/Lock	Free

Basic settings

Set this to Lock to restrict the settings below.

Security function, logout, password management function, password retry count, user ID, Admin/User/Sign in property, password policy, advance notice of expiry date, writing through communication commands

User settings

Set this to Lock to restrict the settings below.

User settings, User locked ACK

Admin property

Set this to Lock to restrict the settings below.

Admin property

User property

Set this to Lock to restrict the settings below.

User property, Web content selection tree

Sign in settings

Set this to Lock to restrict the settings below.

Sign in settings, sign in type, recording stop action, data file transfer, sign in title

Sign in property

Set this to Lock to restrict the settings below.

Sign in property

Operation

Setup Item	Selectable Range or Options	Default Value
Initialize	Free/Lock	Free
Reconfiguration	Free/Lock	Free
Certificate	Free/Lock	Free
Update	Free/Lock	Free

Initialize

Set this to Lock to restrict initialization operations.

Reconfiguration

Set this to Lock to restrict system reconfiguration and module activation operations.

Certificate

Set this to Lock to restrict the operations below.

Creating a self-signed certificate, creating a certificate signing request (CSRs), installing a certificate, deleting a server certificate, confirming a certificate

Update

Set this to Lock to restrict the operations below.

I/O module firmware update, Web application update

2.2.4 Setting User Properties

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **Security settings** > **User property**¹

Hardware configurator: **Security settings** > **User property**¹

¹ Appears when, in Basic settings, Touch operation or Communication of the security function is set to Login

Description

Setup Item	Selectable Range or Options	Default Value
Authority number	1 to 10	Off

Authority number

Select the authority number to apply user restrictions.

User property

Setup Item	Selectable Range or Options	Default Value
Record	Free/Lock	Free
Math	Free/Lock	Free
Data save	Free/Lock	Free
Message	Free/Lock	Free
Batch	Free/Lock	Free
AlarmACK	Free/Lock	Free
Communication	Free/Lock	Free
Touch operation	Free/Lock	Free
Time set	Free/Lock	Free
Setting operation	Free/Lock	Free
Calibration correction ¹	Free/Lock	Free
External media	Free/Lock	Free
System operation	Free/Lock	Free
Output operation	Free/Lock	Free

¹ Release number 2 (version 2.02) and later

Record

Set this to **Lock** to restrict record start/stop operation.

This also applies to the corresponding operation using **START/STOP** key.

Math

Set this to **Lock** to restrict the math operations below.

This also applies to the corresponding operations using the **START/STOP** key.

Operation
Math start
Math stop
Math reset
Math ACK
Individual math reset
Elapsed time start
Elapsed time stop
Elapsed time reset

Data save

Set this to **Lock** to restrict the data save operations below.

Operation
Save display data
Save event data
Manual sample
Snapshot
Timer reset
Match time timer reset

Message

Set this to **Lock** to restrict message writing operation.

Batch

Set this to **Lock** to restrict the batch operations below.

Operation

Write batch numbers

Write lot numbers

Write comments

Write in text fields

Predictive section start, stop, hold

AlarmACK

Set this to **Lock** to restrict alarm acknowledge operation (including individual alarm acknowledge operation).

Communication

Set this to **Lock** to restrict the communication operations below.

Operation

Start, stop, test E-Mail

FTP test

Obtain, release network Information

Printer output test

Manually recover Modbus master;

Manually recover Modbus client

Manually recover SLMP

Touch operation

Set this to **Lock** to restrict the touch operations below.

Operation

Register the standard display

Register favorites

Switch screen content

Switch the display rate

Manually recover Modbus master

Manually recover Modbus client

Time set

Set this to **Lock** to restrict manual SNTP server time adjustment, date/time adjustment, time zone settings, gradually adjusting the time settings, and daylight saving time settings.

If Lock has been configured for settings and operations, no change can be made to any setting, regardless of the limitations configured for time settings.

Setting operation

Set this to **Lock** to restrict all setting operations.

However, even if Setting operation is set to Lock, if calibration correction is set to Free and an AI module, communication channel are present, it will still be possible to set calibration correction and calibration reminder settings (/AH option) items.

Calibration correction

Set this to **Lock** to restrict the calibration correction of AI channel/communication channel settings and calibration reminder settings (/AH option).

External media

Set this to **Lock** to restrict the external media operations below.

Operation

Save and load files
Display a list of files
Manually save data
Manual save
Alarm save
Save stop
Create certificate signature request
Install certificate
Install intermediate certificates
Health monitor save

System operation

Set this to **Lock** to restrict the system operations below.

Operation

Initialize
System reconfiguration
Encryption/Certificate
Execute unverified certificate
Activate module

Output operation

Set this to **Lock** to restrict the internal switch operations whose type is Manual and relay operations whose range type is Manual, AO output operations, and communication channel operations.

2.2.5 Configuring the Sign in Settings**Path**

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **Security settings** > **Sign in settings**

Hardware configurator: **Security settings** > **Sign in settings** ¹

¹ Appears when, in Basic settings, Touch operation or Communication of the security function is set to Login

Description**Sign in type**

Setup Item	Selectable Range or Options	Default Value
Type	Batch, File	Batch

Type

Choose what types of measurement data files can be signed.

Options	Description
Batch	You can sign a collection of all the measurement data files from the start to stop of a recording. However, you can only sign a file from the GX/GP when the file covers the measured data of an entire recording, from start to stop. On the GX/GP, you can only sign measurement data files in the internal memory. You can sign measurement data files that have been saved to an external storage medium using Universal Viewer.
File	You can sign each individual measurement data file.

Recording stop action

Setup Item	Selectable Range or Options	Default Value
Sign in	Off/On	Off

Sign in

Set this to **On** to display a signature screen (historical trend screen) for signing in when recording is stopped through touch operation or the **START/STOP** key.

However, the following conditions apply.

- When the data file contains all the data from record start to record end
- When Sign in type is set to Batch
- When the user that stopped recording is allowed to sign
- When the screen is not displaying Setting, Save load, or Init/Calib.

Options	Description
On	The signature screen (historical trend display) appears automatically when recording is stopped.
Off	The screen does not change when recording is stopped.

Note

When the multi-batch function (/BT option) is enabled, the signature screen (historical trend display) does not appear automatically when recording is stopped in batch overview mode.

Data file transfer

Setup Item	Selectable Range or Options	Default Value
FTP transfer timing	Sign in, Data save	Data save

FTP transfer timing

Set whether to transfer data files via FTP when files are signed or when data is saved. The FTP client function must be configured for the FTP transfer to work.

► For the setting procedure, see section 1.21.2, "Setting the FTP Client Function." in the User's Manual

Options	Description
Sign in	Data files are transferred to the FTP server only when they are signed. Display data and event data are not transferred to the FTP server when data is saved. Other types of data are transferred. Also, the Transfer wait time settings are invalid; transfer is executed immediately.
Data save	Data files are transferred to the FTP server when the data is saved. The files are not transferred when they are signed.

Sign in title

Setup Item	Selectable Range or Options	Default Value
Sign in 1	Character string (up to 16 characters, <u>Aa#1</u>)	Signature1
Sign in 2		Signature2
Sign in 3		Signature3

Sign in 1 to 3

You can set titles for Sign in 1 to 3.

2.2.6 Setting Signature Restrictions

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **Security settings** > **Sign in property**¹

Hardware configurator: **Security settings** > **Sign in property** ¹

1 Appears when, in Basic settings, Touch operation or Communication of the security function is set to Login

Description

Setup Item	Selectable Range or Options	Default Value
Authority of sign in	1 to 8	1

Authority of sign in

Select the authority of sign in to restrict the signature.

Sign in property

Setup Item	Selectable Range or Options	Default Value
Sign in 1	Free/Lock	Free
Sign in 2	Free/Lock	Free
Sign in 3	Free/Lock	Free

Sign in 1 to 3

For Sign in 1 to 3, you can choose whether or not to give users signature privileges.

Options	Description
Free	The operation is enabled.
Lock	The operation is disabled.

2.2.7 Configuring the Comment Input Function for Setting Changes

You can enter comments to setting files that are saved when settings are changed.

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **System settings** > **Setting file**

Hardware configurator: **System settings** > **Setting file**

Description

Setup Item	Selectable Range or Options	Default Value
Setting file comment	Character string (up to 50 characters. Aa#1)	—

Setting file comment

Set the comment to attach to the setup file.

Configuration changes comment

Setup Item	Selectable Range or Options	Default Value
Input comment	Off/On	Off

Input comment

Set this to **On** to enter comments in setting files when settings are changed.

Configuration change comments are also recorded to the event log (comments that only include spaces are not allowed). (Release number 4 (Version 4.07) and later)

You can enter configuration change comments when recording is in progress. (Release number 4 (Version 4.07) and later)

Tapping **Save** displays a screen for setting and saving a comment.

The comment that you enter is set in Setting file comment.

Preset comments (Release number 4 (Version 4.07) and later)

Setup Item	Selectable Range or Options	Default Value
1 to 10	Character string (up to 50 characters, Aa#1)	Comment01 to Comment10

1 to 10


Set the preset comment for entering configuration change comments.

2.2.8 Activating Modules (for module swapping)

If you replace a module with another module (same type) after system reconfiguration, you need to activate the module or else the measured data will result in errors. If the identified module is different from the actual module, you can activate the module from the System information screen.
Only administrators, second administrators with reconfiguration privileges, and users with system operation privileges can perform this operation.

Procedure

1. Press **MENU**.
The menu screen appears.
2. Tap the **Browse** tab and then **System information**.
The system information screen appears.

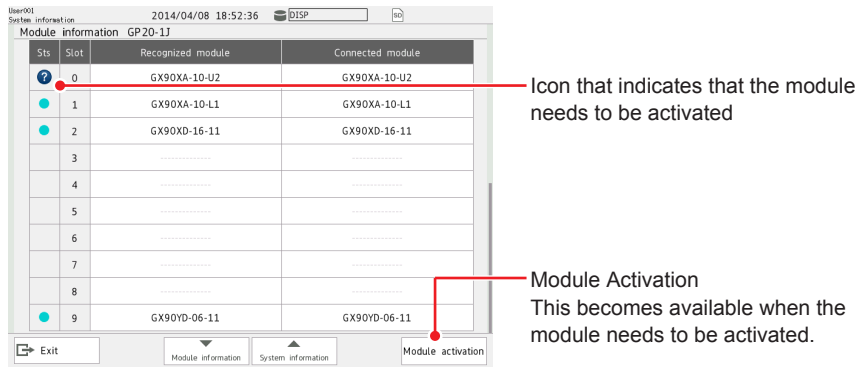

3. Tap **Activate module**.
The module will be activated.

Operation complete

Note

Be sure to turn off the power when removing or inserting modules. Removing or inserting modules with the power turned on may lead to malfunction.

2.2.9 Configuring the Alarm ACK Comments (Release number 4 (Version 4.07) and later)

You can enter a comment when you acknowledge an alarm.

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **System settings** > **Alarm basic settings**

Hardware configurator: **System settings** > **Alarm basic settings**

Description

Alarm ACK

Setup Item	Selectable Range or Options	Default Value
Input comment	Off/On	Off

Input comment

Set this to On to record comments in the event log (alarm ACK) when alarms are acknowledged.

Preset comments *

Setup Item	Selectable Range or Options	Default Value
1 to 10	Character string (up to 50 characters, Aa#1)	Comment01 to Comment10

* Appears when Input comment is set to On.

1 to 10

Set the preset comment that are entered when alarms are acknowledged.

2.2.10 Configuring the Automatic Delay Alarm Message Fundtion (Release number 5 (Version 5.06) and later)

With a delay upper/lower limit alarm, a message (fixed string) can be written automatically when the delay period count starts or stops.

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **System settings** > **Alarm basic settings**

Hardware configurator: **System settings** > **Alarm basic settings**

Description

Automatic Delay Alarm Message

Setup Item	Selectable Range or Options	Default Value
On/Off	Off/On	Off

On/Off

Set this to **On** to use the automatic delay alarm message function.


Options	Description	Fixed string to write
On	Writes a message when the delay period count starts	Delay detection start
	Writes a message when the delay period count stops	Delay detection end
Off	Turns off the Automatic Delay Alarm Message function	—

Explanation


Automatic Delay Alarm Message Function

An automatic message is written to all display groups even if the channels set for delay alarms are not assigned to a recording channel or display group.
When an alarm occurs or is cleared, no message is written.
If the alarm value has already been exceeded when the recording is started, the Delay detection start message will not be written.
During a delay alarm, if the alarm is deactivated by increasing the delay time, the Delay detection start message is not written.
If you are using the Multi-Batch function (/BT), it writes a message to all batch groups being recorded.

Message Format

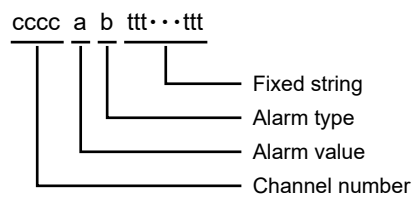

Example: (with a delay upper-limit alarm)

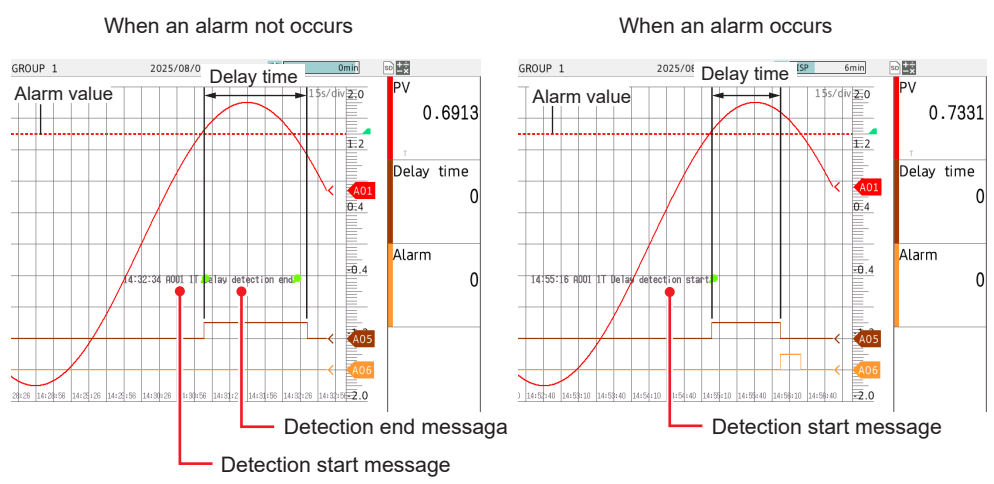


2.3 Logging In and Out

When you log in for the first time, you will be prompted to change the password.

► For information about the function, see section 1.3, “Login Function”.

Login Process

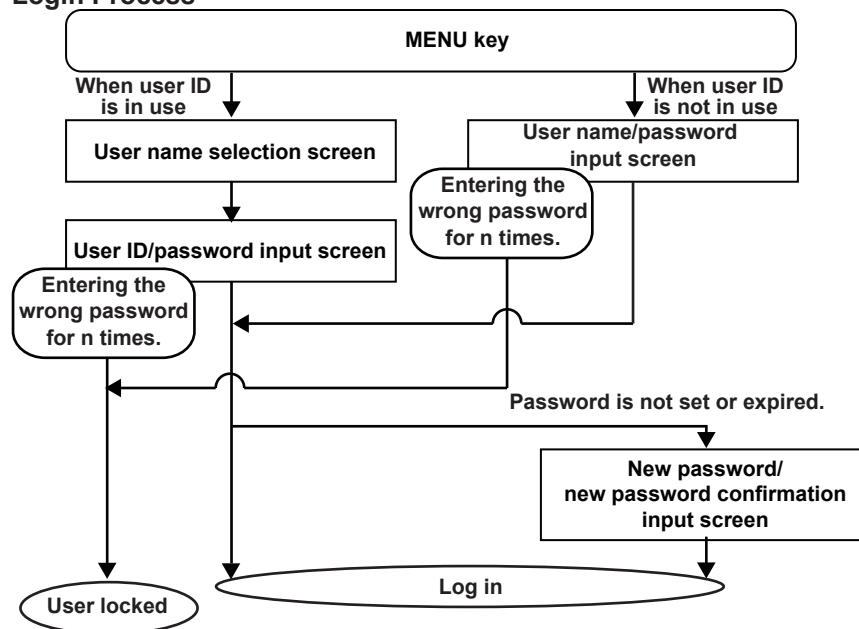

2.3.1 Logging In

Procedure

Logging In for the First Time (logging in before the password has been set)

1. Press **MENU**.
If the GX/GP is configured to use user IDs, a screen for selecting the user name opens.
If the GX/GP is configured to not use user IDs, a login screen (for entering the user name and password) appears.
Proceed to step 3.
2. Tap a user name.
A login screen (for entering the user ID and password) appears.
3. If the GX/GP is configured to use user IDs, set the user ID and default password, and tap **OK**.
If the GX/GP is configured to not use user IDs, set the user name and default password, and tap **OK**.
A screen with the default password appears.

User No.	Default User Name	Default User ID	Default Password
1	User001	Blank (no setting)	User001
2	User002	Blank (no setting)	User002
:	:	:	:
100	User100	Blank (no setting)	User100
101 *	User101	Blank (no setting)	User101
:	:	:	:
200 *	User200	Blank (no setting)	User200

* User numbers 101 to 200 are only for the GX20-2 and GP20-2. (Release number 4 (Version 4.07) and later)

4. Set a new password in New Password and New Password Again, and then tap **OK**. You will be logged in.

Note

- You cannot use the same combination of user ID and password as another user.
- Enter the password using up to 20 characters, `[Aa#1]`, according to the password policy settings.
- You cannot use a character string that contains the following characters: SP (space) ' ; DEL (7f)
- You cannot specify the same password as the current password.

Operation complete**When a Password Has Been Set**

1. Press **MENU**.
If the GX/GP is configured to use user IDs, a screen for selecting the user name opens.
If the GX/GP is configured to not use user IDs, a login screen (for entering the user name and password) appears.
Proceed to step 3.
2. Tap a user name.
A login screen (for entering the user ID and password) appears.
3. If the GX/GP is configured to use user IDs, set the user ID and password, and tap **OK**.
If the GX/GP is configured to not use user IDs, set the user name and password, and tap **OK**.
You will be logged in.

Operation complete**When the Password Is Expired**

A password expiration screen appears. Change the password (between 6 to 20 characters, `[Aa#1]`). You will be logged in.

Changing the Password (voluntary change)

After logging in, perform the procedure below.

1. Press **MENU**.
The menu screen appears.
2. Tap the **Universal** tab and then **Password change**.
The screen for changing the password appears.
3. Enter the appropriate values in Old Password, New Password, and New Password Again, and tap **OK**.
The password will be changed.

Operation complete**Note**

- If a password is set successfully, the password expiration will be updated.
- If password management is enabled, the screen for changing the password does not appear.

User Invalidation (User lock out) and Handling

If a user enters the wrong password for the specified number of times (Password retry), that user is invalidated and can no longer log in. The user-locked icon appears in the status area. Only administrators and second administrators with privileges can perform User Locked ACK and release invalid users.

If the passwords of all second administrators with privileges become invalid, only administrators can release invalid users.

GROUP 1 2013/12/06 17:54:41 EVENT

Note

If all the registered administrators are invalidated, administrators will no longer be able to log in (registered second administrator and users can still log in).

Icon that appears when all administrators have been invalidated:



Be sure to manage the passwords to prevent this from happening. If you become unable to log in as an administrator, contact your nearest Yokogawa dealer.

Icon display when an administrator or second administrator is invalid:




Blinks

In this state, there is an invalidated user. However, an administrator or second administrator with privileges is valid. Have this administrator or the second administrator with privileges initialize the password of the invalidated user to restore the validated state.

Clearing the User-Locked Icon (Only administrators or second administrators with privileges can perform this operation)

1. Log in as an administrator or second administrator with privileges.
2. Press **MENU**, and tap the **Universal** tab and then **User Locked ACK**.
The user-locked icon is cleared.

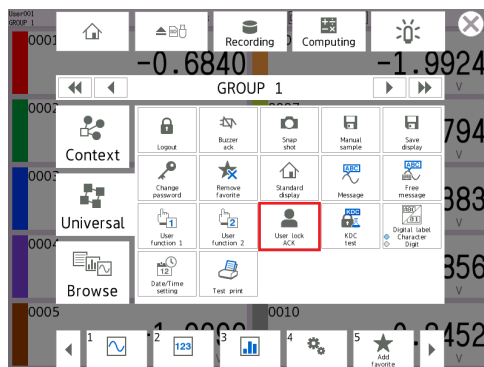

Operation complete

Note

The User-locked ACK icon appears when a user is invalidated and an administrator or second administrator with privileges logs in.

If the Touch operation of the security function is set to Off, the User-locked ACK icon appears without logging in when a user is invalidated.

Releasing the Invalid User Status and Logging in as an Invalidated User

1. An administrator or second administrator with privileges has to initialize the invalidated user's password to its default.
► For the setting procedure, see section 2.2.2, "Registering Users".
2. The invalidated user must then follow the procedure under "Logging In for the First Time (logging in before the password has been set)" to log in.

Operation complete

Notification When a User Lock Out Condition Occurs

E-mail Notification

An e-mail notification can be sent when a user lock out condition occurs.

The following settings are necessary:

- SMTP client settings
 - E-mail settings
 - For the setting procedure, see section 1.21.3, "Configuring the SMTP Client Function," and section 1.21.4, "Setting E-mail Transmission Conditions (When the SMTP client function is on)," in the User's Manual.
- For details on e-mail contents, see section 3.2.5, "E-mail Format," in the User's Manual.

DO Output

A signal can be output from a DO channel using the event action function when a user lock out condition occurs.

The following settings are necessary:

- DO channel range type
- Event action function
- For the setting procedure, see section 1.6, "Configuring DO Channels (Digital output channels)" in the User's Manual.
- For the setting procedure, see section 1.19, "Setting the Event Action Function" in the User's Manual.

Setting example: Output to DO channel 0201

DO channel (0201) setting

- Range
Type: Manual

Event action settings

- Event action number: 1
- Event action
On/Off: On
- Event
Type: Status
Event details: User lock out
Operation mode: Rising / Falling edge
- Action
Type: Relay On/Off
NO: 0201

Logged in User Status Output

A signal can be output from a DO channel using the event action function to indicate whether there are users that are logged in.

The following settings are necessary:

- DO channel range setting
- Event action function

► For the setting procedure, see section 1.6, “Configuring DO Channels (Digital output channels)” in the User’s Manual.

► For the setting procedure, see section 1.19, “Setting the Event Action Function” in the User’s Manual.

Setting example: Output to DO channel 0202

DO channel (0202) setting

- Range
Type: Manual

Event action settings

- Event action number: 2
- Event action
On/Off: On
- Event
Type: Status
Event details: Under login
Operation mode: Rising / Falling edge
- Action
Type: Relay On/Off
NO: 0202

Logging in to A/D Calibration Mode

To switch to A/D calibration mode, the logged-in user must be authenticated. There is no password protection for A/D calibration.

- 1.** Press **MENU**.
The menu screen appears.
- 2.** Tap the **Browse** tab, **Init/Calib**, and on the menu **A/D calibration > Execute**.
The user authentication screen appears.
- 3.** Enter the user name or user ID (when in use) of the logged-in user, and tap **OK**.
A screen appears for you to confirm the switch to A/D calibration mode.
- 4.** Tap **OK**.
The GX/GP restarts and enters A/D calibration mode.

Operation complete

► For instructions on how to use A/D calibration mode, start reading from in section 5.1.3, “Performing A/D Calibration and Adjusting the AI module Accuracy,” in the User’s Manual.

Password Expiration

See the earlier description.

Logging in to the Web Application

When you access the Web application, a login window appears.

Log in by entering the user name and password.

Even when password management is enabled, log in by entering the user name and password.

Only the users whose LoginSet settings are set as follows can log in to the Web application.

Item	Description
User level	Monitor
Mode	Touch operation + Communication or Communication

Logging into the FTP Server

Only the users whose LoginSet settings are set as follows can log in to the FTP server.

Item	Description
User level	Monitor
Mode	Touch operation + Communication or Communication

Alarm Confirmation When Recording is Stopped

If there are alarms that have not been acknowledged when recording is stopped using touch operation or the **START/STOP** key, an alarm confirmation warning message appears.

Tapping the Close icon for the warning message will clear the message, and you will be able to stop recording.

The warning message that appears when the **START/STOP** key is used appears only when the Confirmation screen under Record confirmation action is set to On.► See section 1.12.1, "Setting the Type of Data to Record (Display or event data) and Recording Conditions," in the User's Manual.

A warning message does not appear if recording is stopped by means other than touch operation or the **START/STOP** key.

2.3.2 Logging Out

Logging Out Using Touch Operation

1. Press **MENU**.
The menu screen appears.
2. Tap **Universal** and then **Logout**.
You will be logged out.

Operation complete

Auto Logout

When auto logout is enabled, users are logged out automatically if there are no touch operations for the specified period of time.

Other Methods of Logging Out

Item	Logout
Web application	Close the browser.
FTP server	Disconnect the FTP client connection.
General communication (Ethernet or serial communication)	Execute the logout communication command (Clogout).

2.4 Signing Display and Event Data

You can sign display and event data from the signature screen (historical trend display).


You can sign a unit of data when:

- You are logged in as a user with signature privileges.
- The files are in the internal memory (even if the data is in the internal memory, you cannot sign it unless it has been saved to files).
- The data has not already been signed in the same place.
- All the data that you want to sign can be displayed.
For example, the GX/GP can display up to 1000 alarms. You cannot sign a file that has more than 1000 alarms. In such a case, use the standard software (Universal Viewer) to sign.

Item	Condition
Alarm information	1000 or less
Event log information	2000 or less

- When Sign in type is set to Batch and the measured data from the start to stop of recording is contained in a single file. You cannot sign files that are divided from the start to stop of recording.

2.4.1 Signing Process

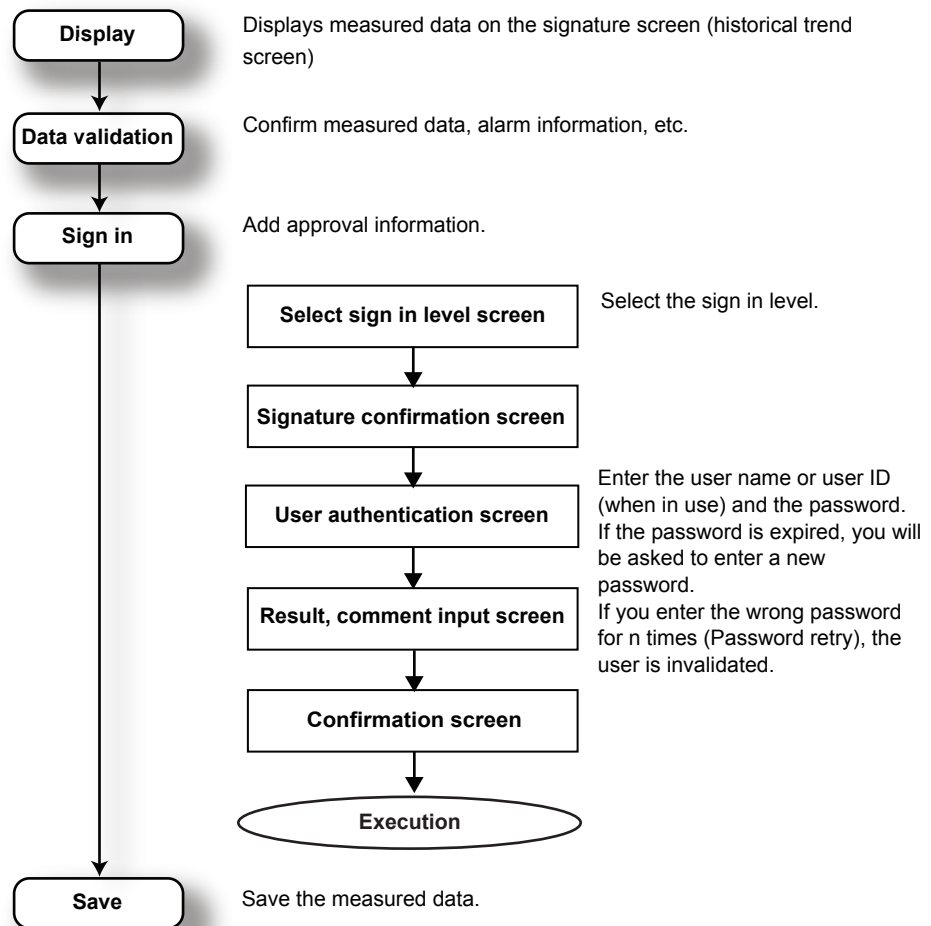

► For information about the function, see section 1.6, “Signature Function”.

2.4.2 Signing In

Procedure

Showing the Signature Screen

1. Press **MENU**.
The menu screen appears.
2. Tap the **Browse** tab and then **Memory summary/Data save**.
The memory summary appears.
3. Tap the data you want to sign.
The memory information screen appears.
4. Tap **Go to Sign in**. The signature screen (historical trend display) appears.
Tap the Sign in information to display it.

Operation complete

Go to Sign in is not displayed

- Data not saved to a file yet
- When Sign in type is set to Batch and the measured data from the start to stop of recording is divided into files.

Automatically Showing the Signature Screen (historical trend screen) When Recording Is Stopped

When Sign in for Recording stop action is set to On, the signature screen (historical trend screen) will appear when recording is stopped if the conditions are met.

- For the setting procedure, section 2.2.5, “Configuring the Sign in Settings”.

Viewing Information

On the signature screen (historical trend screen), perform the procedure below.

1. Press **MENU**.
The menu screen appears.
 2. Tap the **Context** tab and then the information screen icon to display.
The screen that you selected appears.
 - Alarm summary
 - Message summary
 - Event log
 - Data information
- For details on the displayed information, see section 2.3, “Displaying Various Types of Information,” in the User’s Manual.

Operation complete

Data Display Range on the Signature Screen

Only the recorded data in the selected data file is displayed.

Display Item	Display Range
Trend	Data in the data file
Alarm summary	The most recent 1000 data entries in the data file
Message summary	The most recent 450 data entries and 50 added entries in the data file
Event log	Contents of the event log

Signing Data (Attaching approval information)

On the signature screen (historical trend screen), perform the procedure below.

1. Press **MENU**.
The menu screen appears.
2. Tap **Context** and then **Go to Sign in**.
The Select sign in level screen appears.
You can also use the shortcut that appears when you tap the screen to switch to the Select sign in level screen.
3. Tap a sign in level. A sign in confirmation screen will appear. Tap **Yes**.
The user authentication screen appears.
4. Enter the user name or user ID (when in use) and the password, and tap **OK**.

Note

- If a user enters the wrong password for the specified number of times (Password retry), that user is invalidated and logged out. If this occurs, this user can no longer log in. The invalidated user must have an administrator reset their password to the default, and then the user must follow the procedure under “Logging In for the First Time (logging in before the password has been set)” in section 2.2, “Logging In and Out,” to set a new password.
- If the entered password is expired, a password change screen will appear.
You will not be able to sign until you change the password.

5. Set the Sign in information (Result, Comment), and tap **OK**.
The Confirm sign in screen appears.
For the comment, enter up to 32 characters.
6. Tap **Execute**.
The data is signed.
Tap Exit on the menu screen to exit from the signature screen (historical trend screen).

Operation complete**Signature Data Written in Data Files**

Item	Description
Result	Pass or fail judgment
Comment	Comment
User name	Name of the user that wrote the information
Signature time	Date and time when the information was written

Note

Added messages cannot be written in signed data files.


Viewing Signature Information (Sign In Information)

You can view signature information in data files on the Data information screen.

You can verify whether the data file loaded into the GX/GP is abnormal (changed by some means). If the file condition is abnormal, an icon indicating this condition appears in the File name line on the Data information screen.

You can display data information from the following context menus.


Screen
Historical trend screen
Historical trend screen > Alarm summary
Historical trend screen > Message summary
Historical trend screen > Event log
Signature screen
Signature screen > Alarm summary
Signature screen > Message summary
Signature screen > Event log

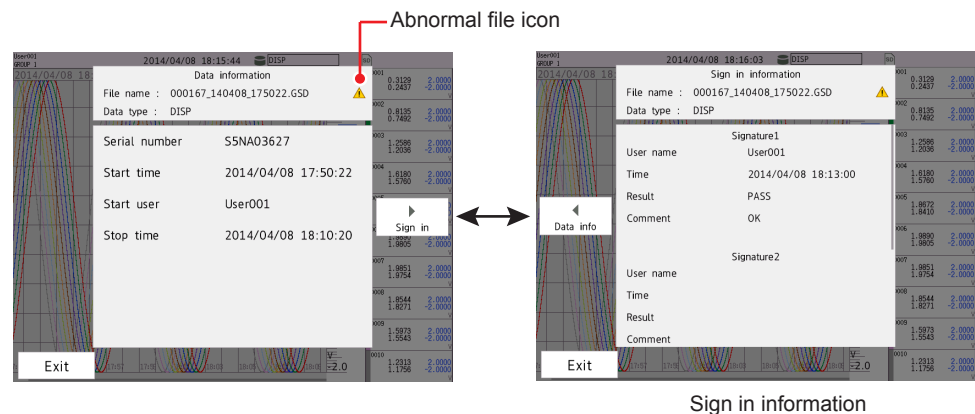

Viewing the Signature Status on the Memory Summary Screen

You can verify whether data files have been signed on the memory summary screen.

An icon indicating the signature status is displayed for each data file.

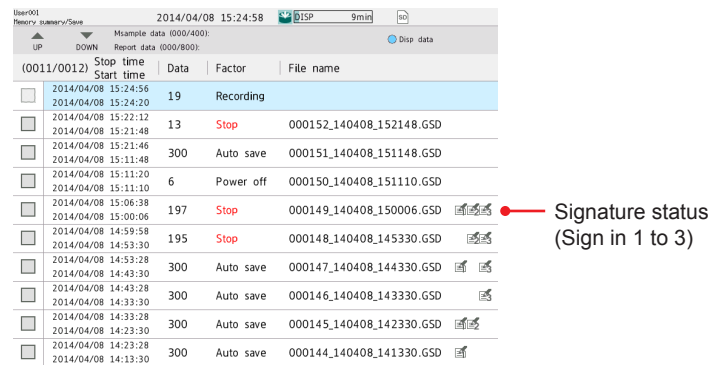

2.5 Viewing the Event Log

Procedure

1. Press **MENU**.
The menu screen appears.
2. Tap the **Browse** tab and then **Log**.
The log select screen appears.
3. Tap **Event**.
The event log appears.
Tap an entry to display detailed information.

Scroll

Tap an event item to display detailed information.

Detailed information

Time	2014/04/07 19:26:44
Action	SetParameter
Factor	OPERATE
User	User001
Setting file name	001445_140407_192644.GSL

Common items

Details

Common items
Time: When the event was recorded
Action: Description
Factor: Event type
User name: Name of the user operating
Batch¹: Target batch group number

Details
Item of each event
For details, see the event log list in appendix 1.

User name
Operation method
Operation
Date and time

Drag or flick to scroll.

► For details on the event log, see section Appendix 1, "Event Log Contents".

1 A Batch column is displayed when the multi batch function (/BT option) is enabled.

Operation complete

You can display event logs from the following context menus.

Screen

Historical trend screen

Trend

Alarm summary

Message summary

Signature screen

Trend

Alarm summary

Message summary

2.6 Entering Configuration Change Comments (Release number 4 (Version 4.07) and later)


If you want to use this function, Input Comment must be set to On under Setting file in System settings.

Procedure

You can perform this operation after saving the configuration changes.


Entering a comment directly

1. Tap Comment, and enter the comment.

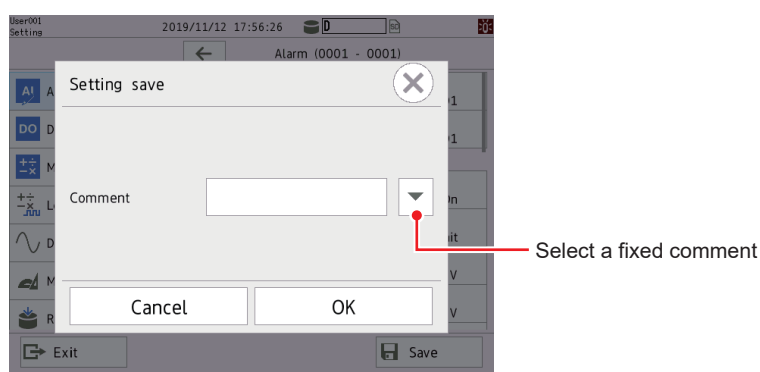

Selecting a fixed comment

1. Tap the drop-down icon (▾), and select from a list of fixed comments that appear. After selecting a fixed comment, you can edit the content of the comment.

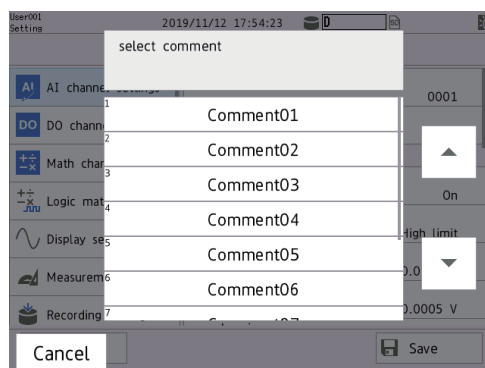

2. Tap the OK
The comment is saved in the setting file and event log.

Note

- The setting file is not saved when recording is in progress.
- If a comment has not been entered, you cannot save the settings.

Operation complete

2.7 Entering Alarm ACK Comments (Release number 4 (Version 4.07) and later)


If you want to use this function, Input Comment must be set to On under Alarm basic settings in System settings.

Procedure


You can perform this operation after an alarm occurs.

Acknowledging all Alarms

1. Press MENU.
The menu screen appears.
2. Tap the Alarm icon.
An alarm ACK confirmation screen appears.

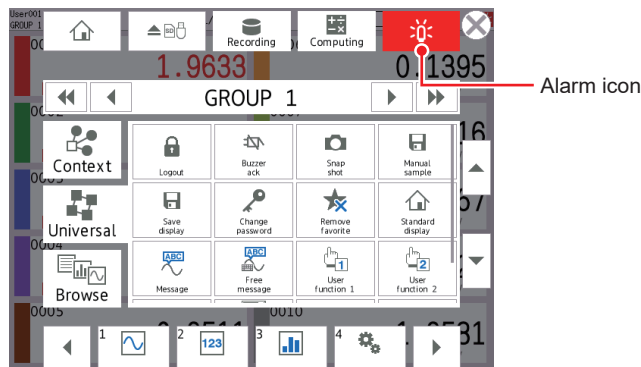


3. Tap OK.
An alarm ACK comment input screen appears.

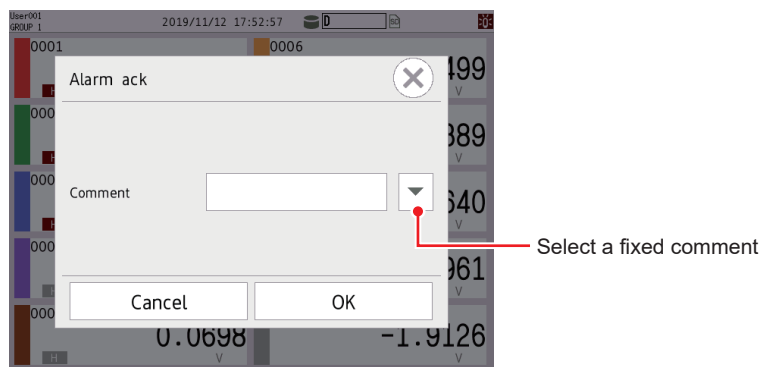

Entering a comment directly

4. Tap Comment, and enter the comment.

Selecting a fixed comment

4. Tap the drop-down icon (), and select from a list of fixed comments that appear. After selecting a fixed comment, you can edit the content of the comment.




5. Tap OK.
An alarm ACK is executed, and the comment is recorded in the event log (alarm ACK).

Operation complete

Acknowledging individual alarms

If you want to use this function, Individual alarm ACK must be set to On under Alarm basic settings in System settings.

1. Tap the digital display area of a channel.
The channel information appears.
2. Tap the Alarm icon.
The alarm acknowledge confirmation screen appears.

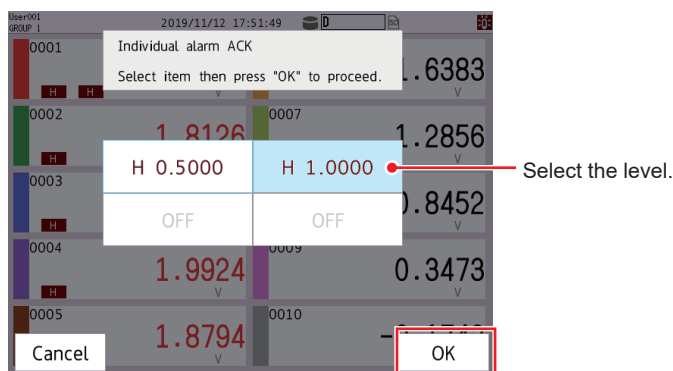


3. Select the level to acknowledge, and tap OK.
An alarm ACK comment input screen appears.
4. The rest of the procedure is the same as the procedure from step 4 for acknowledging all alarms.

Operation complete

2.8 Displaying Configuration Change Differences (Release number 4 (Version 4.07) and later)

Procedure

1. Press MENU.
The menu screen appears.
2. Tap the Browse tab and then Log.
The log select screen appears.
3. From the log display, tap the configuration difference log.
The Detail information screen appears.
4. From the log display, tap the configuration difference log.
The Detail information screen appears.

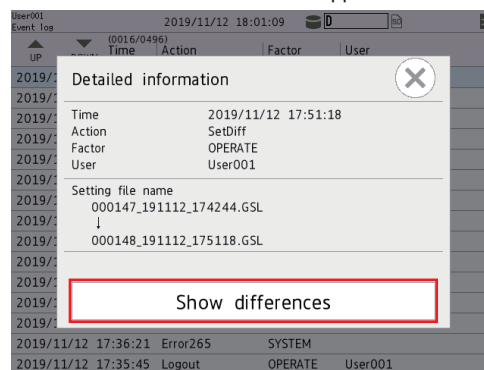


Switching to the difference display screen is only possible from the event log.
You cannot register the difference display screen as a favorite screen or assign the screen to the standard display or multi panel screen.

5. Tap OK.
The configuration differences are displayed.

If the corresponding files are not available, an error will occur.

Setting title

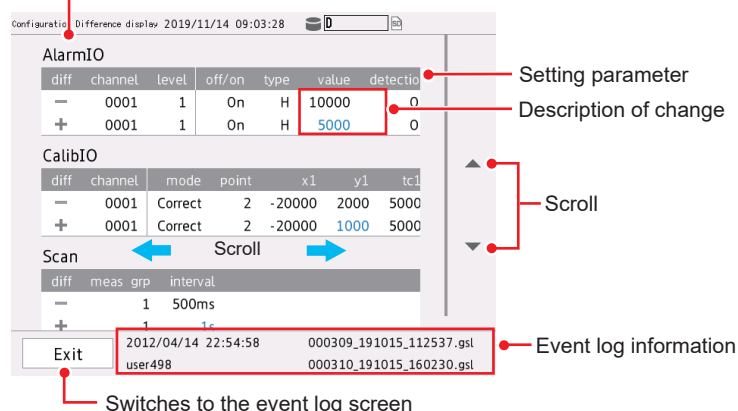

Settings are displayed in the communication command format. For details about communication commands, see the Communication Command Manual (IM 04L51B01-17EN).


Configuration differences that are off the screen can be displayed by flicking or using the scroll icons.

Operation complete

When the Number of Differences Exceeds a Given Number

Settings that were changed are listed using setting command names.

When you click a setting command, the differences are displayed.

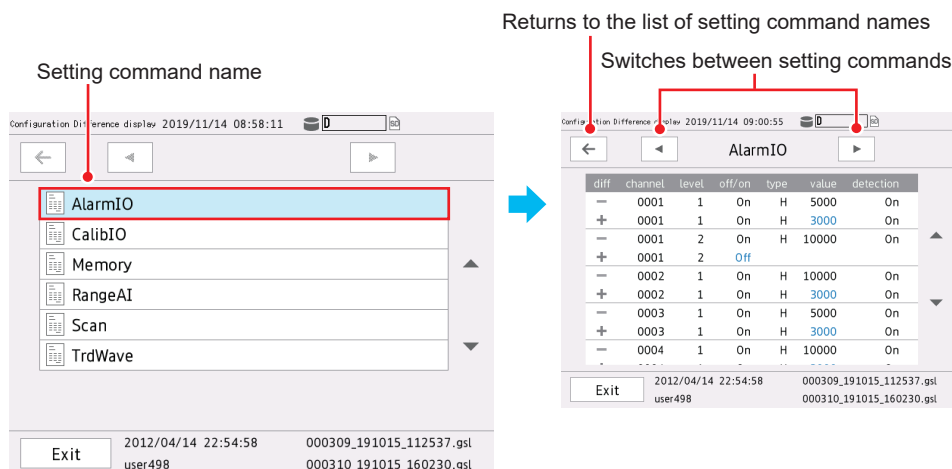**Note**

The files in the SET0 directory of the SD memory card are used to display the differences. Differences cannot be displayed if an SD memory card is not inserted or the applicable files are not in the SET0 directory.

If there is a system mismatch between the old setting file and new setting file, the differences cannot be displayed. A system mismatch will occur in the following cases.

- If the I/O module configuration is changed when the system is reconfigured
- When the multi batch on/off state is changed

However, the following does not correspond to a system mismatch, so the differences can be displayed.

- When a module is replaced and the module is activated.

Displaying the differences is not possible in the following case.

- When you change the settings for the first time after updating the firmware

The following parameters will be ***** on the difference display screen regardless of whether or not there are differences.

Command	Parameter
SKdc	root user password
SUser	User name
	Password
	User ID
SOpePass	Password
SFtpCnct	Password
SSmtpCnct	Password
SAuthKey	Password

The maximum size of differences information that can be displayed on the GX/GP is as follows.

When the upper limit is exceeded, an error message E997 (Display memory shortage.) will appear.

If the differences cannot be displayed on the main unit, use the Web application or Universal Viewer.

Item	Maximum displayable size
Number of difference	10000
Setting file size	1 MB

List of setup commands that are compared

The setting title is displayed with the first character of the command excluded.
Detail for commands, refer to Communication Command User's Manual (IM 04L51B01-17EN).

Setup Item		Commnad	Setup Title
Security settings	Password management settings	SKdc	Kdc
	Security settings	SSecurity	Security
	Operation lock function password settings	SOpePass	OpePass
	Operation lock details settings	SOpeLimit	OpeLimit
	Password policy	SPassPolicy	PassPolicy
	Advance notice of expiry date	SPassNotice	PassNotice
	User settings	SUser	User
	Authority of user settings	SUserLimit	UserLimit
	Admin property	SAdminLimit	AdminLimit
	Sign in settings	SSignIn	SignIn
	Sign in title settings	SSignInTitle	SignInTitle
	Sign in property	SSignInLimit	SignInLimit
	Web custom menu settings	SWebCustomMenu	WebCustomMenu
System settings	Changing values from comm command	SChgComm	ChgComm
	Time Zone settings	STimeZone	TimeZone
	Gradual time adjustment settings	SDateBasic	DateBasic
	Date format settings	SDateFormat	DateFormat
	Daylight saving time settings	SDst	Dst
	Language settings	SLang	Lang
	Temperature unit settings	STemp	Temp
	Decimal point type settings	SDPoint	DPoint
	Status relay Fail relay settings	SFailAct	FailAct
	Status relay Status settings	SFailSts	FailSts
	Printer settings	SPrinter	Printer
	LED settings	SLed	Led
	Sound settings	SSound	Sound
	Instruments tag settings	SInstruTag	InstruTag
	Setting file comment settings	SConfCmt	ConfCmt
	Changes comment settings	SSetComment	SetComment
	Preset comments	SFixedConfCmt	FixedConfCmt
	USB input device settings	SUsbInput	UsbInput
Measurement mode settings	Measurement mode settings	SScanGroup	ScanGroup
	Scan Group settings		
	Scan Interval settings	SScan	Scan
	AI Module settings	SModeAI	ModeAI
	Current input type AI module settings	SModeAICurrent	ModeAICurrent
	DI module settings	SModeDI	ModeDI
	PID control module settings	SModePID	ModePID
	Value on over-range settings	SScaleOver	ScaleOver
	Upper and lower burnout limits of AI module settings	SBOLmtAI	BOLmtAI
	Upper and lower burnout limits of current input type AI module settings	SBOLmtAICurrent	BOLmtAICurrent
Serial basic settings	Basics settings	SSerialBasic	SerialBasic
Alarm basic settings	Rate-of-change alarm interval settings	SAlmLimit	AlmLimit
	Individual alarm ACK settings	SIndivAlmACK	IndivAlmACK
	Alarm display Hold/Nonhold settings	SAlmSts	AlmSts
	Alarm ACK comment settings	SAlmACKCmt	AlmACKCmt
	Alarm ACK preset comment settings	SFixedAlmACKCmt	FixedAlmACKCmt
	Automatic Delay Alarm Message	SDlyAlmAutoMsg	DlyAlmAutoMsg
Recording channel settings	Channel for recording display data settings	SRecDisp	RecDisp
	Channel for recording event data settings	SRecEvent	RecEvent
	Channel for recording manual sampled data settings	SRecManual	RecManual
Recording basic settings	Recording mode settings	SMemory	Memory
	Record confirmation action settings	SMemKeyConfirm	MemKeyConfirm
	Display data recording	SDispData	DispData
	Event data recording settings	SEventData	EventData

Continued on the next page

2.8 Displaying Configuration Change Differences (Release number 4 (Version 4.07) and later)

Setup Item		Commnad	Setup Title
Batch settings	Batch settings	Batch function settings	SBatch
		Batch text settings	STextField
		Batch text settings	SMitTextField
Data save settings	Data save settings	Name of directory to save data settings	SDirectory
		File header settings	SFileHead
		File header settings	SMitFileHead
		File naming rule settings	SFileName
		File naming rule settings	SMitFileName
		Automatic data file saving settings	SMediaSave
		Display/Event data file format settings	SFileFormat
Internal switch settings		Internal switch operation settings	SSwitch
AI channel settings (AI/DI/DO) settings	AI channel range settings		SRangeAI
		Current input type AI channel range settings	SRangeAICurrent
		Pulse input channel range settings	SRangePulse
		DI channel range settings	SRangeDI
		DO channel range settings	SRangeDO
		AO channel range settings	SRangeAO
		AI/Puse input Moving average settings channel settings	SMoveAve
		Sensor burns out settings	SBurnOut
		Reference junction compensation method settings	SRjc
		Alarm settings	SAlarmIO
		Alarm hysteresis settings	SAlmHysIO
		Alarm delay time settings	SAlmDlyIO
		Tag settings	STagIO
		Channel color settings	SColorIO
		Waveform display zone settings	SZoneIO
		Scale display settings	SScaleIO
		Bar graph display settings	SBarIO
		Partial expanded display settings	SPartialIO
		Color scale band settings	SBandIO
		Alarm point mark	SAlmMarkIO
		Upper/Lower limit display characters settings	SValueIO
		Calibration correction settings	SCalibIO
		AO preset action settings	SPreSetAO
Logic math settings		Logic math expression settings	SLogicMath
Math channel settings	Math action settings	Constant settings	SMathBasic
		Variable constant settings	SKConst
		Computation expression settings	SWConst
		TLOG settings	SRangeMath
		Rolling average settings	STlogMath
		F-Value settings	SRolAveMath
		Alarm hysteresis settings	SFValue
		Alarm delay time settings	SAlmHysMath
		Tag settings	SAlmDlyMath
		Channel color settings	STagMath
		Waveform display zone settings	SColorMath
		Scale display settings	SZoneMath
		Bar graph display settings	SScaleMath
		Partial expanded display settings	SBarMath
		Color scale band settings	SPartialMath
		Alarm mark settings	SBandMath
			SAlmMarkMath
Communication channel settings	Measurement range settings	Preset operation settings	SRangeCom
		Watchdog timer settings	SValueCom
		Alarm settings	SWDCom
		Alarm hysteresis settings	SAlarmCom
		Alarm delay time settings	SAlmHysCom
		Tag settings	SAlmDlyCom
		Channel color settings	STagCom
		Waveform display zone settings	SColorCom
		Scale display settings	SZoneCom
		Bar graph display settings	SScaleCom
		Partial expanded display settings	SBarCom
		Color scale band settings	SPartialCom
		Alarm mark settings	SBandCom
			SAlmMarkCom

Continued on the next page

2.8 Displaying Configuration Change Differences (Release number 4 (Version 4.07) and later)

Setup Item		Commnad	Setup Title
Communication channel settings	Calibration correction Use/Not	SCalibUseCom	CalibUseCom
	Calibration correction details	SCalibCom	CalibCom
Report settings	Report type settings	SReport	Report
	Report data settings	SRepData	RepData
	Report output settings	SRepTemp	RepTemp
	Electronic signature inclusion settings	SDigitalSign	DigitalSign
	Batch information output settings	SRepBatchInfo	RepBatchInfo
	Report channel settings	SRepCh	RepCh
Timer settings	Timer settings	STimer	Timer
	Match time timer settings	SMatchTimer	MatchTimer
Event action settings	Event action settings	SEventAct	EventAct
Ethernet communication settings	IP address information settings	SIpAddress	IpAddress
	Client function settings	SClient	Client
	Client communication encryption settings	SClientEncrypt	ClientEncrypt
	DNS information settings	SDns	Dns
	DHCP client settings	SDhcp	Dhcp
	File to transfer via FTP settings	SFtpKind	FtpKind
	FTP transfer time shift settings	SFtpTime	FtpTime
	FTP client connection destination server settings	SFtpCnct	FtpCnct
	SMTP user authentication settings	SSmtpLogin	SmtplLogin
	SMTP client connection destination server settings	SSmtpCnct	SmtplCnct
	Mail header settings	SMailHead	MailHead
	Common section of the mail body settings	SMailBasic	MailBasic
	Destination and behavior for each mail type settings	SMail	Mail
	Alarm notification mail target alarm detection method settings	SMailAlarmDetect	MailAlarmDetect
	Alarm notification mail target channels settings	SMailAlarm	MailAlarm
	Alarm notification mail target alarm levels settings	SMailAlarmLevel	MailAlarmLevel
	Scheduled transmission times settings	SMailTime	MailTime
	SNTP client settings	SSntpCnct	SntpCnct
	Modbus client operation settings	SModClient	ModClient
	Modbus client connection destination server settings	SModCList	ModCList
	Modbus client transmission command settings	SModCCmd	ModCCmd
	Server communication encryption settings	SServerEncrypt	ServerEncrypt
	Server function settings	SServer	Server
	Keepalive settings	SKeepAlive	KeepAlive
	Communication timeout settings	STimeOut	TimeOut
	FTP server directory output format settings	SFtpFormat	FtpFormat
	Modbus server delay response settings	SModDelay	ModDelay
	Modbus server connection limit settings	SModLimit	ModLimit
	IP address to allow connection to modbus server settings	SModList	ModList
	WT communication connection server settings	SWattList	WattList
	WT communication operation settings	SWattClient	WattClient
	WT data allocation to communication channel settings	SWattData	WattData
	KDC connection destination settings	SKdcCnct	KdcCnct
	Certification key settings	SAuthKey	AuthKey
	Cross realm authentication	SCrsBasic	CrsBasic
	Trusted domain	SCrsCnct	CrsCnct
	Darwin channel conversion (Darwin compatible communication) settings	SDarwinCnvCh	DarwinCnvCh
	Port limitation of DARWIN compatible communication settings	SDarwinPortLimit	DarwinPortLimit
	SLMP client operation settings	SSLMPClient	SLMPClient

Continued on the next page

2.8 Displaying Configuration Change Differences (Release number 4 (Version 4.07) and later)

Setup Item		Commnad	Setup Title
	SLMP connection destination server settings	SSLMPCList	SLMPCList
	SLMP client transmission command settings	SSLMPCCmd	SLMPCCmd
Modbus client connect limits function	Modbus master settings	SModMaster	ModMaster
	Modbus master transmission command settings	SModMCmd	ModMCmd
	Auto logout for serial communication settings	SSerialAutoLOut	SerialAutoLOut
Reminder function settings	Schedule management settings	SSchedule	Schedule
	Schedule management text settings	SScheduleText	ScheduleText
Display settings	LCD settings	SLcd	Lcd
	View angle settings	SViewAngle	ViewAngle
	Screen background color settings	SBackColor	BackColor
	Automatic group switching time settings	SGrpChange	GrpChange
	Jump default display operation settings	SAutoJump	AutoJump
	Calendar display format settings	SCalFormat	CalFormat
	Bar graph display direction settings	SBarDirect	BarDirect
	Value modification from the monitor settings	SChgMonitor	ChgMonitor
	Trend waveform display settings	STrdWave	TrdWave
	Scale settings	STrdScale	TrdScale
	Trend line width, grid settings	STrdLine	TrdLine
	Trend Interval switching settings	STrdRate	TrdRate
	Trend type settings	STrdKind	TrdKind
	Partial expanded trend display settings	STrdPartial	TrdPartial
	Message writing settings	SMsgBasic	MsgBasic
	Display group settings	SGroup	Group
	Display group settings	SMltGroup	MltGroup
	Display group trip line settings	STripLine	TripLine
	Display group trip line settings	SMltTripLine	MltTripLine
	Scale bitmap image usage settings	SSclBmp	SclBmp
	Scale bitmap image usage settings	SMltSclBmp	MltSclBmp
	Message settings	SMessage	Message
Equipment/quality prediction	Health monitor settings	SHealthMonitor	HealthMonitor
	Profile trend settings	SProfileTrend	ProfileTrend
	Section setting for prediction	SPrediction	Prediction
	Profile channel (Input channel)	SAlarmPrfIO	AlarmPrfIO
	Profile channel (Math channel)	SAlarmPrfMath	AlarmPrfMath
	Profile channel (Communication channel)	SAlarmPrfCom	AlarmPrfCom
PROFINET module	IP Address	SProfileNW	ProfileNW
	Data update interval		
	Maximum number of update cycles without data		
Elapsed time calculation setting	Elapsed time setting	SETCnt	ETCnt
	Elapsed time action setting	SETCntBasic	ETCntBasic


Blank

3.1 Configuring the Password Management Function

Configuration Flowchart

To use the password management function, you must configure the KDC server and GX/GP. First configure the KDC server and then the GX/GP.

To use the cross-realm authentication function, you must set up a parent-child trust.

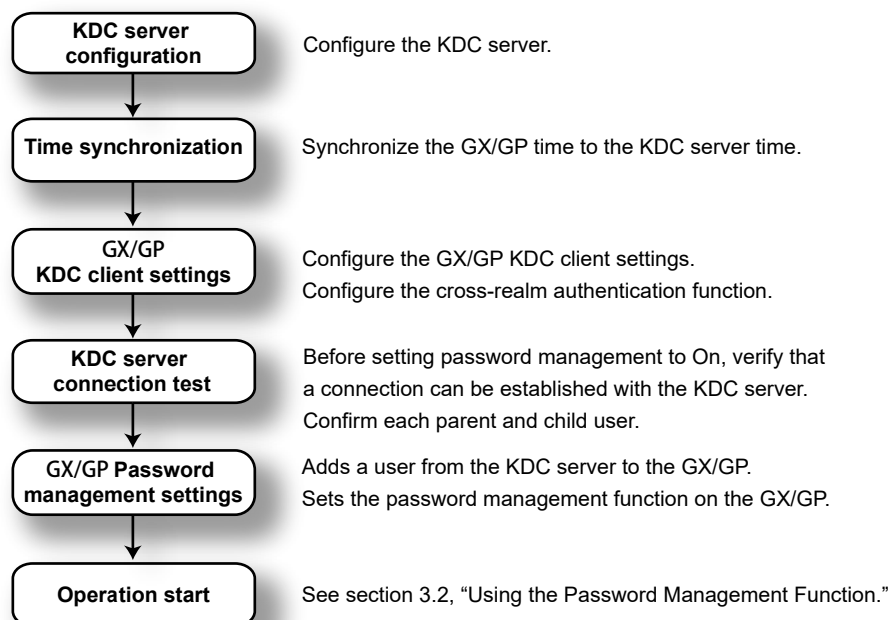

Terminology

- **KDC server (Key Distribution Center)**
Manages the GX/GP account (host account) and the user accounts for operating the GX/GP.
- **Encryption type**
The type of encryption applied to the data for authentication.
- **Authentication**
The task of verifying whether the user operating the GX/GP is valid.
- **Host account**
The GX/GP user account on the KDC server.
- **Host principal**
The name of the GX/GP on the application.
- **User account**
The user account for operating the GX/GP.
- **Mapping**
The association between the host principal and host account.
- **Realm name**
The domain name that the KDC server and GX/GP belong to.

3.1 Configuring the Password Management Function

3.1.1 GX/GP KDC Client Settings

You need to specify the following GX/GP KDC client settings.

- For information about the function, see section 1.4, "Password Management".

DNS settings

Configure the DNS settings if necessary.

- See section 1.21.1, "Setting Basic Communication Conditions," in the User's Manual.

SNTP client settings

For the password management function to work, the times on the KDC server and the GX/GP must be synchronized. Configure the SNTP client function so that synchronization is maintained using an SNTP server on the network.

- See section 1.21.5, "Setting the SNTP Client Function," in the User's Manual.

Note

- The password management function will not work if there is a difference of ± 5 minutes or more between the GX/GP and the KDC server.
- Set the DST (daylight saving time) and time zone correctly. For the setting procedure, see sections 2.1 and 2.2, respectively, in the User's Manual.

KDC client settings

Set the server information, the encryption type, etc. You can select the encryption type from AES128, AES256, and ARC4.

Path

GX/GP: **MENU** key > **Browse** tab > **Setting** > Setting menu **Communication (Ethernet) settings** > **KDC client settings**

Hardware configurator: **Communication (Ethernet) settings** > **KDC client settings**

Description

KDC connection Primary

Setup Item	Selectable Range or Options	Default Value
Server name	Character string (up to 64 characters, Aa#1)	—
Port number	Numeric value (1 to 65535)	88

Server name

Set the host name or IP address of the KDC server.

Port number

Set the port number.

KDC access point Secondary

Configure the secondary KDC server.

The settings are the same as those for "KDC connection Primary."

Certification key

Setup Item	Selectable Range or Options	Default Value
Host principal	Character string (up to 20 characters, Aa#1)	—
Realm name	Character string (up to 64 characters, Aa#1)	—
Password	Character string (up to 20 characters, Aa#1)	—
Encryption type	ARC4, AES128, AES256	ARC4

Host principal

Set the name of the GX/GP that will be registered as a user of the KDC server.

You cannot use these characters: @, /

Realm name

Set the realm name.

You cannot use these characters: @, /

Password

Set the password of the GX/GP that will be registered as a user of the KDC server.

Encryption type

Set the same encryption as the server.

Note

- Host principal is converted in the GX/GP as follows:
host/host principal@realm name
- ARC4 (ARCFOUR) is an encryption algorithm that is compatible with RC4.

Cross realm Authentication

Setup Item	Selectable Range or Options	Default Value
On/Off	Off, On	Off

On/Off

Set this to **On** to use the cross realm authentication function.

Trusted domain

Configure a KDC server with a parent-child trust.

Setup Item	Selectable Range or Options	Default Value
Realm name	Character string (up to 64 characters, Aa#1)	—
Server name	Character string (up to 64 characters, Aa#1)	—
Port number	Numeric value (1 to 65535)	88

Realm name

Set the realm name.

You cannot use these characters: @, /

Server name

Set the host name or IP address of the KDC server.

Port number

Set the port number.

3.1.2 GX/GP Password Management Settings

Password management, root user password

Enables the password management function. Set the password of the emergency root user.

► See section 2.2.1, "Configuring the Security Function, Logout, Password Management Function, Password policy, Etc."

User settings

Specify operation modes, user names, and restrictions for each second administrator and user.

Set a user name of a user that is managed on the KDC server.

If cross-realm authentication is **On**, also configure users managed by the trusted KDC server.

► See section 2.2.2, "Registering Users".

3.1.3 Testing the KDC Server Connection

You can perform a KDC server connection test.

If cross-realm authentication is **On**, you can confirm whether you can connect with the trusted KDC server.

You can use this test when password management is set to Off.

Before setting password management to On, perform a KDC server connection test.

Procedure

1. Press **MENU**.
The menu screen appears.
2. Tap the **Universal** tab and then **KDC test**.
The KDC test screen appears.
3. Enter the user name and password, and then tap **OK**.
The result of the connection test is displayed.

Operation complete

KDC Server Configuration Example

This section provides a KDC server configuration example. This example assumes that the KDC server is running on an English version of Windows Server 2016, and Active Directory is enabled.

If you are using the cross-realm authentication function, it is assumed that the KDC server is configured for a parent-child trust.

Overview

The steps necessary in Active Directory of Windows Server 2016 are creating a host account, changing the properties, mapping ¹ the host principal to the host account, and creating a keytab file (can be omitted). The following conditions will be used.


Item	Description
Domain name	The domain name that you are using
Realm	The realm name that you are using ²
Encryption type	AES256
Port number	88
Preauthentication	Enabled

Item	Registration Name	Password
Host name	gx	record-as1

- Mapping is necessary when performing a user registration of a non-Windows device in Active Directory.
- The realm name will be the domain name (uppercase letters).


Creating a GX/GP Host Account

1. Start Server Manager, and choose New and then User.

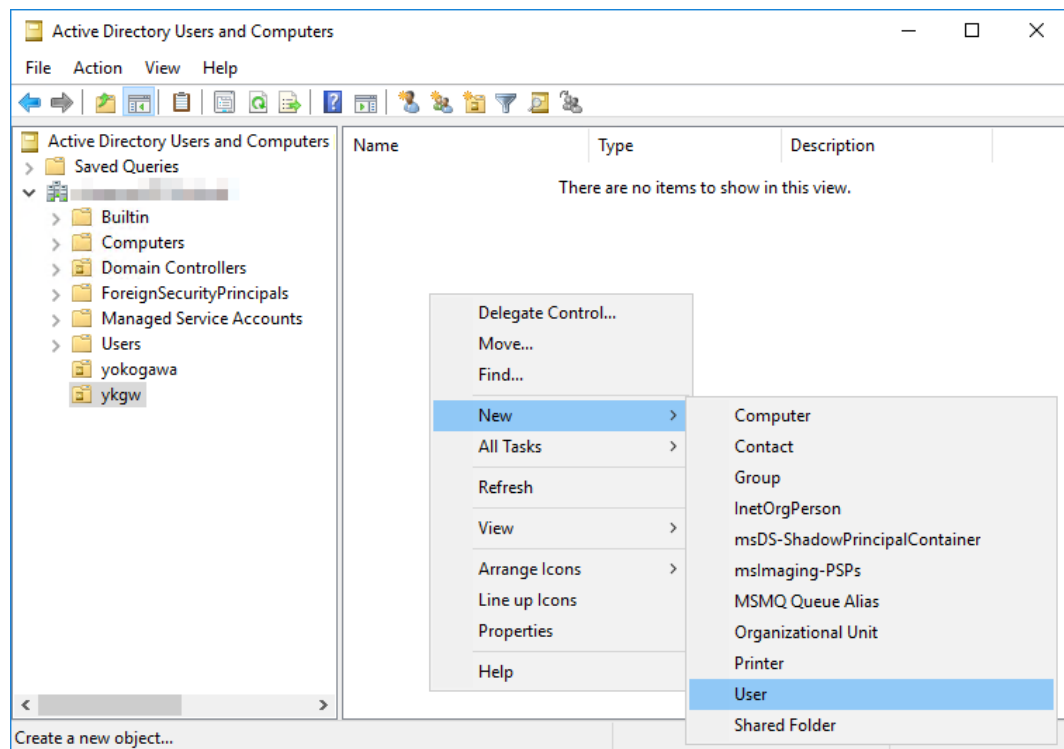


3.1 Configuring the Password Management Function

2. Type “gx” in the **First name**, **Full name**, and **User logon name** boxes.

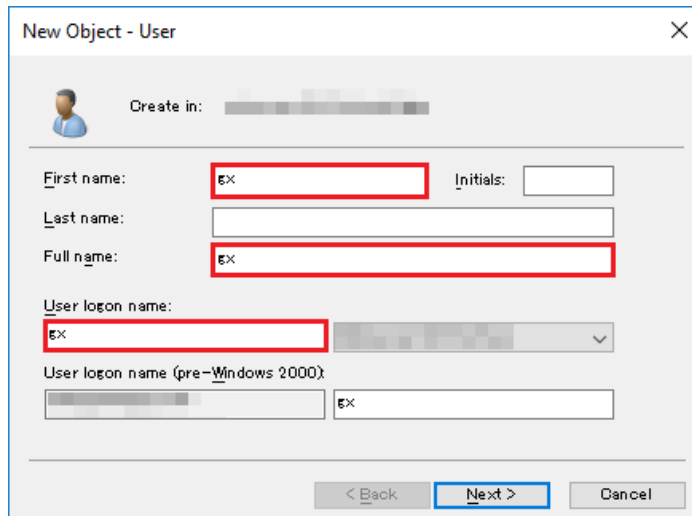


The screenshot shows the 'New Object - User' dialog box. The 'Create in:' field is at the top. Below it, the 'First name:' field contains 'gx', the 'Full name:' field contains 'gx', and the 'User logon name:' field contains 'gx'. The 'Initials:' field is empty. The 'User logon name (pre-Windows 2000):' field is also empty. At the bottom, there are buttons for '< Back', 'Next >', and 'Cancel'.

3. Type “record-as1” in the **Password** box. Select the **Password never expires** check box.

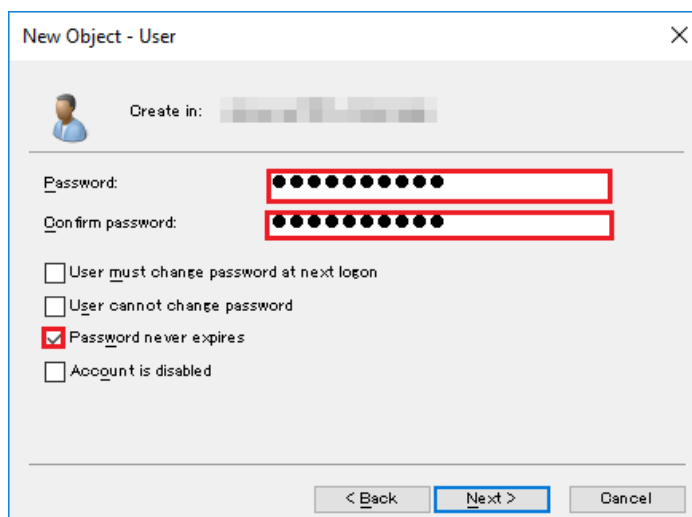

The screenshot shows the 'New Object - User' dialog box. The 'Password:' and 'Confirm password:' fields are highlighted with red boxes and contain masked text. The 'User must change password at next logon' checkbox is unchecked. The 'User cannot change password' checkbox is unchecked. The 'Password never expires' checkbox is checked. The 'Account is disabled' checkbox is unchecked. At the bottom, there are buttons for '< Back', 'Next >', and 'Cancel'.

4. Click **Finish**.

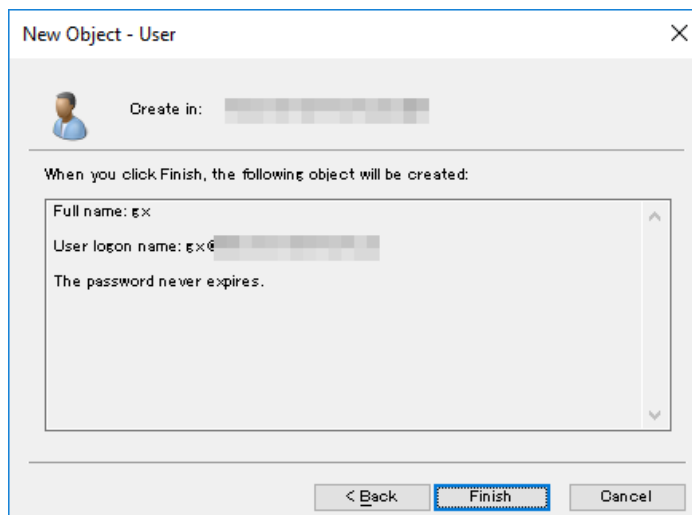

The screenshot shows the 'New Object - User' dialog box. The 'When you click Finish, the following object will be created:' section is expanded, showing the 'Full name: gx', 'User logon name: gx', and 'The password never expires.' information. At the bottom, the 'Finish' button is highlighted with a blue dashed border. There are also buttons for '< Back' and 'Cancel'.

Changing the Properties of the Created Host Account

Select the following check boxes. Clear all other check boxes.

This account supports Kerberos AES 256 bit encryption

Password never expires

- The Password never expires check box was already selected in step 3, so it is selected in this dialog box.
- Clearing all the encryption check boxes is equivalent to selecting RC4.

The screenshot shows the 'gx Properties' dialog box with the 'Account' tab selected. The 'User logon name' field contains 'host/gx' and the 'User logon name (pre-Windows 2000)' field contains 'WINSERVER2016#'. The 'Account options' section has three checkboxes: 'Use only Kerberos DES encryption types for this account' (unchecked), 'This account supports Kerberos AES 128 bit encryption' (unchecked), and 'This account supports Kerberos AES 256 bit encryption' (checked). The 'Account expires' section has two radio buttons: 'Never' (selected) and 'End of:' (unchecked). The 'OK' button is highlighted.

“host” is not included before mapping. It is included after a successful mapping.

Mapping the Host Principal to the Host Account

Open a Command Prompt window, and execute the following command.

Windows Server 2025 and later

```
ktpass -princ host/gx@ (the realm name that you are using) -pass record-as1 -mapuser gx
-ptype KRB5_NT_PRINCIPAL -crypto AES256-SHA1 -out C:/yokogawa/gx.keytab
```

A file named gx.keytab is created in the C:\yokogawa folder.

Windows Server 2022 and later

```
ktpass -princ host/gx@ (the realm name that you are using) -pass record-as1 -mapuser gx
-ptype KRB5_NT_PRINCIPAL -crypto All -out C:/yokogawa/gx.keytab
```

A file named gx.keytab is created in the C:\yokogawa folder.

```
Microsoft Windows [Version 10.0.26100.1742]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ktpass -princ host/gx@ -pass record-as1 -mapuser gx -ptype KRB5_NT_PRINCIPAL
-crypto AES256-SHA1 -out C:/yokogawa/gx.keytab
Targeting domain controller:
Using legacy password setting method
Successfully mapped host/gx to gx.
Key created.
Output keytab to C:/yokogawa/gx.keytab:
Keytab version: 0x502
keysize 79 host/gx@ ptype 1 (KRB5_NT_PRINCIPAL) vno 6 etype 0x12 (AES256-SHA1) keylength 32 (0xb1dd0
d166cd609de0ba689cfced688be45b62fe9556e197763a150bd04a8acbe)

C:\Users\Administrator>
```

3.1 Configuring the Password Management Function

Change User Account Properties

Change the properties of user accounts that are registered with the KDC server to match the host account.

If a user registered on the GX/GP is not registered on the KDC server, register them on the KDC server and then change the properties.

If cross-realm authentication is **On**, also do this for users on trusted KDC servers.

In this example, select the

This account supports Kerberos AES 256 bit encryption

check box. Be sure to set the same encryption as the GX/GP host account.

The screenshot shows the 'user1 Properties' dialog box with the 'Account' tab selected. The 'User logon name' is 'user1'. The 'Account options' section has the following settings:

- ☐ Use only Kerberos DES encryption types for this account
- ☐ This account supports Kerberos AES 128 bit encryption.
- ☒ This account supports Kerberos AES 256 bit encryption.
- ☐ Do not require Kerberos preauthentication

The 'Account expires' section has the following settings:

- ☒ Never
- ☐ End of: []

The 'OK' button is highlighted with a blue border.

About Mapping

Mapping is the association between the host principal and host account. In the example below, setup item “princ” is associated with setup item “mapuser.” This is done using the ktpass tool.

- Open a Command Prompt window, and enter the ktpass command.

ktpass Settings

Setup Item	Windows Server 2016, Windows Server 2019, Windows Server 2022, Windows Server 2025	Example
princ	host/host principal@realm name	host/gx@EXAMPLE.COM
pass	Password	record-as1
crypto	ARC4	RC4-HMAC-NT
	AES128	AES128-SHA1
	AES256	AES256-SHA1
mapuser	Host account	gx
ptype	KRB5_NT_PRINCIPAL	KRB5_NT_PRINCIPAL
out	Output folder name\file name.keytab	c:\temp\gx.keytab

Mapping Example

```
ktpass -princ host/gx@EXAMPLE.COM -pass record-as1 -crypto
AES256-SHA1 -mapuser gx -ptype KRB5_NT_PRINCIPAL -out c:\temp\gx.keytab
```

Note

- Run the ktpass tool after installing the support tool provided by the server.
- Be sure to use uppercase letters for the realm name.
- You can set crypto to All.
Selecting ALL:
On Windows Server 2025 and later, selecting All results in an error. Select a specific encryption method.
- Set the same encryption for the user account and host account.
- When using the cross-realm authentication function, use the same encryption method for the parent and child KDC servers.
- ARC4 (ARCFOUR) is an encryption algorithm that is compatible with RC4.
- out can be omitted.
- With Windows Server 2025 and later, you cannot connect using the ARC4 encryption method. Select AES128 or AES256 for the encryption method.

GX/GP Configuration

Configure the GX/GP as follows. For the configuration procedure, see section 3.1.1, “GX/GP KDC Client Settings”

Item	Description
Host principal	gx
Realm name	Set the realm name.
Password	record-as1
Encryption type	AES256
KDC server	Set the KDC server name.
Port number	88

Note

The realm name will be the domain name in uppercase letters.

3.2 Using the Password Management Function

3.2.1 Logging In and Out

Logging In

Log in by entering the user name and password.

Procedure

1. Press **MENU**.
The login screen appears.
2. Enter the user name and password, and then tap **OK**.
You will be logged in.

Operation complete

Note

Even if you enter a password, you may not be able to log in because of a network error or a problem with the settings. An error message will appear if this is the case. Perform the operation described below to log in as the root user.

Set the user name to “root” and the password to the root password, and tap **OK**.

You will be logged in as the root user. The default password for the root user is root123.

The root user is valid only when no users can be authenticated such as when the connection to the KDC server is broken.

Logging Out

- For operating instructions, section 2.3.

3.2.2 Signing In

When you sign in, you will be prompted for a user name and password.

- For operating instructions, section 2.4.

3.2.3 Dealing with the “Invalid User” Status

If a user enters the wrong password for the specified number of times (Password retry), that user is invalidated. The user-locked icon appears in the status area. The user can log in again after a system administrator or second administrator with privileges performs the locked-ACK operation (and the user-locked icon disappears).

- To clear the user locked icon, see section 2.3.

Note

The “Invalid user” status is only applicable on the GX/GP being operated. The user account on the server is not invalidated.

3.2.4 Password Expiration

Manage passwords and their expiration dates on the KDC server.

Note

When preauthentication is not being used, users may be able to log in to the GX/GP even after the password has expired.

3.3 Error Messages and Corrective Actions

Errors That Occur during Authentication

Code	Message	Description and Corrective Action
E004	Incorrect input character string.	Enter a proper character string.
E251	Invalid user name or password.	Enter the correct name or password.
E252	The login password is incorrect.	Check the password. If the password is lost, the password must be initialized by an administrator. Check the password. If the password is lost, the password must be initialized by an administrator or second administrator with privileges.
E261	Wrong user ID or password.	Enter the correct user ID and password.
E265	Login inputs are incorrect.	Enter the correct login information.
E272	This password became invalid.	On the GX/GP, because the wrong password has been entered for more than the permissible number of times, this user is invalid.
E273	Invalid user.	The account has been invalidated on the server. The account has been invalidated on the GX/GP.
E277	Does not meet password policy requirements.	This is displayed when changing the password. Enter a password that satisfies the password policy.
E278	Password used previously. Use a different password.	Change to a password that has not been saved as password history. (The number of passwords that can be saved as password history depends on the corresponding setting.)
E760	Invalid KDC client configuration.	Set the host principal or realm name.
E761	Cannot find KDC server.	The KDC server cannot be found in the same domain.
E762	KDC server connection error.	An error occurred while the GX/GP was connecting to the KDC server. Make sure that the network connection is not broken.
E763	Not supported by this machine.	Not supported by the GX/GP.
E764	Preauthentication failed.	Enter the correct password. Also, make sure that the times on the GX/GP and the server match.
E765	The encryption type is not supported by this machine.	The GX/GP does not support the encryption type, or the encryption type settings on the GX/GP and the server are different. Use the same encryption method on the GX/GP and the server.
E766	Failed to receive authentication from KDC server.	Check the GX/GP and server settings. Also, make sure that the times on the GX/GP and the server match.
E767	Change the password.	Change the password. Change the password of the user account that is registered on the server.
E768	The time difference with the KDC server exceeds the limit.	There is a time difference of 5 minutes or more between the GX/GP and the server. Synchronize the GX/GP time to the time on the server.
E770	The host principal is not registered.	The host account is not registered on the server.
E771	The host principal is invalid.	Check the host account that is registered on the server.
E772	The host password is incorrect.	Make sure that the GX/GP authentication-key password and the server's host-account password match.
E773	Preauthentication failed.	An internal error occurred during preauthentication. Disable the server's preauthentication function. The receivable token size is exceeded. The maximum token size that SMARTDAC+ can receive is 64 KB. Set the server's maximum token size to 64 KB or less, or disable the server's preauthentication function.
E774	The realm is incorrect.	Make sure that the realm name setting on the GX/GP is correct.
E785	Cannot find KDC server (Cross Realm).	The KDC server cannot be found in the same domain.
E786	KDC server connection error. (Cross Realm)	An error occurred while the GX/GP was connecting to the KDC server. Make sure that the network connection is not broken.
E787	Not supported by this machine. (Cross Realm)	Not supported by the GX/GP.
E788	Preauthentication failed. (Cross Realm)	Enter the correct password. Also, make sure that the times on the GX/GP and the server match.
E789	The encryption type is not supported by this machine. (Cross Realm)	The GX/GP does not support the encryption type, or the encryption type settings on the GX/GP and the server are different. Use the same encryption method on the GX/GP and the server.
E790	Failed to receive authentication from KDC server. (Cross Realm)	Check the GX/GP and server settings. Also, make sure that the times on the GX/GP and the server match.
E791	Change the password. (Cross Realm)	Change the password. Change the password of the user account that is registered on the server.
E792	The time difference with the KDC server exceeds the limit. (Cross Realm)	There is a time difference of 5 minutes or more between the GX/GP and the server. Synchronize the GX/GP time to the time on the server.
E794	The host principal is not registered. (Cross Realm)	The host account is not registered on the server.

Continued on the next page

3.3 Error Messages and Corrective Actions

Code	Message	Description and Corrective Action
E795	The host principal is invalid (Cross Realm).	Check the host account that is registered on the server.
E796	The host password is incorrect (Cross Realm).	Make sure that the GX/GP authentication-key password and the server's host-account password match.
E797	Preauthentication failed (Cross Realm).	An internal error occurred during preauthentication. Disable the server's preauthentication function. The receivable token size is exceeded. The maximum token size that SMARTDAC+ can receive is 64 KB. Set the server's maximum token size to 64 KB or less, or disable the server's preauthentication function.
E798	The realm is incorrect (Cross Realm).	Make sure that the realm name setting on the GX/GP is correct.

Errors That Occur during Communication

Code	Message	Description and Corrective Action
E651	IP address is not set or ethernet function is not available.	The GX/GP IP address not set. Check the IP address.
E657	Ethernet cable is not connected.	Check the cable connection.
E761	Cannot find KDC server.	The KDC server cannot be found in the same domain.
E762	KDC server connection error.	An error occurred while the GX/GP was connecting to the KDC server. Make sure that the network connection is not broken.
E785	Cannot find KDC server (Cross Realm).	The KDC server cannot be found in the same domain.
E786	KDC server connection error (Cross Realm).	An error occurred while the GX/GP was connecting to the KDC server. Make sure that the network connection is not broken.

Other Messages

Code	Message	Description and Corrective Action
E509	Unknown file type.	This is displayed when the format of a file specified for displaying the setting differences is not normal.
E520	System configuration is different.	This is displayed when the system configuration of the two setting files specified for displaying the differences is different and cannot be compared.
E521	Failed to save setting file automatically.	Automatic saving of the setting file failed when the recording was stopped. Check whether the external storage medium is inserted correctly.
E836	KDC test connection succeeded.	—
E837	Login may be impossible in incorrect KDC client settings.	—
M885	Password is about to expire. Please change the password.	This is displayed immediately after login according to the "advance notice of expiry date" setting.

Appendix 1 Event Log Contents

Event Log

Operation	Display	Details
Error log		
Error	Error###	Error code Message ###: Error code
A/D calibration operation		
A/D calibration	A/D CalExec	Unit/slot
Login operations		
Power off	PowerOff	
Power on	PowerOn	
Login	Login	
Logout	Logout	
User invalidation	UserLocked	User number
Control operations		
Mode change	ModeChg	Mode
Time change	TimeChg	
New time	NewTime	
Time adjustment start	TRevStart	Difference
Time adjustment stop	TRevEnd	
SNTP time change	SNTPtimeset	
Daylight saving time start	DSTStart	
Daylight saving time end	DSTEnd	
Password change	ChgPasswd	User number
Unauthorized access acknowledge	UserLockedACK	
Alarm acknowledge	AlarmACK	Channel number Alarm level
Message writing ¹	Message###	Message number (excluding freehand message) Message type Data timestamp (for additions) ###: Number (normal) F#: Number (free) Hnd: (freehand)
Recording start ¹	MemStart	
Recording stop ¹	MemStop	
Manual sample	ManualSample	
Math start	MathStart	
Math stop	MathStop	
Math reset ¹	MathRST	
Computation data dropout acknowledgment	MathACK	
Mail start	MailStart	
Mail stop	MailStop	
Modbus manual recovery	RefModbus	Type
Display data save ¹	DispSave	
Event data save ¹	EventSave	
Manual data save	ManualSave	Data type
SaveManual	SaveManual	
Snapshot	Snapshot	
Batch number setting ¹	BatNoSet	
Lot number setting ¹	LotNoSet	
Batch text field setting ¹	TextFieldSet	Text field number
Multi batch setting change	Multi Batch	On/Off atch operation qty
Display update rate change	ChgRate	Trend interval
Timer reset	TimerRST	Timer number
Match time timer reset	MTimerRST	Timer number
Communication channel writing (GX/ GP operation only)	WriteComm	Channel number/value Write type
DO channel writing (for manual operation)	WriteDO	Channel number/Status
SW writing (for manual operation) (GX/GP, communication, serial)	WriteSW	Internal switch number/Status
Report save	SaveReport	Report format/report type

Continued on next page

Appendix 1 Event Log Contents

Operation	Display (English)	Details
Scale image save ¹	SaveScale	Group number
Custom display save	SaveCustom	Display number
Parameter save	SaveParameter	
Certificate save	SaveCert	
All settings save	SaveAll	
Report load	LoadReport	Report format/report type
Scale image load ¹	LoadScale	Group number
Custom display load	LoadCustom	Display number
Parameter load	LoadParameter	Setting type
Certificate load	LoadCert	
All settings load	LoadAll	
Key creation	GeneKey#####	#####: Start: Start creation Cancel: Cancel creation Done: Creation completed
Installation of certificate	InstallServCert	Certification type/purpose
Certificate creation	CreateCert	
Touch screen adjustment	ExecTouchCal	
initialization	Initialize	Initialize type
Sign in	Sign In	Sign in level File name
Reminder expiration	Expiration####	Schedule number Title ####: Schedule number
Manually recover SLMP communication	RefSLMP	
AO Re-Trans operation	AO re-trans	Operation type Channel No. (for individual operation) state
AO manual output operation	AOManual	Channel No./value
Individual initialization	Indv Init	Initialize type (display group/recording channel)
Save predictive detection model	SavePredictModel	File name
Load predictive detection model	LoadPredictModel	File name
Waiting load predictive detection model	WaitPredictModel	File name
Save profile trend	SaveProfile	File name
Load profile trend	LoadProfile	File name
Predictive detection section start	SetPredictStart	
Predictive detection section stop	SetPredictStop	
Profile trend hold on	ProfileHoldOn	
Profile trend hold off	ProfileHoldOff	
Elapsed time start	ETCNTStart##	##: Elapsed time number
Elapsed time stop	ETCNTStop##	
Elapsed time reset	ETCNTReset##	
Individual math reset	MathReset####	####: Math channel number
Setting changes while recording is in progress or is stopped		
Schedule setting change	SetSchedule#####	Schedule number On/Off (before and after change) Due date (before and after change) Daily reminder (before and after change) Re-notification cycle (before and after change) Title (after change) Notification contents (Changed notification content number) Buzzer (before and after change) CC Setting ####: Schedule number
Setting comment	SetComment	Comment string
Setting changes while recording is stopped		

Continued on next page

Operation	Display (English)	Details
Setting change	SetParameter	Setting change type Setting file name
Setting difference	SetDiff	Setting file name before setting change Setting file name after setting change
Setting changes during recording		
Alarm setting change	SetAlarm	Channel number /Alarm level On/Off (before and after change) Type (before and after change) Alarm value (before and after change) Hysteresis (before and after change) Logging (before and after change) Output type (before and after change) Output destination (before and after change)
Alarm delay setting change	SetAlmDelay	Channel number Delay hour (before and after change) Delay minute (before and after change) Delay second (before and after change)
Calibration correction/set point change	CCModePntSet	Channel number Mode (before and after change) Number of set points (before and after change)
Calibration correction value change	SetCCValue	Channel number Set number (1 to 12) Calibration correction value (before and after change) Output calibration value (before and after change)
Save directory change	SetDirectory	Folder name (before and after change)
Send address change	SendAddressSet	Recipient number (1/2)
Sender address change	SetSender	
Setting subject change	SetSubject	
Login change	LoginSet	User number
Correction factor setting change	SetCFactor	Channel number Set number (1 to 12) Uncorrected value (before and after change) Inst correction factor (before and after change) Sensor correction factor (before and after change)
Calibration correction/set point change (for communication channels)		Communication channel number Mode (before and after change) Number of set points (before and after change)
Calibration correction value change (for communication channels)		Communication channel number Set number (1 to 12) Calibration correction value (before and after change) Output calibration value (before and after change)
Correction factor setting change (for communication channels)		Communication channel number Set number (1 to 12) Uncorrected value (before and after change) Inst correction factor (before and after change) Sensor correction factor (before and after change)
Section setting for prediction change	SetSignSection	Trigger (before and after change) Reference channel (before and after change) Section start Threshold (before and after change) Condition (before and after change) Section stop Threshold (before and after change) Condition (before and after change) Starting condition (Repeat) (before and after change) Number of data (Repeat) (before and after change)
Module		
Module update	UpdateModule	Unit/slot
Module disconnection	RemoveModule	Unit/slot Module name Serial number Version number
Modules installed	AttachModule	Unit/slot Module name Serial number Version number

Continued on next page

Appendix 1 Event Log Contents

Operation	Display (English)	Details
Module information	InfoModule	Unit Slot Calibration date Calibration user
Module activation	ApplyModule	
Reconfiguration	ConfigModule	
Updating		
Updating of other settings	Update####	Update type ####: Web: Web application

1 Batch group numbers are displayed in the Batch column when the multi batch function (/BT option) is enabled.

Operation property

Factor	Description
OPERATE	GX/GP key operation, touch operation (including bar-code)
COMMU	Operation via communication (including Web)
SERIAL	Operation via serial communication
EXTERNAL	Operation from Modbus and the like
PC	Only when the user accessing from the PC is invalidated
REMOTE	Remote control operation
ACTION	Event action operation
SYSTEM	Auto operation by the GX/GP

User Name

Factor	User Name
OPERATE	User logged in from the GX/GP panel
COMMU	User logged in via communication
SERIAL	User logged in via serial interface
EXTERNAL	No user
PC	User logged in via PC
REMOTE	User logged in from the GX/GP panel
ACTION	No user
SYSTEM	No user